

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZdalaMit](#) /

› [ZdalaMit LC-RCRUS-20 Replacement Remote Control User Manual for Sharp Roku TVs](#)

## ZdalaMit LC-RCRUS-20

# ZdalaMit LC-RCRUS-20 Replacement Remote Control User Manual

For Sharp Roku TV Models

## INTRODUCTION

---

This manual provides instructions for the ZdalaMit LC-RCRUS-20 replacement remote control, designed for use with specific Sharp Roku TV models. This remote offers a straightforward solution for controlling your television without the need for complex programming or pairing.



Image: Front view of the ZdalaMit LC-RCRUS-20 replacement remote control, showing all buttons including power, navigation, volume, and streaming service shortcuts.

## PACKAGE CONTENTS

- 1 x ZdalaMit LC-RCRUS-20 Replacement Remote Control

*Note: AAA batteries are not included and must be purchased separately.*

## COMPATIBILITY

The ZdalaMit LC-RCRUS-20 replacement remote control is compatible with the following Sharp Roku TV models:

- LC-24LB601U
- LC-32LB601U
- LC-40LB601U
- LC-43LB601U
- LC-50LB601U

### **Important Compatibility Notes:**

- This remote control **DOES NOT WORK** with Roku players.
- This remote control **DOES NOT WORK** with Roku boxes.
- This remote control **DOES NOT WORK** with Roku sticks.
- This remote control does not feature an earphone jack.
- This remote control does not have a pairing button as it does not require pairing.

## SETUP

---

Setting up your ZdalaMit LC-RCRUS-20 remote control is quick and easy. No programming or pairing is required.

1. **Open the Battery Compartment:** Locate the battery compartment on the back of the remote control. Slide the cover downwards or press the latch to open it.
2. **Insert Batteries:** Insert two (2) 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
3. **Close the Battery Compartment:** Replace the battery compartment cover, ensuring it clicks securely into place.
4. **Ready for Use:** The remote control is now ready to operate your compatible Sharp Roku TV.





Image: Angled view of the ZdalaMit LC-RCRUS-20 remote control, highlighting its ergonomic design and button layout.

## OPERATING INSTRUCTIONS

---

Point the remote control directly towards your Sharp Roku TV and press the desired buttons to control its functions.

### Button Functions

Button	Function
Power (Red Circle)	Turns the TV on or off.
Back (Left Arrow)	Returns to the previous screen or menu.
Home (House Icon)	Navigates to the Roku Home screen.
Directional Pad (Up, Down, Left, Right)	Navigates through menus and content.
OK	Selects an item or confirms an action.

<b>Button</b>	<b>Function</b>
<b>Instant Replay (Curved Arrow)</b>	Jumps back a few seconds during video playback.
<b>Sleep Timer (Moon Icon)</b>	Activates or adjusts the TV's sleep timer.
<b>Options (Asterisk *)</b>	Accesses additional options or settings for the current content.
<b>Rewind (Double Left Arrow)</b>	Rewinds video playback.
<b>Play/Pause (Vertical Bars)</b>	Plays or pauses video content.
<b>Fast Forward (Double Right Arrow)</b>	Fast forwards video playback.
<b>Volume Up/Down</b>	Adjusts the TV volume.
<b>Mute</b>	Mutes or unmutes the TV audio.
<b>Netflix, Hulu, Sling, NOW</b>	Direct access buttons to launch specified streaming applications.



Image: Side angled view of the ZdalaMit LC-RCRUS-20 remote control, showing its slim profile and button placement.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's performance diminishes or it stops responding. Always replace both batteries at the same time with new ones.

- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.
- **Avoid Damage:** Do not drop the remote control or expose it to extreme temperatures, moisture, or direct sunlight.

## TROUBLESHOOTING

---

- **Remote Not Responding:**
  - Ensure fresh AAA batteries are correctly installed.
  - Verify there are no obstructions between the remote and the TV's infrared sensor.
  - Point the remote directly at the TV.
- **Buttons Unresponsive or Delayed:**
  - Replace batteries with new ones.
  - Clean the remote's surface and buttons to ensure no debris is interfering.
- **Unexpected Button Behavior (e.g., skipping selections, double entry):**
  - Ensure batteries are fresh and correctly inserted.
  - If the issue persists, contact customer support for further assistance.

## SPECIFICATIONS

---

- **Model:** LC-RCRUS-20
- **Brand:** ZdalaMit
- **Compatible Devices:** Sharp Roku Televisions
- **Power Supply:** 2 x 1.5V AAA Alkaline Batteries (not included)
- **Product Dimensions:** Approximately 6 x 1.5 x 0.6 inches (15.24 x 3.81 x 1.52 cm)
- **Item Weight:** Approximately 1.41 ounces (40 grams)
- **Color:** Black
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1 (Television)

## WARRANTY AND SUPPORT

---

For any questions, concerns, or issues regarding your ZdalaMit LC-RCRUS-20 replacement remote control, please contact the seller or manufacturer directly through your purchase platform. While specific warranty details are not provided in this manual, customer satisfaction is important.

Please refer to your purchase documentation or the product listing for information on return policies or warranty coverage.

