

BLACK+DECKER TRO35RDG-B5

BLACK+DECKER 1500W 35L Toaster Oven with Rotisserie Instruction Manual

Model: TRO35RDG-B5

[Important
Safeguards](#)

[Product
Overview](#)

[Setup](#)

[Operating
Instructions](#)

[Cleaning & Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &
Support](#)

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.

- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

PRODUCT OVERVIEW

Familiarize yourself with the components of your BLACK+DECKER 35L Toaster Oven.



Figure 1: Front view of the BLACK+DECKER 35L Toaster Oven, showing the main unit with controls on the right and interior rack.

Main Components:

- **Temperature Control Knob:** Adjusts oven temperature from 90°C to 230°C.
- **Function Selector Knob:** Selects cooking mode (Off, Upper Heating, Lower Heating, Both Heating Elements, Convection, Rotisserie).
- **Timer Knob:** Sets cooking time up to 60 minutes or to "Stay On" for continuous operation.
- **Power Indicator Light:** Illuminates when the oven is operating.
- **Double Glass Door:** Provides heat insulation and safety.
- **Anti-Rust Galvanized Stainless Steel Interior:** Durable and easy to clean.

Included Accessories:

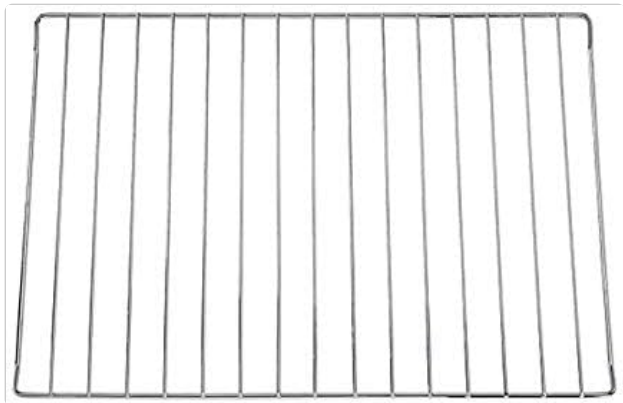


Figure 2: Wire Rack for baking and broiling.



Figure 3: Non-stick Food Tray for baking and collecting drips.



Figure 4: Food Tray Handle for safe removal of hot trays.

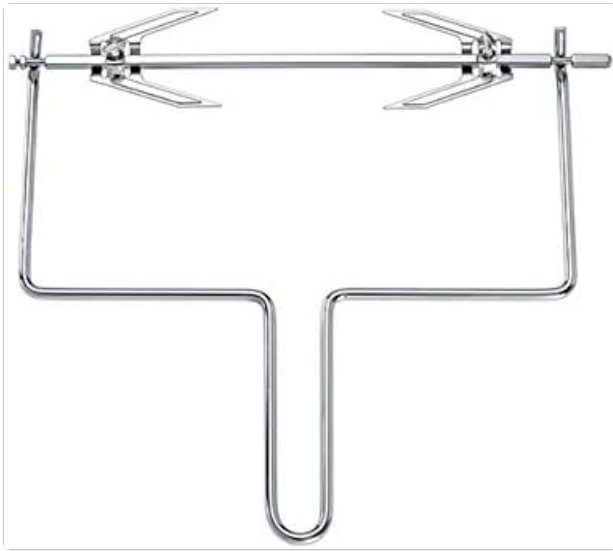


Figure 5: Rotisserie Spit and Handle for roasting poultry or meat.

SETUP

1. **Unpacking:** Carefully remove the toaster oven and all accessories from the packaging. Remove any packing materials, stickers, or labels.
2. **Placement:** Place the oven on a stable, level, heat-resistant surface. Ensure there is at least 10-15 cm (4-6 inches) of clearance on all sides and above the oven for proper ventilation. Do not place it near flammable materials.
3. **Initial Cleaning:** Wipe the exterior with a damp cloth. Wash the wire rack, food tray, and rotisserie accessories in warm, soapy water. Rinse and dry thoroughly.
4. **First Use (Burn-off):** Before first use, operate the oven empty for approximately 15 minutes at 230°C (450°F) on the "Both Heating Elements" function. This will burn off any manufacturing oils and eliminate odors. A slight smoke or odor is normal during this process. Ensure the area is well-ventilated.
5. **Power Connection:** Plug the power cord into a standard 220-240V AC electrical outlet.

OPERATING INSTRUCTIONS

This section details how to use the various functions of your toaster oven.



Figure 6: Close-up of the control panel with Temperature, Selector, and Timer knobs.

General Operation Steps:

1. Place food on the appropriate accessory (wire rack, food tray, or rotisserie spit).
2. Insert the accessory into the desired rack position inside the oven.
3. Close the oven door.
4. Turn the **Temperature Control Knob** to the desired temperature.
5. Turn the **Function Selector Knob** to the desired cooking mode (e.g., Bake, Broil, Toast, Convection, Rotisserie).
6. Turn the **Timer Knob** to the desired cooking time. The power indicator light will illuminate.
7. When the cooking time expires, a bell will sound, and the oven will turn off. To stop cooking manually, turn the Timer Knob to "OFF".
8. Carefully remove cooked food using oven mitts and the food tray handle or rotisserie handle.

Cooking Functions:

1. Toasting

- Place bread slices directly on the wire rack.
- Set the **Temperature Control Knob** to 230°C.
- Set the **Function Selector Knob** to the "Both Heating Elements" or "Upper Heating" setting for even toasting.
- Set the **Timer Knob** to the desired toast shade (e.g., 3-5 minutes).

2. Baking

- Place food in an oven-safe dish on the food tray or wire rack.
- Set the **Temperature Control Knob** to the recipe's recommended temperature (e.g., 180°C for cakes).
- Set the **Function Selector Knob** to the "Both Heating Elements" setting.

- Set the **Timer Knob** for the required baking time.

3. Broiling (Grilling)

- Place food directly on the wire rack with the food tray underneath to catch drips. Position food closer to the upper heating elements for best results.
- Set the **Temperature Control Knob** to 230°C.
- Set the **Function Selector Knob** to the "Upper Heating" setting.
- Set the **Timer Knob** for the desired broiling time. Monitor food closely to prevent burning.

4. Convection Function

- The convection fan circulates hot air for faster and more even cooking.
- Set the **Temperature Control Knob** and **Timer Knob** as per recipe, typically reducing temperature by 10-15°C and cooking time by 20-30% compared to conventional baking.
- Set the **Function Selector Knob** to the "Convection" setting (usually indicated by a fan icon).

5. Rotisserie Function

- Securely attach poultry or meat to the rotisserie spit using the forks. Ensure the food is balanced.
- Insert the pointed end of the rotisserie spit into the drive socket on the right side of the oven interior. Rest the square end on the support on the left side.
- Place the food tray on the bottom rack to catch drippings.
- Set the **Temperature Control Knob** to the desired roasting temperature (e.g., 180-200°C).
- Set the **Function Selector Knob** to the "Rotisserie" setting (usually indicated by a rotating spit icon).
- Set the **Timer Knob** for the required roasting time.
- Use the rotisserie handle to safely remove the hot spit and food after cooking.



Figure 7: Toaster oven demonstrating the rotisserie function with a chicken.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. **Always unplug the oven** and allow it to cool completely before cleaning.
2. **Exterior:** Wipe the exterior surfaces with a damp cloth and mild detergent. Do not use abrasive cleaners or metal scouring pads.
3. **Interior:** Wipe the interior walls with a damp cloth. For stubborn stains, use a non-abrasive cleaner. Avoid spraying cleaners directly onto the heating elements.
4. **Crumb Tray:** The crumb tray should be cleaned regularly to prevent grease buildup and potential fire hazards. Slide out the crumb tray from the bottom of the oven, discard crumbs, and wash in warm, soapy water. Rinse and dry thoroughly before replacing.
5. **Accessories:** Wash the wire rack, food tray, and rotisserie accessories in warm, soapy water. Rinse and dry thoroughly. These are generally not dishwasher safe unless specified.
6. **Double Glass Door:** Clean the glass door with a glass cleaner or a damp cloth. Avoid harsh chemicals that could damage the glass or seals.



Figure 8: Toaster oven with its double glass door open, showing the interior for cleaning access.

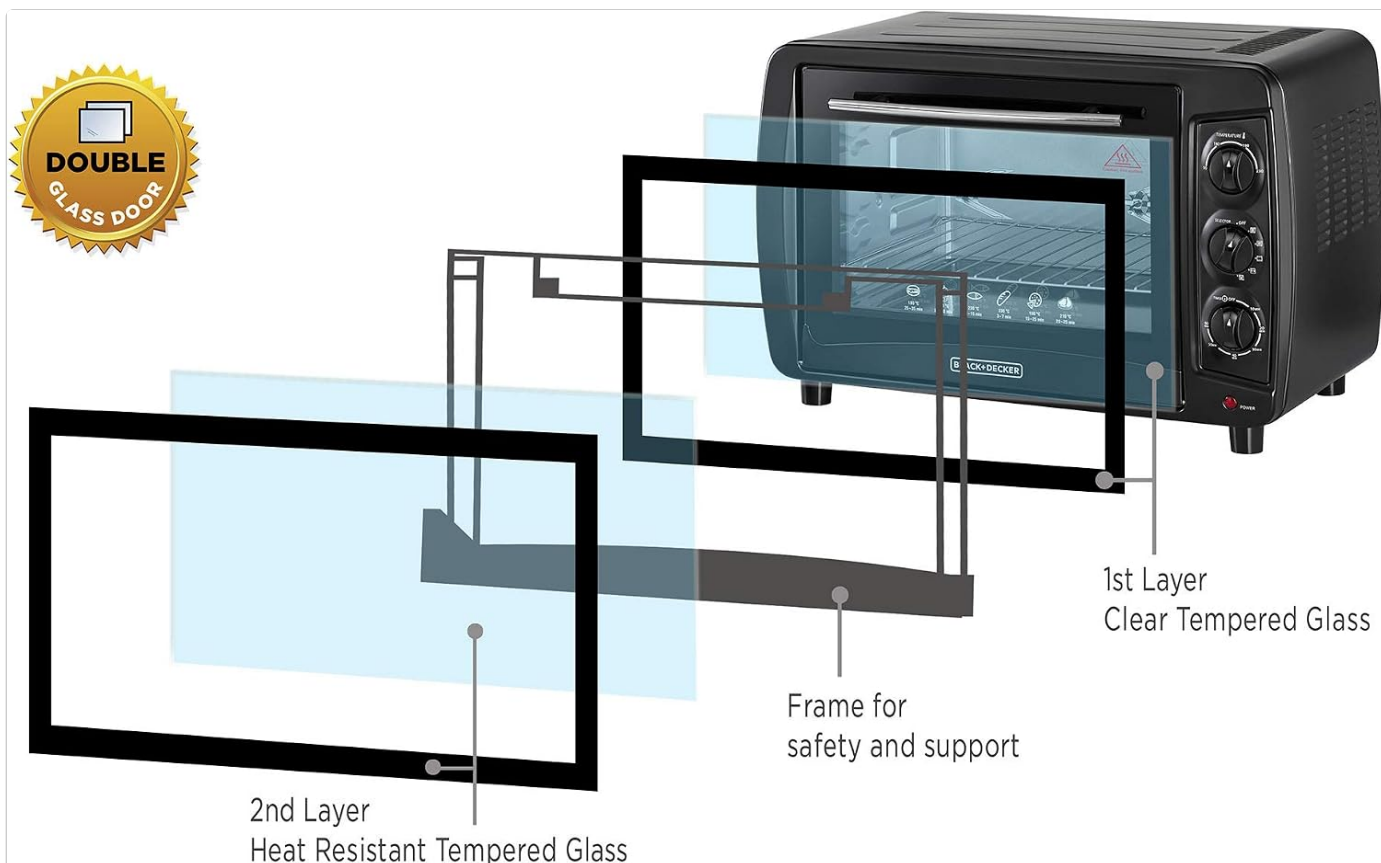


Figure 9: Diagram illustrating the double glass door construction for enhanced heat insulation and safety.

TROUBLESHOOTING

Before contacting customer service, review these common issues and solutions.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet not working; timer not set.	Ensure the oven is securely plugged into a working outlet. Turn the Timer Knob past 10 minutes to activate.
Food is not cooking evenly.	Incorrect rack position; uneven food placement; door opened too frequently.	Adjust rack position for optimal heat distribution. Arrange food evenly. Avoid opening the door unnecessarily. Consider using the convection function.
Excessive smoke or odor during operation.	Food drippings on heating elements; residue from initial use; crumb tray not cleaned.	This is normal during first use. For subsequent uses, ensure the crumb tray is clean and food drippings are minimized. Clean the interior thoroughly.
Rotisserie spit is not rotating.	Food too heavy or unbalanced; spit not correctly seated; function selector not on rotisserie mode.	Ensure food is balanced and within weight limits. Verify the spit is correctly inserted into the drive socket and support. Select the rotisserie function.

SPECIFICATIONS

- **Brand:** BLACK+DECKER
- **Model Number:** TRO35RDG-B5
- **Capacity:** 35 Liters
- **Power / Wattage:** 1500 Watts

- **Voltage:** 220-240V
- **Frequency:** 50-60Hz
- **Temperature Range:** 90°C - 230°C
- **Timer:** Up to 60 minutes with "Stay On" function
- **Material:** Metal (Anti-Rust Galvanized Stainless Steel interior)
- **Color:** Black
- **Product Dimensions:** 35D x 49.5W x 36.5H cm (approximately)
- **Item Weight:** 9.32 Kilograms
- **Special Features:** Non-Stick Coating (on tray), Temperature Control, Timer, Double Glass Door, Convection Function, Rotisserie Function, Double Grill Function.





Figure 10: Diagram showing the approximate dimensions of the BLACK+DECKER 35L Toaster Oven.

WARRANTY AND SUPPORT

BLACK+DECKER products are manufactured to high-quality standards. For warranty information, service, or technical support, please refer to the warranty card included with your purchase or contact your local BLACK+DECKER service center.

For installation support in Saudi Arabia, you may contact the following numbers:

- Riyadh: +966-11-4094006 Ext – 113
- Jeddah: +966-12-6577714
- Dammam: +966-13-8343691
- Qassim: +966 581044198
- Abha: +966 593322785

You can also visit the official BLACK+DECKER store for more information: [BLACK+DECKER Store on Amazon.sa](#)