



Manuals.plus /

› **IKEA** /

› IKEA Risatorp Basket User Manual (25x26x18 cm)

IKEA Risatorp Basket

IKEA Risatorp Basket User Manual

INTRODUCTION

The IKEA Risatorp Basket is a versatile storage solution designed for easy access and organization of various items, particularly fruits and vegetables. Its design allows for both practical use and decorative display within your home.

PRODUCT FEATURES

- **Easy Access:** The open mesh design provides a clear overview of contents.
- **Versatile Use:** Suitable for storing fruits, vegetables, or other household items.
- **Portable Design:** Equipped with a sturdy birch handle for easy transport.
- **Food Contact Approved:** Safe for direct contact with food items.
- **Durable Construction:** Made from alloy steel for longevity.

SETUP AND PLACEMENT

The IKEA Risatorp Basket requires no assembly. Simply unpackage the basket and place it in your desired location. Consider placing it on kitchen counters, shelves, or in pantries for optimal organization.



Image: A blue IKEA Risatorp basket, showcasing its mesh design and birch handle.

USAGE INSTRUCTIONS

The Risatorp basket is designed for general storage. To use:

1. Place items such as fruits, vegetables, or small household goods inside the basket.
2. Utilize the birch handle to easily carry the basket for tasks like grocery shopping or collecting garden produce.
3. Position the basket in a location where its contents are easily accessible and visible.



Image: Multiple blue Risatorp baskets arranged on a wooden shelf, demonstrating their use for organized storage.

CARE AND MAINTENANCE

- **Cleaning:** Wipe clean with a damp cloth. For stubborn dirt, use a mild detergent. Dry thoroughly immediately after cleaning to prevent rust.
- **Storage:** Store in a dry environment. Avoid prolonged exposure to moisture.
- **Inspection:** Periodically check the basket for any signs of wear or damage.

TROUBLESHOOTING

Problem	Solution
Basket shows signs of rust	Ensure the basket is dried thoroughly after cleaning and avoid prolonged exposure to humid environments. If rust appears, it can sometimes be removed with a rust-specific cleaner, followed by thorough drying.
Basket appears unstable	Ensure the basket is placed on a flat, stable surface. Avoid overloading with excessively heavy items.

SPECIFICATIONS

Brand	IKEA
Model	Risatorp Basket
Dimensions	25x26x18 cm (9.84"D x 10.24"W x 7.09"H)
Material	Basket: Alloy Steel, Handle: Birch
Color	Blue (as per product variant)
Item Weight	250 Grams / 8.8 ounces
Food Contact	Approved

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official IKEA website or contact IKEA customer service directly. Specific warranty terms may vary by region and purchase date.