

AULCMEET RC311S 06-531W52-PI01X

Instruction Manual for AULCMEET RC311S Replaced Remote

Model: RC311S 06-531W52-PI01X

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your AULCMEET RC311S replacement remote control. This remote is designed to be compatible with various Pioneer TV models, offering a straightforward and effective solution for controlling your television.

COMPATIBLE MODELS

The RC311S replacement remote is compatible with the following Pioneer TV models:

- PLE-32S1HD
- PLE-65D1800
- PLE-32S08HD
- PLE-40S08FHD
- PLE-43D1202UD
- PLE-43S09UHD
- PLE-50S08UHD
- PLE-50D1200F
- PLE-55S08UHD
- PLE-55S09UHD
- PLE-55D1202
- PLE-32D1202
- PLE-65S08UHD
- PLE-40D1202
- PLE-43S08FHD
- PLE-43D1202

This list covers the primary compatible models. If your Pioneer TV model is not listed but is similar, the remote may still function.

SETUP

The RC311S remote control requires no programming. Simply install batteries to begin use.

1. **Open the Battery Cover:** Locate the battery compartment on the back of the remote control. Slide or lift the cover to open it.



Figure 1: Angled view of the RC311S remote, illustrating the battery compartment area.

2. **Install New Alkaline Batteries:** Insert two new alkaline batteries (typically AAA, though not specified, common for remotes) into the compartment, ensuring correct polarity (+ and -) as indicated inside the compartment.
3. **Close the Battery Cover:** Securely close the battery compartment cover until it clicks into place.

OPERATING INSTRUCTIONS

Once batteries are installed, the remote is ready for use with your compatible Pioneer TV.

1. **Point the Remote:** Point the front end of the remote control directly towards the TV's infrared (IR) sensor.
2. **Ensure Clear Line of Sight:** Make sure there are no obstructions between the remote control and the TV's IR sensor. Objects like furniture, plants, or even people can block the signal.
3. **Button Functions:**





Figure 2: Front view of the RC311S remote control with labeled buttons.

- **Power Button (●):** Turns the TV on or off.
- **TV/Source:** Switches between input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Direct channel selection.
- **CH Return:** Returns to the previously viewed channel.

- **VOL +/-**: Adjusts the volume level.
- **Mute ()**: Mutes or unmutes the TV sound.
- **CH +/-**: Changes channels up or down.
- **Home ()**: Accesses the TV's smart features or main menu.
- **Netflix / YouTube**: Dedicated buttons for quick access to these streaming services.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Navigates through menus and confirms selections.
- **Menu**: Opens the TV's main menu.
- **Zoom +/-**: Adjusts screen zoom.
- **Exit**: Exits current menu or function.
- **Browser**: Opens the TV's web browser.
- **INFO**: Displays information about the current program or input.
- **USB**: Selects USB input.
- **List (☰)**: Displays channel list or other lists.
- **SLEEP**: Sets a sleep timer.
- **GUIDE**: Opens the electronic program guide.
- **FAV**: Accesses favorite channels.
- **CH LIST**: Displays the channel list.
- **Colored Buttons (Red, Green, Yellow, Blue)**: Functions vary by TV model and context, often used for interactive features or teletext.
- **PICTURE**: Adjusts picture settings.
- **SOUND**: Adjusts sound settings.
- **CC (Closed Caption)**: Toggles closed captions on/off.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Previous, Next)**: Controls media playback.
- **MTS (Multi-channel Television Sound)**: Selects audio modes.

MAINTENANCE

Proper care ensures the longevity of your remote control.

- **Cleaning**: Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace with new alkaline batteries of the correct type.
- **Storage**: If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment**: Avoid exposing the remote to extreme temperatures, direct sunlight, or high humidity.

TROUBLESHOOTING

If you encounter issues with your remote control, try the following steps:

- **Remote Not Responding**:
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote and the TV's IR sensor.
 - Make sure you are within the effective range of the TV's IR sensor (typically within 20 feet and directly in front).

- **Specific Buttons Not Working:**

- This could indicate a faulty button or a specific TV function not supported by the replacement remote. Verify compatibility for advanced functions.

- **Interference:**

- Strong light sources (like direct sunlight or certain types of fluorescent lights) can interfere with IR signals. Try operating the remote in different lighting conditions.

If problems persist after following these steps, please contact the seller for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	RC311S 06-531W52-PI01X
Brand	AULCMEET
Product Dimensions	9.2 x 2 x 0.6 inches
Item Weight	3 ounces
Color	Black
Special Feature	Ergonomic
Compatible Devices	Television (Pioneer TVs)
Max Number of Supported Devices	18 (Refers to the remote's internal capability, not necessarily 18 different TVs simultaneously)
Manufacturer	AULCMEET
Country of Origin	China

WARRANTY AND SUPPORT

As a replacement remote, specific warranty details may vary. Please refer to the purchase documentation or contact the seller directly for information regarding warranty coverage and support for your AULCMEET RC311S remote control.

For any questions or issues not covered in this manual, please reach out to the customer support provided by the seller.