

Beyution BE-BN59-01267A

Instruction Manual for Beyution BN59-01267A Remote Control

Model: BE-BN59-01267A

INTRODUCTION

This manual provides detailed instructions for the use and maintenance of your Beyution BN59-01267A Replacement Remote Control. This infrared remote is designed to be compatible with various Samsung LED LCD TV models, offering a direct replacement for the original BN59-01267A remote.

Compatible TV models include, but are not limited to: UN32M530, UN49M530, UN32M5300, UN32M530D, UN49M5300, UN43M5300, UN50M5300, UN40M5300, UN49MU6290, UN24M4500A, UN55MU6290, UN75MU6290, UN32J4000C, UN32M4500A, UN40MU6290, UN50M5300A, UN28M4500A, UN49M5300A, UN43MU6290, UN50MU6290, UN65MU6290, UN32M5300A, UN40M4500A, UN43M530DAF, UN32M5300AF, UN28M4500AF, UN32M530DAF, UN50M530DAF, UN40M5300AF, UN43M5300AF, UN49M5300AF, UN50M5300AF, UN40M530DAF, UN49M530DAF, UN32M4500AF, UN75NU6900FXZA, UN43NU6900FXZA, UN50NU6900BXZA, UN55NU6900BXZA, UN50NU6900FXZA, UN49MU6290FXZA, UN43MU6290FXZA, UN40MU6290FXZA, UN49M530DAFXZA, UN65NU6900FXZA, UN55NU6900FXZA, UN55MU6290FXZA, UN40M530DAFXZA, UN32M530DAFXZA, UN65MU6290FXZA.

SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, high humidity, or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries according to local regulations.

SETUP

Battery Installation

The remote control requires two (2) AAA batteries (not included). For optimal performance, use new alkaline batteries.

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 1: Battery compartment with cover removed, showing slots for two AAA batteries.

Initial Use

This is a replacement infrared remote control. No programming or pairing is required. Once batteries are installed, the remote is ready for use with compatible Samsung LED LCD TVs. Simply point the remote towards your television and press the desired function button.

OPERATING INSTRUCTIONS

The Beyution BN59-01267A remote control features a standard layout for easy navigation and control of your Samsung TV. Below is a general overview of the main buttons and their functions.





Figure 2: Front view of the remote control, displaying all functional buttons.

Button Functions

Button	Function
Power (Red)	Turns the television on or off.
Source	Selects the input source (e.g., HDMI, AV, TV).
Numbers (0-9)	Direct channel selection.
VOL (+/-)	Adjusts the volume level.
CH (Up/Down)	Changes the television channel.
Mute	Mutes or unmutes the television audio.
CH LIST	Displays the channel list.
E-MANUAL	Accesses the electronic manual (if supported by TV).
Home (House icon)	Accesses the Smart Hub or Home menu.

Button	Function
Settings	Opens the TV settings menu.
Info (i)	Displays information about the current program or input.
Navigation Pad (Up/Down/Left/Right/Enter)	Navigates through menus and confirms selections.
Return	Goes back to the previous screen or menu.
Exit	Exits the current menu or application.
Color Buttons (A, B, C, D)	Perform specific functions depending on the TV menu or application.
Media Control (Play, Pause, Stop, Fast Forward, Rewind)	Controls media playback.

MAINTENANCE

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these may damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote control's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new alkaline batteries. Refer to the "Battery Installation" section for detailed steps.

Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage and potential damage to the remote control.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote control is not working.	◦ Check if the batteries are inserted correctly with the correct polarity (+/-). ◦ Replace old batteries with new, fresh alkaline batteries. Rechargeable batteries may not provide sufficient power. ◦ Ensure there are no obstructions between the remote control and the TV's infrared receiver. ◦ Verify that the remote control is pointed directly at the TV.

Problem	Possible Cause / Solution
Some buttons are unresponsive.	◦ Ensure the remote is compatible with your specific TV model. Refer to the "Introduction" section for a list of compatible models. ◦ Clean the remote control's surface, especially around the unresponsive buttons, to remove any dirt or debris. ◦ Try replacing the batteries.
Remote control range is poor.	◦ Replace the batteries with new alkaline batteries. ◦ Ensure there are no strong light sources (e.g., direct sunlight, fluorescent lights) interfering with the TV's IR receiver. ◦ Reduce the distance between the remote and the TV.

If the issue persists after trying these solutions, please contact customer support for further assistance.

SPECIFICATIONS

- Model Number:** BE-BN59-01267A
- Brand:** Beyution
- Connectivity Technology:** Infrared (IR)
- Compatible Devices:** Samsung LED LCD Televisions
- Power Source:** 2 x AAA Batteries (not included)
- Product Dimensions:** 7 x 2 x 0.65 inches
- Item Weight:** 2.39 ounces
- Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the terms and conditions provided by your retailer at the time of purchase. For technical support or inquiries regarding compatibility, please contact the seller or manufacturer directly.

If your TV model number is not listed in this manual, or if you encounter any issues not covered in the troubleshooting section, please reach out to the seller for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question