

Jensen PXXR7NEC

Jensen PXXR7NEC Remote Control User Manual

FOR JENSEN JE1908, JE508, JE3708, JE2608, JE3208, AND JE4208 TELEVISIONS

Introduction

This manual provides instructions for the proper setup, operation, and maintenance of your Jensen PXXR7NEC Remote Control. This remote is designed to be compatible with various Jensen television models, including JE1908, JE508, JE3708, JE2608, JE3208, and JE4208. Please read this manual thoroughly before using your remote control to ensure optimal performance and longevity.

Setup

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
 2. Slide the cover downwards or press the latch and lift to open.
 3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
 4. Replace the battery compartment cover, sliding it back into place until it clicks securely.
- Note:** Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

2. Initial Use

The Jensen PXXR7NEC remote control is typically pre-programmed for the compatible Jensen television models listed. In most cases, no additional programming is required. Simply insert the batteries, point the remote towards your television, and begin operation.

Operating the Remote Control

Familiarize yourself with the buttons on your remote control. Below is an image illustrating the remote's layout, followed by

a description of key button functions.

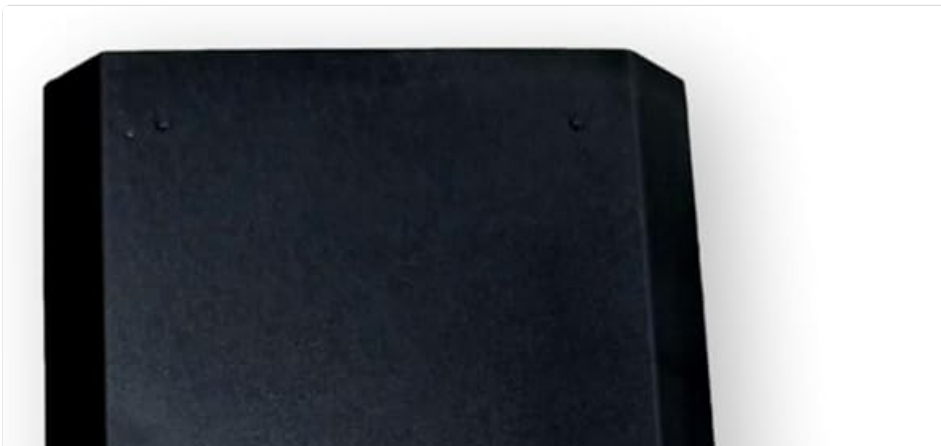




Figure 1: Front view of the Jensen PXXR7NEC remote control. This image displays the full array of buttons, including power, number keys, channel and volume controls, and various function buttons for television operation.

Button Functions

- **STANDBY (Red Button):** Powers the television on or off.
- **SLEEP:** Activates the sleep timer function, allowing the TV to turn off automatically after a set period.
- **MUTE:** Silences or restores the television's audio output.
- **Number Buttons (0-9):** Used to directly select channels or input numerical values.
- **LAST CH:** Returns to the previously viewed channel.
- **PICTURE:** Accesses picture settings (e.g., brightness, contrast, color).
- **SOUND:** Accesses sound settings (e.g., bass, treble, balance).
- **FUNCTION:** Accesses additional television functions or settings.
- **DISPLAY:** Shows current channel information, time, or other on-screen display details.
- **MENU:** Opens the main on-screen menu for television settings.
- **ENTER:** Confirms selections within menus or activates a function.
- **CH+ / CH-:** Changes the television channel up or down.
- **VOL+ / VOL-:** Increases or decreases the television's volume.
- **Directional Arrows (Up, Down, Left, Right):** Navigates through on-screen menus and options.
- **TV:** Switches the input source to TV tuner mode.
- **AV:** Switches the input source to Audio/Video input mode.
- **MTS:** Selects Multi-channel Television Sound options (e.g., Stereo, SAP).
- **CC:** Toggles Closed Captions on or off.
- **EXIT:** Exits the current menu or on-screen display.
- **FORMAT:** Adjusts the screen aspect ratio or display format.



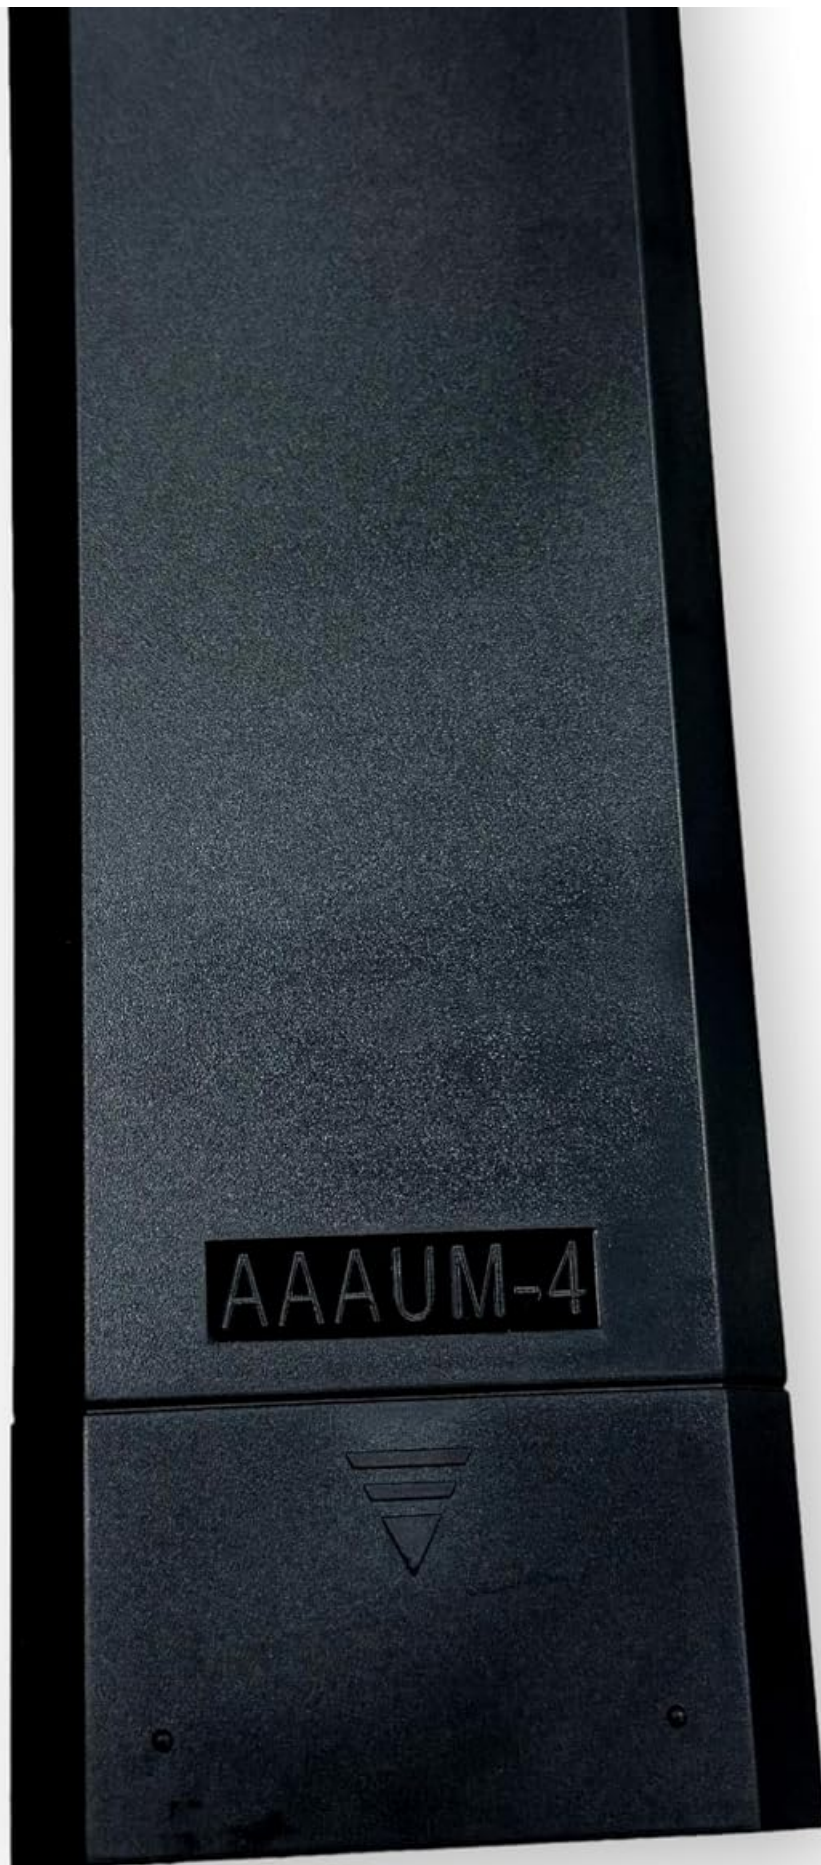


Figure 2: Back view of the Jensen PXXR7NEC remote control. This image shows the rear casing, including the battery compartment cover and the model number "PXXR7NEC" printed on the lower section.

Maintenance

1. Battery Replacement

When the remote control's range decreases or it becomes unresponsive, it is likely time to replace the batteries. Follow the battery installation steps outlined in the Setup section. Dispose of used batteries responsibly according to local regulations.

2. Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

3. Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage and potential damage.

Troubleshooting

If you encounter issues with your remote control, please refer to the following common problems and solutions:

- **Remote is unresponsive or has short range:**
 - Ensure there is a clear line of sight between the remote control and the television's infrared receiver.
 - Check the batteries. Replace them with new ones if they are old or depleted.
 - Verify that the batteries are inserted correctly with the correct polarity (+/-).
- **Specific buttons do not function:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be obstructing them.
 - If only certain buttons are affected, and the remote is otherwise working, it might indicate a specific internal issue. Consider replacing the batteries first.
- **Television does not respond to any remote commands:**
 - Confirm the television is powered on and plugged into an electrical outlet.
 - Ensure the remote control is pointed directly at the television.
 - Check for any obstructions between the remote and the TV's IR sensor.
 - Replace the remote control batteries.
 - If possible, test the remote with another compatible Jensen TV to determine if the issue is with the remote or the TV.

Specifications

Item Model Number	PXXR7NEC
Brand	Jensen
Manufacturer	ASA Electronics
Package Dimensions	7.17 x 2.52 x 0.67 inches

Item Weight	2.71 ounces
Connectivity Technology	Infrared
Compatible Devices	Television (Jensen JE1908, JE508, JE3708, JE2608, JE3208, JE4208)
Max Number of Supported Devices	1
Special Feature	Ergonomic

Warranty and Support

For information regarding warranty coverage, technical support, or service for your Jensen PXXR7NEC remote control, please contact the manufacturer, ASA Electronics, or refer to the documentation provided with your Jensen television. Specific warranty terms may vary.

For further assistance, please visit the official Jensen website or contact their customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07QP9S4F6>

More documents and user manuals: <https://manuals.plus/>