



[Manuals.plus](#) /

> [Oster](#) /

> Oster OADE180-BIV 18-Bottle Dual Zone Touch Control Wine Cellar Instruction Manual

## Oster OADE180-BIV

# Oster OADE180-BIV 18-Bottle Dual Zone Touch Control Wine Cellar Instruction Manual

Model: OADE180-BIV

## INTRODUCTION

---

Thank you for choosing the Oster 18-Bottle Dual Zone Touch Control Wine Cellar. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions thoroughly before use and retain them for future reference.

## SAFETY INSTRUCTIONS

---

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using this appliance.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded outlet. This unit is Bivolt (127V-220V), but always verify the local voltage matches the appliance's requirements. Do not use extension cords or ungrounded adapters.
- **Placement:** Place the wine cellar on a firm, level surface away from direct sunlight, heat sources (stoves, heaters), and excessive moisture. Ensure adequate ventilation around the unit.
- **Ventilation:** Do not block any ventilation openings on the appliance. Allow at least 10 cm (4 inches) of space around the back and sides for proper air circulation.
- **Children:** This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Damage:** Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any manner.
- **Cleaning:** Always unplug the appliance before cleaning or performing any maintenance.



Image: Safety certification logos, including INMETRO and SGS, indicating compliance with safety standards.

## PRODUCT OVERVIEW

---

The Oster 18-Bottle Wine Cellar is designed to store your wines at optimal temperatures, featuring a dual-zone cooling system and a sleek touch control panel.

### Key Features:

- **Dual Zone Cooling:** Allows for two different temperature settings simultaneously, ideal for storing various types of wine.
- **18-Bottle Capacity:** Ample space for a diverse wine collection.
- **Tempered Double Glass Door:** Provides excellent thermal insulation and protects wine from UV light.
- **Silent Electronic Cooling System:** Ensures quiet operation, suitable for living areas.
- **Digital Touch Control Panel:** Easy and precise temperature adjustment.
- **Bivolt (127V-220V):** Compatible with various electrical systems.

### Components:



Image: Front view of the Oster wine cellar, showcasing the touch control panel and glass door.

- **Control Panel:** Located at the top of the door, with digital display and touch buttons for temperature adjustment and light control.
- **Glass Door:** Tempered double-pane glass for insulation and visibility.
- **Wire Shelves:** Removable shelves designed to hold wine bottles securely.
- **Internal Fan:** Circulates air for consistent temperature.
- **Adjustable Feet:** For leveling the appliance on uneven surfaces.



Image: Side view of the Oster wine cellar, showing bottles stored on the wire shelves within the unit.

## SETUP

---

1. **Unpacking:** Carefully remove all packaging materials, including foam and tape. Keep packaging for future transport if needed.
2. **Placement:**
  - Place the wine cellar on a flat, stable surface strong enough to support the unit when fully loaded.
  - Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the unit for proper

ventilation.

- Avoid placing the unit in direct sunlight or near heat-generating appliances (e.g., oven, dishwasher, refrigerator).
- Do not install in areas with high humidity.

3. **Leveling:** Adjust the leveling feet at the bottom of the unit to ensure it is perfectly level. This is crucial for proper door sealing and efficient operation.
4. **Initial Standby:** After placing the unit, allow it to stand upright for at least 2-4 hours before plugging it in. This allows the refrigerant fluids to settle.
5. **Power Connection:** Plug the power cord into a dedicated, grounded electrical outlet. The unit is Bivolt (127V-220V).
6. **First Use:** Run the wine cellar empty for at least 24 hours to allow the interior to cool down to the set temperature and to dissipate any initial odors.

## OPERATING INSTRUCTIONS

---

### Control Panel:

The wine cellar features a digital touch control panel located on the door. This panel allows you to adjust temperatures for both zones and control the interior light.

- **Temperature Display:** Shows the current temperature of each zone.
- **Temperature Up/Down Buttons:** Use these to increase or decrease the desired temperature for each zone.
- **Zone Selection Button:** Allows you to switch between the upper and lower zones for temperature adjustment.
- **Light Button:** Turns the interior LED light on or off.

### Setting Temperatures:

1. **Power On:** Ensure the unit is plugged in and powered on. The display will illuminate.
2. **Select Zone:** Press the zone selection button to choose either the upper or lower zone. The selected zone's temperature display will flash.
3. **Adjust Temperature:** Use the Up (▲) and Down (▼) arrows to set your desired temperature. The temperature range for wine storage is typically between 5°C and 18°C (41°F and 64°F).
4. **Confirm Setting:** The display will stop flashing after a few seconds, indicating the new temperature is set. The unit will then begin to adjust to the new setting.
5. **Repeat for Second Zone:** Follow the same steps to set the temperature for the other zone.

### Loading Bottles:

- Arrange bottles on the shelves to allow for proper air circulation.
- Avoid overcrowding the shelves, as this can impede cooling efficiency.
- Ensure the door closes completely after loading bottles.

## MAINTENANCE

---

### Cleaning the Interior:

1. Unplug the wine cellar from the power outlet.

2. Remove all bottles and shelves.
3. Wash the interior surfaces with a solution of warm water and mild detergent. Do not use abrasive cleaners or solvents.
4. Rinse thoroughly and wipe dry with a clean, soft cloth.
5. Clean the door gasket regularly to ensure a proper seal.

### Cleaning the Exterior:

- Wipe the exterior with a soft cloth dampened with water and a mild detergent.
- Do not use harsh chemicals or abrasive materials, as they can damage the finish.

### Power Outage:

In case of a power outage, the wine cellar can maintain its temperature for several hours if the door is kept closed. Avoid opening the door unnecessarily during an outage.

### Vacation Time:

- For short vacations, leave the wine cellar operating.
- For long vacations, unplug the unit, clean the interior, and leave the door slightly ajar to prevent odors and mold growth.

## TROUBLESHOOTING

---

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Wine cellar does not operate.	Not plugged in; circuit breaker tripped; power switch off.	Ensure plug is secure; check circuit breaker; turn power switch on.
Temperature is not cold enough.	Door not closed properly; excessive door openings; warm ambient temperature; ventilation blocked; temperature setting too high.	Check door seal; reduce door openings; ensure proper ventilation; lower temperature setting.
Excessive vibration.	Unit not level.	Adjust leveling feet.
Noise from the unit.	Normal operation sounds (compressor, fan); unit touching a wall.	Ensure adequate space around the unit; these sounds are normal for cooling appliances.
Door does not close properly.	Unit not level; door gasket dirty or damaged; shelves out of position.	Level the unit; clean or replace gasket; reposition shelves.

## SPECIFICATIONS

---

<b>Model Number</b>	OADE180-BIV
---------------------	-------------

<b>Brand</b>	Oster
<b>Capacity</b>	18 Bottles
<b>Dimensions (W x D x H)</b>	44 x 58 x 73.5 cm (approximately 17.3 x 22.8 x 28.9 inches)
<b>Weight</b>	16 kg (approximately 35.3 lbs)
<b>Voltage</b>	127-220 Volts (Bivolt)
<b>Material</b>	Metal
<b>Cooling System</b>	Electronic (Thermoelectric)
<b>Certification</b>	BRA19/00768 (INMETRO OCP 0040)

## WARRANTY AND SUPPORT

---

Oster products are manufactured to high-quality standards and are warranted against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Oster website.

For technical assistance, troubleshooting beyond this manual, or to inquire about replacement parts, please contact Oster Customer Support. Have your model number (OADE180-BIV) and purchase information ready when contacting support.

You can often find contact information on the Oster brand website or through your retailer.