

[Manuals.plus](#) /

› [ReplacementScrews](#) /

› ReplacementScrews Stand Screws for Element ELST3216H TV - Instruction Manual

ReplacementScrews ELST3216H

Instruction Manual: ReplacementScrews Stand Screws for Element ELST3216H TV

Model: ELST3216H

1. PRODUCT OVERVIEW

This manual provides instructions for the proper installation and care of ReplacementScrews stand screws designed for the Element ELST3216H television model. This kit includes a complete set of four metric machine screws, specifically engineered to securely attach the original factory stand legs to your Element ELST3216H TV. The screws feature a black oxide plating, which offers corrosion resistance and a finish that matches the television's aesthetic.



Image 1.1: A set of four black machine screws, designed for TV stand attachment.

2. SETUP AND INSTALLATION

Before beginning installation, ensure your television is powered off and placed on a soft, clean surface to prevent scratches. Verify that your television model number is ELST3216H, typically found on a label on the back of the TV.

2.1 Components Included

- Four (4) black metric machine screws.

2.2 Installation Steps

1. **Prepare the TV:** Carefully lay your Element ELST3216H television screen-down on a soft, flat surface. Ensure the area is clear and stable.
2. **Position the Stand Legs:** Align the original factory stand legs with the designated mounting holes on the back or bottom of your television.
3. **Insert Screws:** Insert one of the provided black machine screws into each mounting hole, securing the stand leg to the TV.
4. **Tighten Screws:** Using an appropriate screwdriver (typically a Phillips head), gently tighten each screw. Do not overtighten, as this can strip the threads or damage the TV casing. Tighten until the stand leg is firmly attached and there is no wobble.
5. **Verify Stability:** Once all screws are installed and tightened, carefully lift the TV and place it upright on a stable surface. Gently test the stability of the stand before use.



Image 2.1: Close-up view of the four screws, showing their threaded design.



Image 2.2: Top-down view of the screw heads, indicating the type of screwdriver required.

3. USAGE GUIDELINES AND IMPORTANT CONSIDERATIONS

These screws are specifically designed for attaching the original factory stand legs to your Element ELST3216H television. Adhering to the following guidelines ensures proper and safe use:

- **Compatibility:** Ensure these screws are used only with the Element ELST3216H model. Using them with incompatible models may result in an insecure fit or damage.
- **Stand Use Only:** These screws are **not** intended for universal stands or wall mounting applications. Wall mounts and universal stands typically require different screw types and lengths.
- **Secure Fit:** The fine threaded machine screws are designed to fit into pre-threaded metal holes or inserts on your TV. A secure fit is crucial for the stability of your television.
- **Corrosion Resistance:** The black oxide plating provides resistance to corrosion, maintaining the integrity and appearance of the screws over time.

4. MAINTENANCE

Minimal maintenance is required for these stand screws. However, periodic checks can help ensure the continued

stability of your television stand:

- **Periodic Inspection:** Every 6-12 months, gently check the screws to ensure they remain tight. If any screw feels loose, carefully tighten it with an appropriate screwdriver.
- **Cleaning:** If necessary, wipe the screws with a dry, soft cloth to remove dust. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** If the screws are removed for any reason, store them in a dry place to prevent potential corrosion, although they are black oxide plated for resistance.

5. TROUBLESHOOTING

If you encounter issues during installation or use, refer to the following troubleshooting tips:

5.1 Screws Do Not Fit

- **Verify Model Number:** Double-check the model number on the back of your television. These screws are specifically for the Element ELST3216H. If your model differs, these screws may not be compatible.
- **Check for Obstructions:** Ensure there are no obstructions or debris in the TV's mounting holes that might prevent the screws from threading properly.
- **Correct Orientation:** Ensure the stand legs are oriented correctly before attempting to insert the screws.

5.2 Stand Feels Unstable

- **Tighten All Screws:** Ensure all four screws are securely tightened. Do not overtighten, but ensure they are snug.
- **Inspect Stand Legs:** Check the stand legs themselves for any damage or warping that might affect stability.
- **Level Surface:** Ensure the surface on which the TV is placed is level and stable.

If issues persist after following these steps, please contact ReplacementScrews customer support for further assistance.

6. SPECIFICATIONS

Feature	Detail
Product Type	TV Stand Replacement Screws
Compatibility	Element ELST3216H Television
Quantity	4 Screws per set
Screw Type	Metric Machine Screws
Finish	Black Oxide Plated
Thread Coverage	Fully Threaded
Item Weight	0.26 ounces (total for set)
Package Dimensions	6.5 x 3.5 x 0.5 inches

7. WARRANTY AND SUPPORT

For specific warranty information regarding your ReplacementScrews product, please refer to the packaging or

contact the manufacturer directly. ReplacementScrews is committed to providing quality products and customer satisfaction.

If you require assistance, have questions about installation, or need to report a defective product, please contact ReplacementScrews customer support. You can often find contact information on the product packaging or by visiting the official [ReplacementScrews Brand Store](#).

© 2023 ReplacementScrews. All rights reserved. Information subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question