

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bsimb](#) /

› [BSIMB W09Y 9-Inch WiFi Digital Picture Frame User Manual](#)

## Bsimb W09Y

# BSIMB W09Y 9-Inch WiFi Digital Picture Frame User Manual

## INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your BSIMB W09Y 9-inch WiFi Digital Picture Frame. This device allows you to display photos and videos, connect to Wi-Fi, and share memories with family and friends.

## PACKAGE CONTENTS

- 1 x 9 Inch Digital Picture Frame
- 1 x USB Cable
- 1 x US Adapter
- 1 x User Manual (English)
- 1 x Warranty Card

## PRODUCT OVERVIEW

### Key Features

- 9-inch IPS Touch Screen with 1067x800 resolution (4:3 aspect ratio)
- WiFi connectivity for easy photo sharing
- 16GB built-in memory
- Motion sensor for automatic power on/off
- Automatic rotation for portrait or landscape display
- Support for various photo, audio, and video formats
- Compatibility with BSIMB PHOTO app for smartphone sharing

### Frame Components

The digital picture frame features a high-resolution IPS touch screen on the front. On the back or sides, you will find ports for power, USB, and memory cards, along with a stand for display.



Image: Front view of the BSIMB W09Y 9-Inch WiFi Digital Picture Frame, showcasing its display and sleek design.

## SETUP

---

### 1. Powering On

Connect the US Adapter to the frame's power port and plug it into an electrical outlet. The frame will automatically power on.

### 2. Initial Configuration

Follow the on-screen prompts to select your language, time zone, and connect to a Wi-Fi network. You will need your Wi-Fi network name (SSID) and password.

### 3. App Installation and Binding

1. Download the "BSIMB PHOTO" app from your smartphone's app store (available for iPhone and Android).
2. Create an account within the app.
3. Follow the app's instructions to bind your digital picture frame to your account. This typically involves scanning a QR code displayed on the frame or entering a unique frame ID.

## OPERATING INSTRUCTIONS

---

### Navigating the Touch Screen

The frame features a sensitive touch screen. Swipe left or right to browse photos, tap to select options, and use pinch gestures for zooming (if supported).

### Sharing Photos and Videos

- **Via BSIMB PHOTO App:** Open the app on your smartphone, select the photos or videos you wish to share, and send them to your bound frame. They will appear on the frame once uploaded.
- **Via Email:** The frame has a unique email address. You can send photos as attachments to this address, and they will appear on the frame.
- **Via Social Media:** The frame supports sharing from platforms like Facebook and Twitter. Refer to the frame's settings for linking these accounts.
- **Via USB/SD Card:** Insert a USB drive or SD/MMC/SDHC card into the designated port. The frame will detect the media, allowing you to import or play content directly.

### Motion Sensor Function

The motion sensor detects movement within approximately 2 meters. When motion is detected, the frame will automatically turn on and begin playing content. If no motion is detected for a set period, the frame will turn off or enter standby mode to conserve energy.

### Display Modes

The frame supports both original size and full-screen display modes. Adjust these settings in the frame's menu. The frame automatically adjusts to portrait or landscape orientation based on its physical placement.

## MAINTENANCE

---

### Cleaning the Screen

Use a soft, lint-free cloth, slightly dampened with water or a screen cleaning solution, to gently wipe the screen. Avoid harsh chemicals or abrasive materials.

### General Care

- Keep the frame away from direct sunlight, excessive heat, and moisture.
- Do not expose the frame to extreme temperatures.
- Avoid dropping the frame or subjecting it to strong impacts.

## TROUBLESHOOTING

---

### Frame Does Not Power On

- Ensure the power adapter is securely connected to both the frame and a working electrical outlet.
- Verify the outlet is supplying power.

### Cannot Connect to Wi-Fi

- Check that your Wi-Fi network is active and within range.
- Ensure you have entered the correct Wi-Fi password.
- Restart the frame and your Wi-Fi router.

## Photos Not Appearing on Frame

- Confirm the frame is connected to Wi-Fi.
- Check the BSIMB PHOTO app for upload status or error messages.
- Ensure the frame is bound correctly to your app account.
- Verify the file formats are supported (JPEG/BMP/GIF/TIF/PNG).

## Motion Sensor Not Working

- Check the motion sensor settings in the frame's menu to ensure it is enabled.
- Ensure there are no obstructions in front of the sensor.

## Screen is Unresponsive

- Restart the frame. If the issue persists, contact customer support.

## SPECIFICATIONS

---

Feature	Detail
Brand	Bsimb
Model Number	W09Y
Display	9-inch IPS Touch Screen
Resolution	1067 x 800 (4:3 Aspect Ratio)
Built-in Memory	16GB
Connectivity	USB, Wi-Fi
Photo Formats	JPEG, BMP, GIF, TIF, PNG
Audio Formats	Mp3, WMA, OGG, AAC, APE, FLAC, WAV
Video Formats	MPEG1, MPEG2, MPEG4 (Divx4.0, Divx5.0, Xvid), AVI, M-JPEG, MKV, WMV, ASF, MOV, MP4, H.264, 3GP (supports part of 1080P videos)
Input Voltage	100 - 240 V, 50 / 60Hz, 0.5A
Output Voltage	5V 2A
Product Dimensions	26.39 x 18.47 x 2.51 cm
Weight	848.22 g

## WARRANTY AND SUPPORT

---

## **Warranty Information**

Your BSIMB W09Y Digital Picture Frame comes with a one-year replacement warranty, ensuring 100% satisfaction.

## **Customer Support**

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact BSIMB customer support. Refer to the warranty card or the manufacturer's website for contact details.