

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components W10350375 Dishwasher Top Rack Adjuster Instruction Manual

UpStart Components W10350375

UpStart Components W10350375 Dishwasher Top Rack Adjuster Instruction Manual

Model: W10350375

1. PRODUCT OVERVIEW

This manual provides instructions for the installation and maintenance of the UpStart Components W10350375 Dishwasher Top Rack Adjuster. This component is designed as a replacement part for various dishwasher models, including the Whirlpool WDT750SAHB0, and is compatible with original part numbers such as W10712395, AP5957560, W10250159, and W10712395VP.

The top rack adjuster allows for vertical adjustment of the dishwasher's upper rack, providing flexibility for loading different sized items. It is constructed from premium quality materials for durability and can be used on both the left and right sides of the dishwasher's upper rack assembly.



Figure 1: UpStart Components W10350375 Dishwasher Top Rack Adjuster.

2. SAFETY INFORMATION

- Always disconnect power to the dishwasher before attempting any repairs or installations. Turn off the circuit breaker or unplug the appliance.
- Wear appropriate personal protective equipment, such as gloves, to prevent injury.
- If you are unsure about any step, consult a qualified appliance technician.
- Keep small parts away from children.

3. PACKAGE CONTENTS

Your package should contain the following item:

- 1 x UpStart Components W10350375 Dishwasher Top Rack Adjuster

4. INSTALLATION INSTRUCTIONS

This section outlines the general steps for replacing a dishwasher top rack adjuster. Specific disassembly and reassembly may vary slightly depending on your dishwasher model. Refer to your dishwasher's service manual for detailed instructions if needed.

1. **Disconnect Power:** Ensure the dishwasher is completely disconnected from its power source (unplugged or circuit breaker off) before beginning.
2. **Remove Upper Rack:** Carefully pull the upper dishwasher rack out of the dishwasher tub. You may need to remove the rack stop clips or caps from the end of the rack rails to fully slide the rack out.
3. **Identify Damaged Adjuster:** Locate the existing top rack adjuster on the side of the upper rack that needs replacement. This part typically connects the rack to the roller assembly.
4. **Remove Old Adjuster:** Depending on your model, the old adjuster may be held in place by clips, screws, or simply snap into position. Carefully detach it. Note how the old adjuster was oriented and connected to the rack and the roller assembly.
5. **Install New Adjuster:** Position the new UpStart Components W10350375 adjuster in the same manner as the old one. This adjuster can be used on both the left and right sides. Ensure it snaps securely into place or is fastened as required by your dishwasher's design.



Figure 2: Front view of the adjuster, highlighting the roller mechanism.

6. **Reinstall Upper Rack:** Slide the upper rack back onto the rails inside the dishwasher. Reattach any rack stop clips or caps that were removed.
7. **Test Adjustment:** Verify that the rack can be smoothly adjusted up and down using the new adjuster.
8. **Restore Power:** Once installation is complete and all components are secure, reconnect power to the dishwasher.

5. USAGE

After successful installation, the W10350375 Top Rack Adjuster allows you to modify the height of your dishwasher's upper rack. To adjust the rack, typically you will find levers or mechanisms on either side of the rack.

Press or lift these mechanisms simultaneously and then raise or lower the rack to your desired height. Release the mechanisms to lock the rack in position. This feature is useful for accommodating taller items in the lower rack or larger plates in the upper rack.

6. MAINTENANCE

The W10350375 Top Rack Adjuster is designed for durability and requires minimal maintenance. Periodically inspect the adjuster for any signs of wear, cracks, or damage. Ensure the rollers move freely and are not obstructed by food debris or mineral deposits. If any issues are observed, consider replacing the part to maintain optimal dishwasher performance.

7. TROUBLESHOOTING

- **Rack not adjusting:** Check if the adjuster is properly seated and secured. Ensure no debris is blocking the adjustment mechanism.
- **Rack feels loose or wobbly:** Verify that all connections are tight and the adjuster is not damaged. Ensure the rack stop clips are in place.
- **Difficulty sliding rack:** Inspect the rack rollers and rails for obstructions or damage. Clean any accumulated grime.

8. SPECIFICATIONS

Part Number	AP-W10350375-DL27
Material	Plastic
Compatibility	Compatible with W10350375, W10712395, AP5957560, PS10065979, W10250159, W10712395VP, and models like Whirlpool WDT750SAHB0.
Manufacturer	UpStart Components

9. WARRANTY AND SUPPORT

Any warranties for this product are offered solely by UpStart Components. For support, inquiries, or warranty claims, please contact UpStart Components directly through their official channels. Please note that this product is not affiliated with any original equipment manufacturers (OEMs), and any warranties offered by original manufacturers do not cover this replacement part.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07QR17Y22>

More documents and user manuals: **<https://manuals.plus/>**