

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [YEEBAY](#) /

› [YEEBAY Whack A Frog Game Instruction Manual - Model SG_B07QRRTYBL_VR3](#)

YEEBAY SG_B07QRRTYBL_VR3

YEEBAY Whack A Frog Game Instruction Manual

Brand: YEEBAY | Model: SG_B07QRRTYBL_VR3

1. INTRODUCTION AND OVERVIEW

The YEEBAY Whack A Frog Game is an interactive learning toy designed to engage toddlers and children aged 36 months to 10 years. This game promotes the development of fine motor skills, hand-eye coordination, and attention span. It also encourages cooperative play and communication skills when played with others. The game features multiple speed-changing levels and two different game modes for varied play experiences.



Enhance concentration



Fine motor skill



Cognitive development



Interpersonal communication

Image: A child actively playing the Whack A Frog game, highlighting its developmental benefits.

2. SETUP

1. **Battery Installation:** The game requires batteries (not included). Locate the battery compartment on the underside of the unit. Use a screwdriver to open the compartment, insert the required batteries, and securely close the cover.
2. **Secure Placement:** The game unit is equipped with suction cups on its base. For stable play, press the unit firmly onto a smooth, flat surface to engage the suction cups, preventing it from sliding during active play.
3. **Hammers:** The game includes two soft hammers. These are designed with soft, squishy ends for safety during play.



Image: Details of the game's features, including the soft hammer and suction cups for stability.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the controls located on the side and front of the frog game unit:

- **Power On/Off:** Use the designated switch to turn the game unit on or off.
- **Volume Selection:** Adjust the game's volume using the volume control buttons. Options include increasing volume, decreasing volume, and muting the sound entirely.
- **Language Selection:** Press the language selection button to cycle through available language options for game prompts and instructions.
- **Mode Selection:** Choose between single-player mode and 2-player mode. The game features 38 different speed-changing levels that increase in difficulty.
- **Play/Stop:** Use the Play/Stop button to start a game or pause/resume current gameplay.
- **Music Switch:** A dedicated button allows you to switch between different musical tunes during play.
- **LCD Display Score:** The integrated LCD screen displays your current score during gameplay.

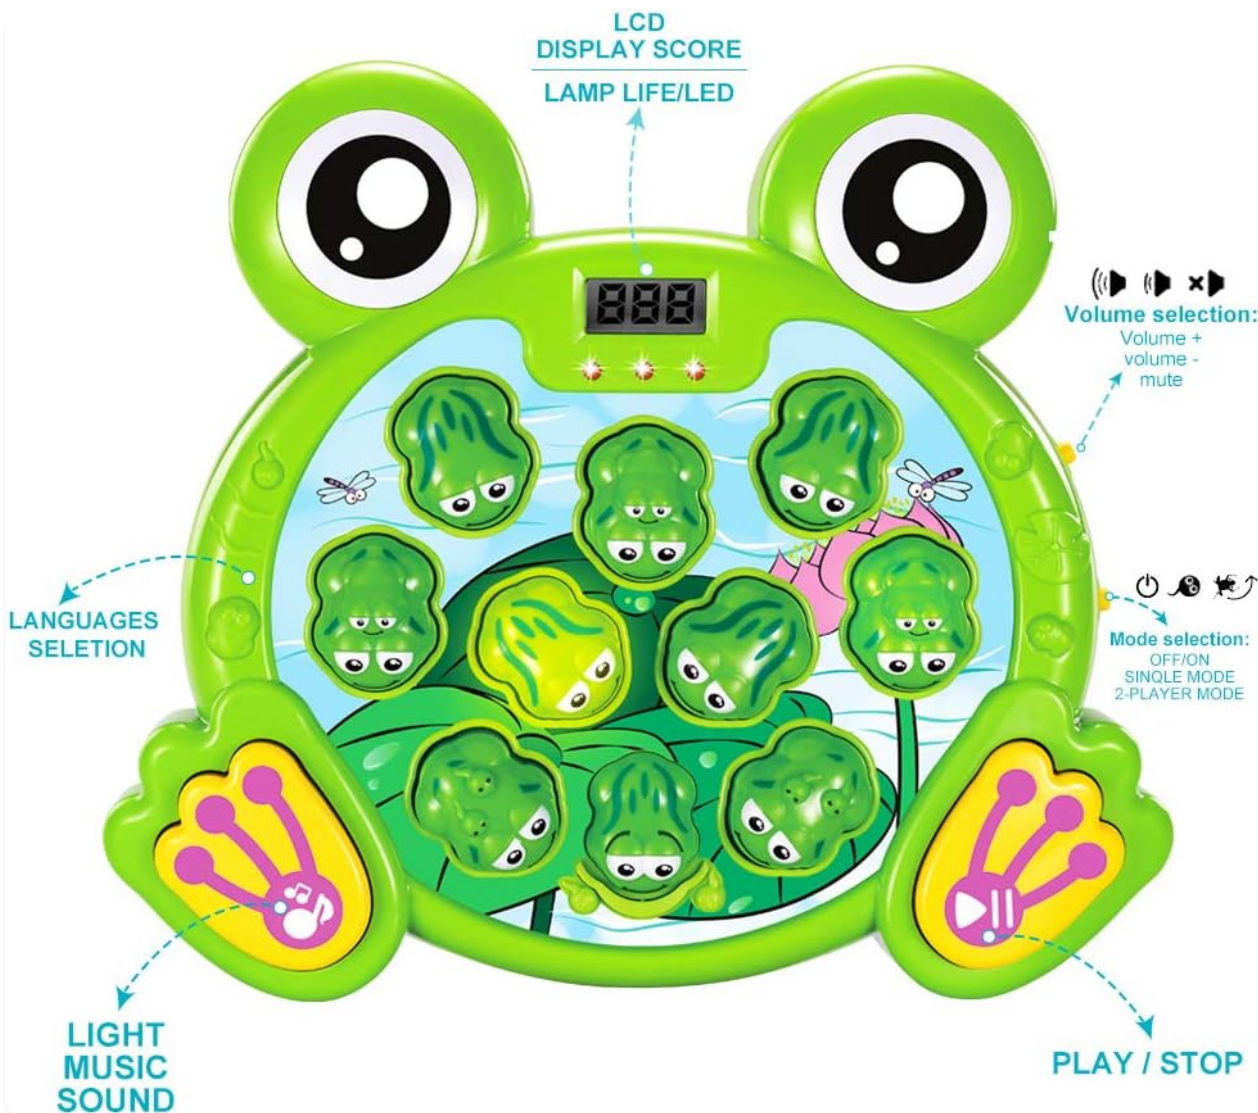


Image: Overview of the game's controls and display features.

Playing the Game:

1. Turn on the game unit and select your preferred language and game mode.
2. Press the Play button to begin. Frogs will light up randomly.
3. Use the soft hammers to gently tap the frogs as they light up.
4. The LCD display will show your score. Red lights indicate remaining lives. Hitting the wrong frog will reduce a life.
5. The game progresses through increasing difficulty levels, with frogs lighting up faster.

Official Product Video:

Your browser does not support the video tag.

Video: A demonstration of the YEEBAY Whack A Frog Game in action, showcasing its interactive features and engaging gameplay for toddlers.

4. FEATURES

- **Developmental Benefits:** Enhances fine motor skills, hand-eye coordination, and attention span.
- **Interactive Play:** Two game modes (single and 2-player) and 38 speed-changing levels keep children

engaged.

- **Safe Design:** Comes with two soft, rubber-tipped hammers to prevent injury during play.
- **Durable Construction:** Made with premium materials for long-lasting use.
- **Auditory and Visual Stimulation:** Features lights, music, and sound effects to capture and maintain a child's interest.

5. SAFETY INFORMATION

Warning: Contains small parts. Not suitable for children under 36 months without adult supervision. The soft hammers are designed to minimize impact, but adult supervision is recommended during play to ensure safe use and prevent misuse.

6. MAINTENANCE

- **Cleaning:** Wipe the game unit and hammers with a soft, damp cloth. Do not immerse in water.
- **Battery Replacement:** Replace batteries when the game's lights dim or sounds become distorted. Ensure correct polarity when inserting new batteries.
- **Storage:** Store the game in a cool, dry place away from direct sunlight when not in use.

7. TROUBLESHOOTING

- **Game Not Turning On:** Check if the batteries are correctly installed and fully charged. Replace with new batteries if necessary.
- **Frogs Not Lighting Up/Responding:** Ensure the game mode is correctly selected and the unit is powered on. If issues persist, try turning the unit off and on again.
- **Sound Issues:** Verify that the volume is not muted or set too low. Adjust using the volume control buttons.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	7.49 x 6 x 0.6 inches
Item Weight	1.9 pounds
ASIN	B07QRRTYBL
Item Model Number	SG_B07QRRTYBL_VR3
Manufacturer Recommended Age	36 months - 10 years
Release Date	August 16, 2022
Manufacturer	Guang dong wu xing wan ju you xian gong si

9. WHAT'S IN THE BOX

- 1 x YEEBAY Whack A Frog Game Unit
- 2 x Soft Hammers



Image: Contents of the YEEBAY Whack A Frog Game package.

10. WARRANTY AND SUPPORT

YEEBAY stands behind its products. If for any reason you are not completely satisfied with your purchase, please contact customer support for assistance. Refer to the product packaging or the official YEEBAY website for specific warranty details and contact information.

