



Manuals.plus /

- › Stauer /
- › Stauer Select Box Watch Winder User Manual

Stauer 20487

Stauer Select Box Watch Winder User Manual

Model: 20487

PRODUCT OVERVIEW

The Stauer Select Box Watch Winder is designed to keep your automatic watches running smoothly when not being worn. It provides continuous motion to prevent the watch from stopping, ensuring accuracy and longevity for your timepiece. Crafted with an elegant burlwood pattern and a soft interior, it also serves as a stylish display for your watch.



Figure 1: Front view of the Stauer Select Box Watch Winder, showcasing its rich burlwood exterior and the watch rotating mechanism.

This winder features a timer that automatically rotates your watch for one hour, followed by three hours of rest, optimizing the winding process without over-winding. It is also suitable for "battery-less" quartz watches that require motion to operate. An AC adapter is included for power.

PACKAGE CONTENTS

- Stauer Select Box Watch Winder Unit
- AC Adapter (100-240V)
- User Manual (this document)

SETUP

1. **Unpacking:** Carefully remove the watch winder and all accessories from the packaging. Inspect for any damage.
2. **Placement:** Place the watch winder on a stable, flat surface away from direct sunlight, extreme temperatures, and high humidity.
3. **Power Connection:** Locate the AC adapter. Insert the small end of the adapter into the power input port on the back of the watch winder. Plug the other end of the AC adapter into a standard electrical outlet (100-240V).
4. **Inserting Your Watch:**
 - Open the hinged acrylic top of the winder.
 - Gently place your automatic watch onto the soft beige vinyl cushion inside the winder. Ensure the watch is securely seated and will not rub against the winder's interior or the acrylic top when rotating.
 - Close the acrylic top.



Figure 2: Top-down view of the Stauer Select Box Watch Winder, showing the watch securely placed on the interior cushion.

The Stauer Select Box Watch Winder operates automatically once powered on. There are no manual controls or settings to adjust.

- **Automatic Cycle:** The winder is programmed to operate in a cycle of *1 hour of rotation followed by 3 hours of rest*. This cycle repeats continuously as long as the unit is powered.
- **Direction of Rotation:** The winder rotates in a single, consistent direction. This is suitable for most automatic watches.
- **Power On/Off:** To turn the winder off, simply unplug the AC adapter from the electrical outlet. To turn it back on, plug the adapter back in.

Note: The winder is designed for optimal performance with automatic watches. Consult your watch's manufacturer specifications if you are unsure about its winding requirements.

MAINTENANCE

- **Cleaning:**
 - Before cleaning, always unplug the watch winder from the power outlet.
 - Wipe the exterior of the winder with a soft, dry, lint-free cloth.
 - For stubborn marks, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the finish.
 - Gently dust the interior with a soft brush or cloth.
- **Storage:** If storing the winder for an extended period, unplug it and ensure it is clean and dry. Store it in a cool, dry place away from direct sunlight.
- **Handling:** Handle the winder with care. Avoid dropping it or subjecting it to strong impacts, which could damage the internal mechanism or the exterior finish.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Winder is not rotating.	Not plugged in. Power outlet is not active. Currently in rest cycle (3-hour period).	Ensure the AC adapter is securely plugged into both the winder and the electrical outlet. Test the outlet with another device. Wait for the rest cycle to complete. The winder will resume rotation automatically.
Watch is not winding properly.	Watch not seated correctly. Watch requires a different winding direction/Turns Per Day (TPD).	Ensure the watch is securely and properly placed on the cushion. Consult your watch's manual for its specific winding requirements. This winder has a fixed rotation and cycle.
Unusual noise from the winder.	Watch rubbing against interior. Internal mechanism issue.	Adjust the watch's position on the cushion. If noise persists and no obstruction is found, discontinue use and contact customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	Approximately 5.5 inches square (13.97 cm x 13.97 cm)
Package Dimensions	21.34 x 17.78 x 17.78 cm
Item Weight	816 g
Operation Cycle	1 hour rotation, 3 hours rest (continuous cycle)
Power Input	AC Adapter (100-240V)
Interior Material	Ultra-soft beige vinyl
Exterior Finish	Rich burlwood pattern
Manufacturer	Stauer
ASIN	B07QRVRZ15

WARRANTY AND SUPPORT

Specific warranty information for the Stauer Select Box Watch Winder is typically provided at the point of purchase or within the product packaging. Please refer to any enclosed warranty cards or contact Stauer customer support directly for details regarding warranty coverage and service.

For technical support, questions, or assistance with your Stauer product, please contact Stauer customer service through their official website or the contact information provided with your purchase.

Disclaimer: This manual provides general instructions. Stauer reserves the right to make changes to the product and specifications without prior notice.