

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [SoBuy](#) /
- › [SoBuy FKW79-W Kitchen Cart Instruction Manual](#)

SoBuy FKW79

SoBuy FKW79-W Kitchen Cart Instruction Manual

Model: FKW79-W

1. INTRODUCTION

Thank you for choosing the SoBuy FKW79-W Kitchen Cart. This versatile and practical kitchen cart is designed to provide additional storage and workspace in your kitchen or living area. Featuring three drawers, a removable shelf, and two fixed shelves, along with mobile wheels, it offers optimal organization and flexibility. Please read this manual carefully before assembly and use to ensure safe and correct operation.

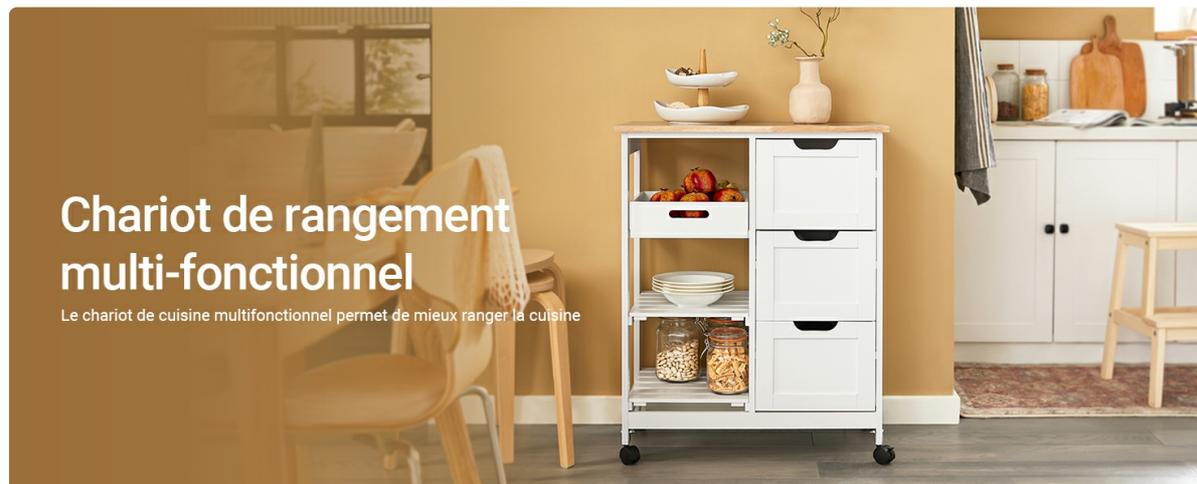


Image 1.1: The SoBuy FKW79-W Kitchen Cart in a modern kitchen environment, showcasing its multi-functional design.

2. SAFETY INFORMATION

To prevent injury or damage to the product, please observe the following safety guidelines:

- Always assemble the product on a clean, flat, and soft surface to avoid scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-

tighten as necessary.

- Do not overload the cart. The maximum recommended weight capacity is 50 kg.
- Keep small parts and packaging materials away from children and pets to prevent choking hazards.
- Use the wheel brakes when the cart needs to remain stationary to prevent accidental movement.
- Avoid placing hot items directly on the wooden countertop without protection.
- Do not stand or climb on the cart.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact SoBuy customer service.

- Top panel (wooden countertop)
- Side panels and support frames
- Three drawers with handles
- One removable shelf
- Two fixed slatted shelves
- Four wheels (two with brakes)
- Assembly hardware (screws, dowels, etc.)
- Instruction manual

4. ASSEMBLY INSTRUCTIONS

Assembly typically requires two people. Follow the step-by-step instructions provided in the included assembly manual. Ensure you have a Phillips head screwdriver and any other necessary tools.

1. **Unpack and Identify Parts:** Lay out all components and hardware. Compare them with the parts list in your separate assembly guide.
2. **Attach Wheels:** Secure the four wheels to the bottom frame of the cart. Ensure the two wheels with brakes are positioned on the same side for easy access.
3. **Assemble Frame:** Connect the side panels and support frames using the provided hardware. Do not overtighten screws initially.
4. **Install Shelves:** Insert the fixed slatted shelves into their designated slots.
5. **Assemble Drawers:** Follow the specific instructions for assembling the three drawers. Ensure the drawer slides are correctly oriented.
6. **Install Drawers and Removable Shelf:** Slide the assembled drawers into their compartments. Place the removable shelf in its position.
7. **Attach Top Panel:** Secure the wooden countertop to the top of the assembled frame.
8. **Final Tightening:** Once all parts are in place, carefully tighten all screws and fasteners.

For detailed diagrams and specific screw types, refer to the separate assembly manual included in your package.

5. OPERATING INSTRUCTIONS

5.1 Using the Drawers

The cart features three spacious drawers for storing various kitchen items, utensils, or other accessories. Pull the handles gently to open and push to close. Avoid slamming the drawers to ensure longevity of the slides.



Image 5.1: A drawer pulled open, demonstrating its storage capacity for kitchen essentials.

5.2 Removable Shelf

The cart includes one removable shelf, ideal for storing fruits, vegetables, or other items that require easy access or portability. Simply lift the shelf to remove it from its compartment.



Image 5.2: The removable shelf, shown holding pomegranates, can be easily lifted out for convenience.



Image 5.3: Demonstrating how to remove the shelf from the cart.

5.3 Fixed Shelves

The two fixed slatted shelves at the bottom provide additional open storage for larger items like bowls, jars, or small appliances.



Image 5.4: The fixed shelves offer open storage for various kitchen items.

5.4 Mobility and Brakes

The cart is equipped with four wheels for easy movement. Two of these wheels have brakes to secure the cart in place. To move the cart, ensure the brakes are disengaged. To lock the cart, push down the levers on the braked wheels until they click into position.



Image 5.5: Detail of a wheel with its locking mechanism, indicating how to engage and disengage the brake.

6. MAINTENANCE

Proper care will extend the life and appearance of your kitchen cart.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. For stubborn stains, use a mild soap solution and dry immediately. Avoid abrasive cleaners or harsh chemicals.
- **Spills:** Clean up spills immediately, especially on the wooden countertop, to prevent staining or damage.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.
- **Wheels:** Keep the wheels free of debris to ensure smooth movement.
- **Environment:** Avoid prolonged exposure to direct sunlight or extreme humidity, which can affect the wood material.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cart is wobbly or unstable.	Loose screws or uneven assembly.	Check and tighten all screws. Ensure the cart is on a level surface.
Drawers do not slide smoothly.	Drawer slides are misaligned or obstructed.	Ensure drawer slides are correctly installed and free of debris. Check for any items obstructing the drawer's path.
Wheels do not roll freely.	Brakes engaged or debris in wheels.	Disengage wheel brakes. Clean any hair or debris from around the wheel axles.
Damage during shipping.	External factors during transit.	Contact SoBuy customer service immediately with proof of purchase and photos of the damage.

8. SPECIFICATIONS

- **Model:** FKW79-W
- **Brand:** SoBuy
- **Color:** White
- **Material:** Engineered Wood (MDF)
- **Product Dimensions (L x W x H):** 68 cm x 38 cm x 85 cm (approximately 26.8 x 15 x 33.5 inches)
- **Drawer Dimensions (L x W x H):** 30 cm x 34 cm x 23 cm (approximately 11.8 x 13.4 x 9 inches)
- **Item Weight:** 17.7 kg (approximately 39 lbs)
- **Maximum Weight Recommendation:** 50 kg (approximately 110 lbs)
- **Features:** 3 drawers, 1 removable shelf, 2 fixed shelves, 4 wheels (2 with brakes)



Image 8.1: Dimensional drawing of the kitchen cart, illustrating key measurements.

9. WARRANTY AND SUPPORT

SoBuy products are designed for quality and durability. For information regarding warranty coverage, returns, or to report any issues with your product, please refer to the purchase platform's return policy or contact SoBuy customer service directly. You can typically find contact information on the seller's page or through the official SoBuy website.

Contact Information: Please refer to your purchase documentation or the SoBuy official website for the most up-to-date customer service contact details.