

HY-PRO HP04619

HY-PRO Twin Shot Foldable Basketball Arcade System

Model: HP04619

Brand: HY-PRO

1. INTRODUCTION

The HY-PRO Twin Shot Foldable Basketball Arcade System (Model HP04619) provides an engaging indoor basketball experience for one or two players. This system features an LED electronic scoring system with a countdown game clock and stadium sounds, designed to replicate an arcade environment. Its robust construction includes strong stitched side nets to keep balls in play and a convenient folding mechanism for space-saving storage.

Key Features:

- Designed for 1 or 2 players.
- Integrated LED electronic scoring system.
- Includes 4 basketballs and a pump.
- Space-saving foldable design for easy storage.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembling and operating the HY-PRO Twin Shot Basketball Arcade System. Failure to follow these instructions may result in injury or damage to the product.

- **Adult Supervision:** Always ensure adult supervision when children are using the arcade system.
- **Clear Area:** Maintain a clear playing area around the system to prevent collisions and falls.
- **Stable Surface:** Place the system on a flat, stable, and level surface to prevent tipping.
- **Proper Assembly:** Ensure all parts are correctly assembled and secured according to the instructions before use. Regularly check for loose parts.
- **Electrical Safety:** The LED scoring system requires batteries. Do not mix old and new batteries, or different types of batteries. Remove batteries if the unit is not used for extended periods.
- **Choking Hazard:** Small parts and deflated balls may pose a choking hazard to young children. Keep them out of reach.
- **Weight Limit:** Do not hang or climb on the basketball hoops or frame. This system is not designed to support human weight.

3. SETUP

While the product description indicates "Is Assembly Required: No", for a system of this nature, some initial setup, including unfolding and potentially minor component attachment, is typically necessary. Please follow the detailed instructions provided in the physical manual included with your product for precise assembly steps.

3.1 Unpacking and Component Check

1. Carefully remove all components from the packaging.
2. Verify that all parts listed in your product's packing list are present.
3. Inspect all components for any signs of damage. Contact customer support immediately if any parts are missing or damaged.

3.2 Assembly (General Guidance)

The HY-PRO Twin Shot system features a foldable design. The main frame will likely need to be unfolded and secured. Specific steps will be in your included manual, but generally involve:

- Unfolding the main frame components.
- Securing the frame using pins or locking mechanisms.
- Attaching the backboard, hoops, and netting if not pre-assembled.
- Ensuring all connections are tight and secure.



This image shows the complete HY-PRO Twin Shot Foldable Basketball Arcade System, ready for play. It features two basketball hoops, a backboard with 'HOME' and 'AWAY' sections, and side netting to contain the balls. The system is designed for indoor use and includes a ball return ramp.

3.3 LED Scoring System Battery Installation

1. Locate the battery compartment on the back of the LED scoreboard.
2. Open the compartment cover.
3. Insert the required batteries (typically AA or AAA, refer to your manual for exact type and quantity) ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

3.4 Inflating Basketballs

The system includes 4 basketballs and a pump. Use the provided pump to inflate the basketballs to the recommended pressure. Do not over-inflate.

4. OPERATING INSTRUCTIONS

Once assembled and powered, the HY-PRO Twin Shot system is ready for play.

4.1 Powering On/Off

- Locate the ON/OFF switch on the LED scoreboard.
- Flip the switch to "ON" to activate the scoring system.
- Flip the switch to "OFF" when not in use to conserve battery life.

4.2 Starting a Game

The system typically offers different game modes. Consult your product manual for specific button functions and game selections.

- **Single Player:** Select the single-player mode (if available) and begin shooting.
- **Two Players:** Each player takes a side (HOME or AWAY) and competes to score the most points within the time limit.

4.3 Understanding the LED Scoreboard



A detailed view of the electronic LED scoreboard on the HY-PRO Twin Shot Basketball Arcade System. It displays 'TIME', 'HOME' score, and 'VISITOR' score, providing real-time game information.

The LED scoreboard displays crucial game information:

- **TIME:** Shows the remaining time in the game, counting down.
- **HOME:** Displays the score for the player on the 'HOME' side.
- **VISITOR:** Displays the score for the player on the 'AWAY' (Visitor) side.

The system also includes stadium sounds that activate during gameplay and scoring events.

4.4 Gameplay

Shoot the basketballs into the hoops. The electronic sensors will detect successful shots and automatically update the score on the LED display. The ball return system will guide the balls back to the players for continuous action.

Your browser does not support the video tag.

Official product video demonstrating the features and folding mechanism of the HY-PRO Twin Shot Basketball System. This video showcases gameplay, the electronic scoreboard, side netting, and how the system can be folded for storage.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your HY-PRO Twin Shot Basketball Arcade System.

5.1 Cleaning

- Wipe down the frame, backboard, and scoreboard with a soft, damp cloth.
- Do not use abrasive cleaners or solvents, as they may damage the surfaces.
- Ensure the LED scoreboard area remains dry.

5.2 Storage

The system's foldable design allows for convenient storage:

1. Remove any basketballs from the playing area.
2. Disengage the locking pins or mechanisms that secure the frame in the open position.
3. Carefully fold the system upwards, ensuring no parts are pinched.
4. Secure the system in its folded position using the designated locking pin or strap.
5. Store in a dry, cool place away from direct sunlight.

5.3 Battery Replacement

If the LED scoreboard or sound features stop working, it may be time to replace the batteries. Follow the instructions in Section 3.3 for battery installation.

6. TROUBLESHOOTING

If you encounter issues with your HY-PRO Twin Shot Basketball Arcade System, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
LED Scoreboard not turning on or displaying correctly.	Dead or incorrectly installed batteries.	Check battery polarity. Replace with fresh batteries.
Scoreboard not registering shots.	Sensor obstruction or malfunction.	Ensure nothing is blocking the sensors under the hoops. Check for loose wiring (if accessible).
Balls not returning properly.	Obstruction in the ball return ramp or nets.	Clear any debris or objects from the ramp and nets. Ensure nets are properly attached.
System feels unstable or wobbly.	Loose assembly connections.	Re-check all locking pins and frame connections to ensure they are fully engaged and tightened.

If these steps do not resolve the issue, please contact HY-PRO customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	HY-PRO

Feature	Detail
Model Number	HP04619
UPC / GTIN	844379046197
Assembled Dimensions (L x W x H)	80.7 x 43.3 x 74.8 inches (approx. 205 x 110 x 190 cm)
Recommended Minimum Age	6 years (72 months)
Recommended Maximum Age	100 years (1200 months)
Usage Environment	Indoor
Scoring System	LED Electronic Scoreboard with Countdown Clock and Stadium Sounds
Included Accessories	4 Basketballs, 1 Pump
Special Features	Foldable design, Side Netting

8. WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please refer to the contact details provided in your product's original packaging or visit the official HY-PRO website. Keep your proof of purchase for warranty claims.

© 2026 HY-PRO. All rights reserved. Information is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question