

[Manuals.plus](#) /

› [ROMOON](#) /

› ROMOON Laundry Sorter Instruction Manual

ROMOON

ROMOON Laundry Sorter Instruction Manual

Model: 3600G

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Retain this manual for future reference.

- Ensure all components are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Keep small parts away from children during assembly to prevent choking hazards.
- Do not overload the laundry sorter. The steel frame supports up to 50 lbs (approximately 22.7 kg). Each bag holds over 20 lbs (approximately 9 kg).
- Ensure the wheels are locked when the sorter is stationary to prevent unintended movement.
- Use on a flat, stable surface to prevent tipping.
- This product is designed for indoor use only.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

1. Steel Frame Components (various bars and connectors)
2. 3 x Removable Laundry Bags (Grey canvas)
3. 4 x Heavy-Duty Casters (Wheels)
4. Assembly Hardware (if applicable, though product states 'No tools needed')
5. Instruction Manual (This document)

3. SETUP AND ASSEMBLY

The ROMOON Laundry Sorter is designed for quick and easy assembly without the need for additional tools. Follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Assemble the Base Frame:** Connect the horizontal and vertical steel bars to form the rectangular base of the sorter. Ensure all connections are secure.
3. **Attach Casters:** Insert the four heavy-duty casters into the designated holes at the bottom corners of the base frame. Push firmly until they click into place.
4. **Install Upper Frame:** Attach the upper horizontal bars and handles to the vertical supports, completing the main frame

structure.

5. **Hang Laundry Bags:** Hook the three removable laundry bags onto the upper horizontal bars. Ensure the hooks are securely seated.

Random Dispatch of New/Old Versions

	New Version	Old Version
Easy to Install	✓	✓
Structural Strength	✓	✓
Capacity	130 Liters	130 Liters



Screws*4 Removed



Spacers Removed

Old Version



31.5"
29.92" 16.93"

Fits old/new, equal capacity

New Version



31.1"
29.33" 16.93"

Figure 3.1: Comparison of Old and New Version Assembly (Note: New version simplifies assembly by removing screws and spacers).





3 removable bags



Practical handles



Heavy duty casters

Figure 3.2: Removable Bags and Heavy-Duty Casters.

4. OPERATION

The ROMOON Laundry Sorter is designed to simplify your laundry routine with its 3-section sorting system and mobile design.

- **Sorting Laundry:** Utilize the three distinct compartments to pre-sort your laundry by color, fabric type, or family member. This saves significant time on laundry day.
- **Mobility:** To move the sorter, unlock the casters by pressing the 'unlock' lever on each wheel. Push or pull the sorter using the integrated handles. To secure the sorter in place, press the 'lock' lever on each wheel.
- **Removing Bags:** Each laundry bag is removable. Simply unhook the bag from the frame using its integrated handles and

carry it directly to your washing machine. This eliminates the need to transfer clothes from a stationary hamper.

- **Capacity:** Each bag is designed to hold over 20 lbs of laundry, and the overall sorter has a capacity of 130 liters, accommodating multiple loads.



Figure 4.1: Laundry Sorter in Use.

5. MAINTENANCE

Proper maintenance will extend the life of your ROMOON Laundry Sorter.

- **Cleaning the Bags:** The laundry bags feature a waterproof lining that can be easily wiped clean with a damp cloth and mild detergent. Do not machine wash or tumble dry the bags, as this may damage the waterproof coating.
- **Cleaning the Frame:** Wipe the alloy steel frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Caster Care:** Periodically check the casters for lint or debris that may hinder smooth rolling. Clean as necessary.
- **Storage:** If not in use for an extended period, the sorter can be disassembled for compact storage.



Figure 5.1: Waterproof Lining for Easy Cleaning.

6. TROUBLESHOOTING

If you encounter any issues with your laundry sorter, refer to the following common solutions:

Problem	Possible Cause / Solution
Sorter does not roll smoothly.	Check if caster locks are engaged. Disengage them. Inspect wheels for lint, hair, or debris. Clean as needed. Ensure the sorter is not overloaded.
Frame feels unstable or wobbly.	Verify all frame connections are fully inserted and secure. Ensure the sorter is on a flat, even surface. Do not exceed the maximum weight capacity.
Laundry bags do not hang correctly.	Ensure the hooks on the bags are properly seated on the frame bars. Check if bags are overloaded, causing them to sag.

If the issue persists after attempting these solutions, please contact ROMOON customer support.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions (L x W x H)	31.1" x 16.9" x 29.3" (79 cm x 43 cm x 74.4 cm)
Material	Alloy Steel Frame, Canvas Bags
Color	Grey
Capacity	130 Liters total (approx. 20+ lbs per bag)
Item Weight	9 Pounds (approx. 4.1 kg)
Number of Compartments	3
Special Features	Removable Liner, Portable, Non-Slip, Wheeled, Handle



Figure 7.1: Product Dimensions and Capacity.

8. WARRANTY AND SUPPORT

ROMOON stands behind the quality of its products. For information regarding warranty coverage, returns, or technical support, please refer to the purchase platform or contact ROMOON customer service directly.

For the most up-to-date support information, visit the official ROMOON store or contact their customer service channels.

Online Resources: [Visit the ROMOON Store on Amazon](#)

© 2024 ROMOON. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question