

[Manuals.plus](#) /

› [Michael Kors](#) /

› Michael Kors Pyper Women's Watch MK4339 Instruction Manual

Michael Kors MK4339

Michael Kors Pyper Women's Watch MK4339 Instruction Manual

Model: MK4339

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Michael Kors Pyper Women's Watch, Model MK4339. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.



Image: Front view of the Michael Kors Pyper Women's Watch with a gold mesh band and gold dial.

PRODUCT OVERVIEW

The Michael Kors Pyper Women's Watch (Model MK4339) features a sophisticated design with a gold-tone stainless steel case and a matching gold mesh bracelet. It is equipped with a precise quartz movement and a three-hand analog display. The watch is designed for everyday wear and is water-resistant up to 50 meters (165 feet).

- **Case Material:** Stainless Steel
- **Band Material:** Stainless Steel Mesh
- **Movement:** Quartz
- **Display:** Analog, Three-Hand
- **Water Resistance:** 5 ATM (50 meters / 165 feet)
- **Dial:** Gold sunray dial with stick indexes







Image: Side view of the watch, highlighting the crown with the Michael Kors logo.

SETUP

1. Unboxing

Your Michael Kors Pyper watch comes securely packaged. Carefully remove the watch from its packaging. Inspect the watch for any visible damage.





Image: The white Michael Kors watch box.

2. Adjusting the Mesh Bracelet

The gold-tone stainless steel mesh band features a self-adjustable sliding closure for a customized fit. To adjust the band:

1. Locate the clasp on the mesh band.
2. Using a small tool (like a thin screwdriver or a paperclip), gently lift the locking plate on the clasp.
3. Slide the clasp along the mesh band to achieve the desired length.
4. Once the correct length is found, press the locking plate back down firmly until it clicks into place. Ensure it is securely fastened to prevent accidental opening.





Image: Back view of the watch, showing the mesh band and the Michael Kors branded clasp.

3. Setting the Time

1. Pull the crown (the small knob on the side of the watch case) out to the first position.
2. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its original position to start the watch movement.

OPERATING YOUR WATCH

Your Michael Kors Pyper watch operates with a reliable quartz movement, providing accurate timekeeping with its three-hand analog display (hour, minute, second). No special operation is required beyond setting the time initially.

33 MM



38 MM



40 MM



43 MM



45 MM



Image: The Michael Kors Pyper watch worn on a woman's wrist, demonstrating its appearance when in use.

MAINTENANCE

Cleaning

To maintain the appearance of your watch, regularly wipe the case and band with a soft, dry cloth. For the stainless steel mesh band, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials, as these can damage the finish.

Water Resistance

This watch is water-resistant up to 50 meters (5 ATM / 165 feet). This means it is suitable for short periods of recreational swimming in shallow water. It is **not** suitable for diving, snorkeling, or high-impact water sports. Always ensure the crown is fully pushed in before any contact with water. Avoid operating the crown while the watch is wet.

Battery Replacement

Your watch is powered by a lithium metal battery (included). When the watch stops running, it indicates the battery needs replacement. Battery replacement should be performed by a qualified watch technician to ensure the water resistance seal is maintained and to prevent damage to the movement.

TROUBLESHOOTING

- **Watch Not Running:**

- Ensure the crown is fully pushed in.
- If the watch still does not run, the battery may need to be replaced. Consult a professional watch technician.

- **Inaccurate Time:**

- Check if the crown is fully pushed in.
- Extreme temperatures or strong magnetic fields can affect quartz watch accuracy. Avoid exposing your watch to such conditions.
- If the issue persists, the movement may require servicing by a professional.

- **Band Discomfort or Looseness:**

- Re-adjust the mesh bracelet using the sliding clasp mechanism as described in the "Setup" section.
- Ensure the clasp is securely locked after adjustment.

SPECIFICATIONS

Model Number	MK4339
Case Diameter	38 millimeters
Case Thickness	7 millimeters
Band Width	18 millimeters
Band Length	8.5 inches
Material	Stainless Steel
Movement Type	Quartz
Display Type	Analog
Water Resistance Depth	50 meters (165 feet)
Crystal Type	Mineral
Clasp Type	Foldover Clasp With Push Button
Power Source	Battery Powered (1 Lithium Metal battery included)
Item Weight	79 grams (2.79 ounces)

WARRANTY AND SUPPORT

Your Michael Kors Pyper watch is covered by a manufacturer's warranty. For specific details regarding warranty coverage, duration, and claims, please refer to the warranty information provided with your purchase or visit the official Michael Kors website.

For additional support, including detailed user guides or service inquiries, you may refer to the official Michael Kors support resources. Digital versions of user manuals are often available on the manufacturer's website.

You can also find general user guides for Michael Kors watches in PDF format:

- [User Manual \(PDF\)](#)
- [User Guide \(PDF\)](#)

© 2026 Michael Kors. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question