

Severin EZ 7407

SEVERIN 2-in-1 Compact Ice Cream Maker and Yogurt Machine

Model: EZ 7407

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your SEVERIN 2-in-1 Compact Ice Cream Maker and Yogurt Machine, Model EZ 7407. Please read all instructions carefully before first use and keep this manual for future reference.

1. IMPORTANT SAFETY INSTRUCTIONS

Always observe the following safety precautions to reduce the risk of fire, electric shock, personal injury, or damage to the appliance.

- Read all instructions before operating the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Avoid contact with moving parts.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for other than intended household use.

2. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the various parts of your SEVERIN Ice Cream Maker and Yogurt Machine.



Figure 2.1: Overview of the SEVERIN EZ 7407 Ice Cream Maker and its accessories. The image displays the main unit, the removable 1.2 L mixing bowl, the transparent lid with an opening for adding ingredients, the mixing paddle, a measuring cup, and an ice cream spoon. These are the primary components included with your appliance.

- **Main Unit:** Contains the compressor for cooling and the motor for mixing.
- **Removable Mixing Bowl (1.2 L):** For preparing ice cream, sorbet, or yogurt. Easy to clean.
- **Transparent Lid:** Allows observation during operation and features an opening for adding ingredients.
- **Mixing Paddle:** Attaches to the lid and churns the ingredients.
- **Digital Display:** Shows time and temperature settings.
- **360° Rotary Knob with LED Illumination:** For setting programs, time, and temperature.
- **Measuring Cup:** For precise ingredient measurement.
- **Ice Cream Spoon:** For serving your homemade frozen treats.

3. SETUP

3.1. Unpacking and Initial Cleaning

1. Carefully remove all packaging materials and promotional labels from the appliance.
2. Wash the removable mixing bowl, transparent lid, mixing paddle, measuring cup, and ice cream spoon in warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.

3.2. Placement

Place the appliance on a stable, flat, and dry surface. Ensure there is adequate ventilation around the unit, especially around the air vents on the sides and back, to allow the compressor to function efficiently.



Figure 3.1: The SEVERIN EZ 7407 appliance ready for use on a countertop. This image shows the compact design of the machine, highlighting its black body and silver top panel with the digital display and control knob.

4. OPERATING INSTRUCTIONS

4.1. General Operation

The appliance features a digital display for time and temperature settings, and a 360° rotary knob with LED illumination for easy control.



Figure 4.1: Detail of the control panel, showing the digital timer set to 30 minutes and a snowflake icon indicating cooling mode. The illuminated rotary knob is visible on the right.

4.2. Making Ice Cream or Sorbet

1. Prepare your desired ice cream or sorbet mixture according to a recipe. Ensure ingredients are well-chilled for best results.
2. Place the mixing bowl into the main unit. Insert the mixing paddle into the bowl and secure the transparent lid.
3. Pour the mixture into the mixing bowl through the opening in the lid.
4. Select the appropriate program using the rotary knob. The appliance will automatically cool and churn the mixture.
5. You can add additional ingredients like chocolate chips, nuts, or fruit pieces through the lid opening during the last few minutes of churning.
6. Once the preparation time is complete, the automatic "KeepCooling" function will activate, maintaining the temperature for up to 60 minutes to prevent melting.
7. Serve immediately or transfer to an airtight container and store in the freezer.



Figure 4.2: A split view inside the mixing bowl, demonstrating the machine's capability to produce both ice cream (left) and yogurt (right). This highlights the versatility of the appliance.

4.3. Making Yogurt

1. Prepare your yogurt mixture according to a recipe. This typically involves heating milk and adding a yogurt starter culture.
2. Pour the mixture into the removable mixing bowl.
3. Place the bowl into the main unit and secure the transparent lid. The mixing paddle is generally not used for yogurt making.
4. Select the yogurt program using the rotary knob. The appliance will maintain the optimal temperature for fermentation.
5. Once the yogurt program is complete, the yogurt can be chilled in the refrigerator.



Figure 4.3: The SEVERIN EZ 7407 positioned next to a bottle of milk, symbolizing its dual functionality for both ice cream and yogurt preparation. This image emphasizes the primary ingredient for yogurt making.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your appliance.

1. Always unplug the appliance from the power outlet before cleaning.
2. Remove the mixing bowl, lid, and mixing paddle. Wash these parts in warm, soapy water. They are also dishwasher-safe (top rack recommended).
3. Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or scourers.
4. Ensure all parts are completely dry before reassembling or storing the appliance.
5. Do not immerse the main unit in water or any other liquid.

6. TROUBLESHOOTING

If you encounter any issues with your appliance, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection; check circuit breaker; try a different outlet.
Ice cream is too soft or not freezing.	Ingredients not sufficiently chilled; mixture too large; ambient temperature too high.	Ensure ingredients are pre-chilled; reduce batch size; operate in a cooler environment.
Yogurt is not setting.	Incorrect milk temperature; insufficient starter culture; poor quality starter.	Ensure milk is at correct temperature before adding culture; use fresh, active starter culture.
Loud noise during operation.	Mixing paddle not properly installed; appliance not on a flat surface.	Re-install mixing paddle correctly; ensure appliance is on a stable, flat surface.

7. SPECIFICATIONS

Key technical specifications for the SEVERIN EZ 7407 Ice Cream Maker and Yogurt Machine:

- Brand:** Severin
- Model Number:** EZ 7407
- Color:** Black
- Dimensions (L x W x H):** 33.5 x 30.5 x 42 cm (13.2 x 12 x 16.5 inches)
- Capacity:** 1.2 Liters
- Power:** 135 Watts
- Voltage:** 230 Volts
- Material:** Stainless steel, plastic
- Item Weight:** 8.84 Kilograms (19.49 lbs)
- Special Features:** Digital timer, adjustable to the minute, temperature display, automatic keep-cooling function (60 min).

8. WARRANTY AND SUPPORT

SEVERIN products are designed for performance, ease of use, and durability. This appliance is covered by a manufacturer’s warranty. For detailed warranty information, service, or support, please refer to the warranty card included with your purchase or visit the official SEVERIN website. Please retain your proof of purchase for warranty claims. For further assistance, you may contact SEVERIN customer service through their official channels. Contact information is typically provided in the product packaging or on the manufacturer's website.



ART - NO	EN TUGS / EN TUGS	
DE	Gedragsoverdracht	4
DE	Instructies for use	1
FR	Mode d'emploi	13
NL	Gedragsaanwijzing	17
EN	Instructions de use	23
IT	Manuale d'uso	28
DE	Drugsanweisung	33
SE	Dröglanvisning	37
PL	Kartychka	41
PL	Instrukcja obsługi	46
DE	Ölölátó, előírás	50
RU	Руководство по эксплуатации	56

Comprehensive user manual for the SEVERIN EZ 7405 and EZ 7406 ice cream maker with yoghurt function. Learn about setup, operation, safety instructions, cleaning, and troubleshooting for making ice cream and yoghurt.



ART-NO. 30 3581			
DE	Gebühren für Mietvertrag	Digitaler Aufgabendruck	4
DE	Instructions for use	Digitaler postscript maker	9
FR	Mode d'emploi	Impression numérique	10
NL	Gedruisde instructie	Digitaler postscript maker	20
ES	Instrucciones de uso	Impresora digital	24
IT	Manuale d'uso	Impresora digitale	25
DE	Benutzungsanleitung	Digitaler Aufgabendruck	32
SE	Användningsanvisning	Digitaler postscript maker	33
FI	Käyttöohje	Digitalinen postscriptilmoitus	34
PT	Manual de instruções	Impressora digital	76
PL	Instrukcja obsługi	Wydruk postscriptowa	82
DE	Öffentliche Anhörung	Öffentliche Anhörungstermin (öffentliche)	

Entdecken Sie den SEVERIN JG 3521 Digitalen Joghurtbereiter. Diese Anleitung bietet detaillierte Informationen zur Verwendung, Sicherheit und Rezepten für die Zubereitung von hausgemachtem Joghurt.



DE	Bedienungsanleitung	Standard	4
GB	Instructions for use	Standard	10
FR	Mode d'emploi	Milieu	16
NL	Gebruiksaanwijzing	Standard	22

Comprehensive user manual for the SEVERIN SM 3707 blender, covering safety, operation, cleaning, and recipes. Model *910.036.



ABT -MO	SM 3566	
06	Gefährdungsbeurteilung	Induktive: Mittelelektrolyseur
08	Arbeitsmittel für eine	Induktions-App: mit Brother
09	Wiederherstellung	Minimale: 1 bis 10 Sekunden
10	Gefährdungsbeurteilung	Indukt für einsteckbare

Comprehensive user manual for the Severin SM 3585 Induction Milk Frother, covering operation, safety, cleaning, and troubleshooting for frothing milk and preparing hot beverages.



ADT-NC	VNR 3472	
SE	Geburtshilfeunterricht	4
SE	Instructions for use	4
PE	Male fertility	5
ME	Geburtshilfeuntersuchung	21
SE	Instructions des élèves	27
IT	Manuale d'uso	30
DE	Begrüßungsansatz	30
SE	Bruidsaanspraken	30
FI	Käytöohje	30
PT	Manual de instruções	40
PL	Instrukcja obsługi	50
DE	Öbungsfragen	50
	Wascherbücher	4
	Elettri kettje	4
	Bouillon électrique	5
	Elektrische waschebier	21
	Manuel de usage électrique	27
	Bouillon d'usage électrique	30
	Elektrisk vaschebier	30
	Elektrisk vasketender	30
	Vaschebier	40
	Jarno elettrico	50
	Cappelli elettrico	50
	Holzsapfen, Sperrriegel, Spindel	

Finden Sie detaillierte Anleitungen und wichtige Sicherheitshinweise für den SEVERIN Wasserkocher WK 3472. Erfahren Sie mehr über Anschluss, Bedienung, Reinigung und Wartung.



ART.-NO.	FKS 8861	
DE	Gebrauchsanleitung	Fischnet-Gülschrank
GB	Instructions for use	Magnetron 167 bottles
FR	Mode d'emploi	Magnetron pour bouteilles
NL	Gebrauchsaanwijzing	Kookvat voor flessen
ES	Instrucciones de uso	Fogor Fő para botellas
PT	Manual de uso	Magnetron por botellas
DK	Brugsanvisning	Kølestatik til flasker
SE	Brugsanvisning	Hyldig för flaskor
FI	Käyttöohje	Jääkaappi pulliste
PT	Manual de instruções	Fogor Fő de garrafas
PL	Instrukcja obsługi	Ostudarka do napojów butelkow.
GR	Οδηγίες χρήσης	Υψογύ για ποτάκια

Entdecken Sie die detaillierte Bedienungsanleitung und das Produktdatenblatt für den SEVERIN FKS 8841 Flaschenkühlschrank. Erfahren Sie mehr über Installation, Bedienung, Sicherheitshinweise und technische Spezifikationen dieses hochwertigen Geräts von SEVERIN.

