



Manuals.plus /

› DOMETIC /

› Dometic SMEVA 2-Burner Cooker with Glass Lid - Instruction Manual

DOMETIC FRES-673

Dometic SMEVA 2-Burner Cooker with Glass Lid - Instruction Manual

Model: FRES-673 | Manufacturer Part No: 105310683/5

1. INTRODUCTION

Thank you for choosing the Dometic SMEVA 2-Burner Cooker with Glass Lid. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read this manual thoroughly before use and keep it for future reference.

2. SAFETY INFORMATION

Always adhere to the following safety precautions to prevent injury or damage to the appliance.

- Ensure proper ventilation when operating the cooker.
- Do not leave the cooker unattended while in use.
- Keep flammable materials away from the appliance.
- Allow the cooker to cool completely before cleaning or storage.
- Only use the recommended gas type and pressure for this appliance.
- Regularly check gas connections for leaks.

3. PRODUCT OVERVIEW

The Dometic SMEVA 2-Burner Cooker is a compact and efficient cooking solution, ideal for recreational vehicles and marine applications. It features two powerful burners and a durable glass lid that doubles as a workspace when closed.



An overhead view of the Dometic SMEVA 2-burner cooker's dark glass lid, showing its rounded corners, two small mounting holes at the top, and a larger circular opening at the bottom center, likely for a handle or control.

Key features include: 1 piece, highly efficient, easy to use.

4. SETUP AND INSTALLATION

Installation should be performed by a qualified professional in accordance with local regulations and standards.

1. **Unpacking:** Carefully remove the cooker from its packaging. Inspect for any damage.
2. **Mounting:** Securely mount the cooker in a stable, level position, ensuring adequate clearance from combustible materials.
3. **Gas Connection:** Connect the gas supply line to the cooker's inlet. Use appropriate fittings and ensure all connections are leak-free.
4. **Ventilation:** Verify that the installation area has proper ventilation as required for gas appliances.
5. **Testing:** Before first use, perform a leak test on all gas connections and test the ignition of both burners.

5. OPERATING INSTRUCTIONS

Follow these steps to operate your Dometic SMEVA cooker:

1. **Prepare:** Ensure the glass lid is open and secured. Place your cookware on the burner grates.
2. **Ignition:** Push and turn the control knob for the desired burner to the ignition position. Hold for a few seconds while the igniter sparks.
3. **Adjust Flame:** Once the flame is lit, release the knob and adjust the flame intensity by turning the knob between the minimum and maximum settings.
4. **Turn Off:** To turn off a burner, turn the control knob to the 'OFF' position. Ensure the flame is extinguished.
5. **After Use:** Allow the burners to cool before closing the glass lid.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your cooker.

- **Daily Cleaning:** After each use, wipe down the cooking surface and glass lid with a damp cloth and mild

detergent.

- **Burner Cleaning:** Periodically remove the burner caps and crowns. Clean them with warm soapy water. Ensure they are completely dry before reassembling.
- **Glass Lid:** The glass lid can be washed in a dishwasher or by hand.
- **Inspection:** Regularly inspect gas hoses and connections for any signs of wear or damage. Replace if necessary.
- **Professional Service:** It is recommended to have the appliance serviced by a qualified technician annually.

7. TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Burner does not ignite	No gas supply; Clogged burner; Faulty igniter	Check gas cylinder/connection; Clean burner ports; Contact service technician
Flame is weak or uneven	Low gas pressure; Partially clogged burner	Check gas supply; Clean burner ports
Gas smell detected	Gas leak	Immediately turn off gas supply, ventilate area, and contact a qualified technician. Do not use the appliance.

8. SPECIFICATIONS

Attribute	Value
Brand	DOMETIC
Model Number	FRES-673
Manufacturer Part Number	105310683/5
Product Dimensions	25 x 18 x 20 cm
Item Weight	1 kg
Number of Pieces	1
Dishwasher Safe	Yes (Glass Lid)
Microwave Safe	Yes (Glass Lid)
Assembly Required	No

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase

or visit the official Dometic website. Keep your proof of purchase for any warranty claims.