

Smartby AKB74915305

Smartby AKB74915305 Remote Control User Manual

Model: AKB74915305 | Brand: Smartby

INTRODUCTION

This manual provides instructions for the Smartby AKB74915305 replacement remote control, designed for various LG TV models. This remote offers a direct replacement solution, requiring no complex programming or pairing. Simply insert batteries, and it is ready for use.

The AKB74915305 remote control is compatible with a wide range of LG TV models, including but not limited to: 98UH9800, 86UH9500, 75UH8500, 75UH6550, 70UH6350, 70UH6330, 65UH9500, 65UH8500, 65UH7700, 65UH7650, 65UH7500, 65UH6550, 65UH615A, 65UH6150, 65UH6030, 65UH5500, 60UH8500, 60UH7700, 60UH7650, 60UH7500, 60UH6550, 60UH615A, 60UH6150, 60UH6090, 60UH6035, 60UH6030, 58UH6300, 55UH8500, 55UH7700, 55UH7650, 55UH7500, 55UH6550, 55UH615A, 55UH6150, 55UH6090, 55UH6030, 50UH6300, 50UH5530, 49UH7700, 49UH7500, 49UH6500, 49UH610A, 49UH6100, 49UH6090, 49UH6030, 43UH7500, 43UH6500, 43UH610A, 43UH6100, 43UH6030.

SETUP

Battery Installation

The Smartby AKB74915305 remote control operates on two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: This remote control does not require any programming or pairing. Once batteries are installed, it is ready for immediate use with compatible LG TVs.



Image: Rear view of the remote control, highlighting the battery compartment cover. The cover has a textured grip and an arrow indicating the slide direction for opening.

OPERATING INSTRUCTIONS

Point the remote control directly at your LG TV's infrared receiver. Ensure there are no obstructions between the remote and the TV. Press the desired button to perform the corresponding function.



Image: Front view of the Smartby AKB74915305 remote control, displaying all buttons and their labels. The remote has a brushed black finish.

Key Functions

- **Power ()**: Turns the TV on or off.
- **TV**: Switches the input source to TV mode.
- **Caption**: Activates or deactivates closed captions.
- **Number Pad (0-9)**: Directly enters channel numbers.
- **LIST**: Displays a list of channels or recorded programs.
- **FAV**: Accesses favorite channels.
- **FLASHBK**: Returns to the previously viewed channel.
- **VOL (+/-)**: Adjusts the volume level.
- **Mute ()**: Mutes or unmutes the TV sound.
- **INFO**: Displays information about the current program.
- **CH PAGE (▲/▼)**: Changes channels up or down.
- **RECENT**: Accesses recently viewed content or apps.
- **Home ()**: Opens the TV's Smart Home menu.
- **LIVE MENU**: Accesses the Live TV menu.
- **Settings (⚙)**: Opens the TV's settings menu.
- **LIVE ZOOM**: Activates or deactivates the Live Zoom feature.
- **Navigation Buttons (▲ ▼ ◀▶)**: Navigates through menus and options.
- **OK**: Confirms a selection.
- **BACK**: Returns to the previous screen or menu.
- **EXIT**: Exits the current menu or application.
- **SAP/***: Accesses Secondary Audio Program or other special functions.
- **SLEEP**: Sets the TV's sleep timer.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward)**: Controls media playback.
- **Color Buttons (Red, Green, Yellow, Blue)**: Used for specific functions within certain applications or menus, as indicated on the TV screen.

MAINTENANCE

Cleaning

To clean your remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the

same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

Storage

When not in use for extended periods, remove the batteries to prevent potential leakage and damage to the remote control. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's infrared receiver.
 - Ensure you are within the effective range of the TV's IR receiver.
- **Specific buttons not working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be interfering.
 - If only a few buttons are affected, it might indicate internal damage. Consider replacing the remote.
- **TV not turning on/off:**
 - Verify that the TV itself is plugged into a power source and is not in standby mode due to a power outage.
 - Try using the power button directly on the TV to confirm it's functional.

SPECIFICATIONS

Model Number	AKB74915305
Brand	Smartby
Compatible Devices	LG Televisions (various models, see Introduction)
Power Source	2 x AAA Batteries (not included)
Color	Black
Product Dimensions	6.7 x 1.8 x 0.6 inches (17 x 4.6 x 1.5 cm)
Item Weight	2.08 ounces (59 grams)
Special Feature	Ergonomic design

WARRANTY INFORMATION

Specific warranty details for the Smartby AKB74915305 remote control may vary depending on the retailer and region of purchase. Please refer to your purchase documentation or contact the seller directly for information regarding warranty coverage and terms.

Generally, replacement remote controls are covered against manufacturing defects for a limited period. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you encounter any issues that cannot be resolved using the troubleshooting guide, or if you require further assistance, please contact the seller or manufacturer directly. Their contact information can usually be found on your purchase invoice or the product packaging.

When contacting support, please have the following information ready:

- Product Model: AKB74915305
- Date of Purchase
- Description of the issue

© 2026 Smartby. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question