

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components 8318084 Washer Lid Switch User Manual

UpStart Components AP-8318084-5PK-DL1019

UpStart Components 8318084 Washer Lid Switch User Manual

Model: AP-8318084-5PK-DL1019

INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of the UpStart Components 8318084 Washer Lid Switch. This replacement part is designed to restore proper functionality to your washing machine's lid safety mechanism.



Components

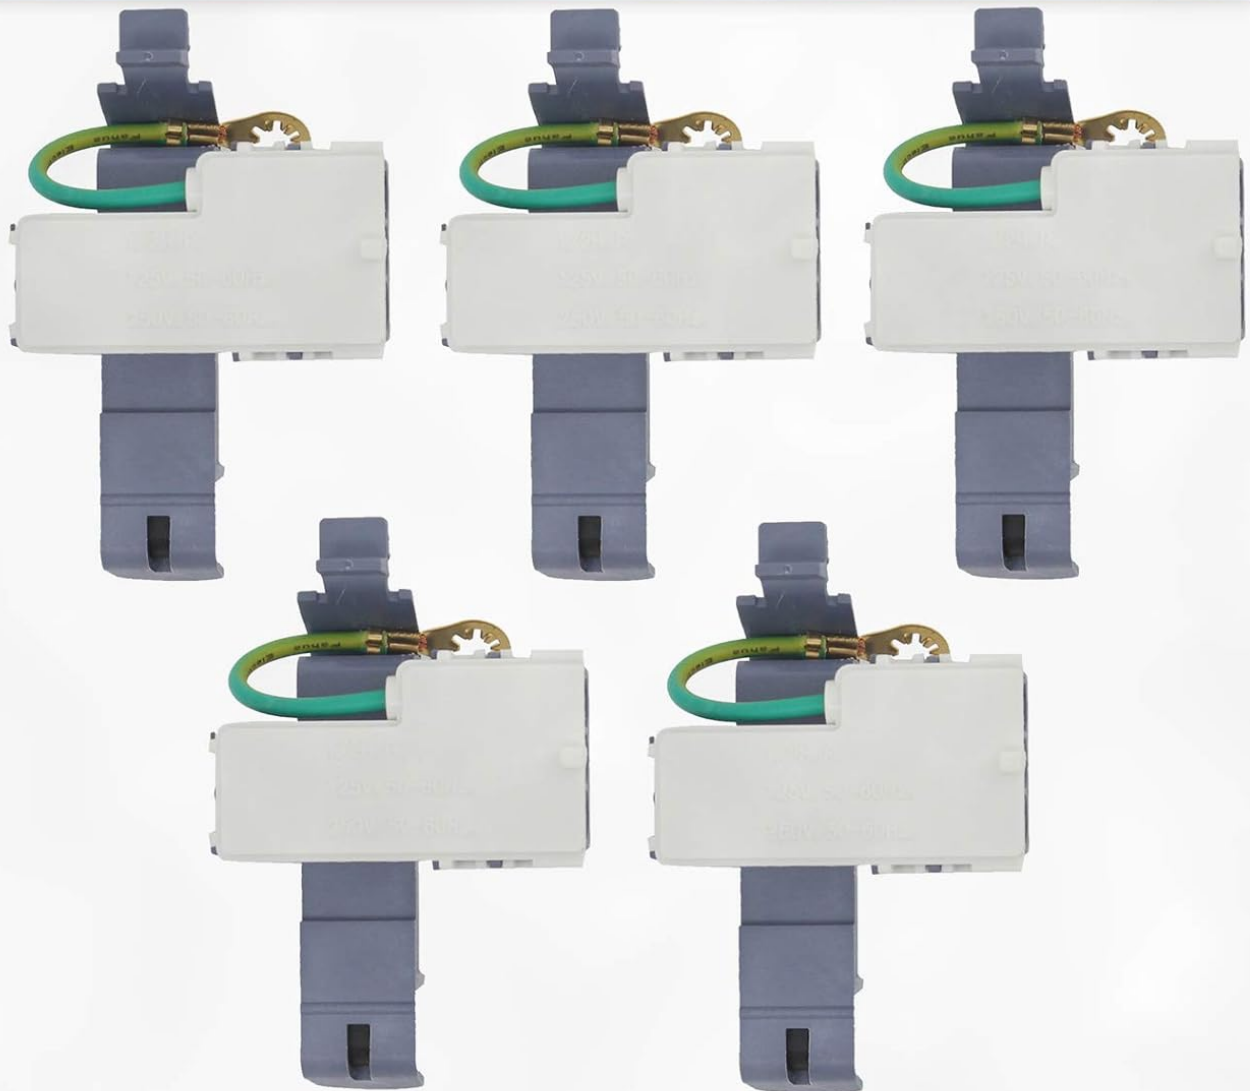


Image: A pack of five UpStart Components 8318084 washer lid switches, ready for installation.

COMPATIBILITY

The UpStart Components 8318084 Washer Lid Switch is compatible with various washing machine models, including the Whirlpool LSR7133PQ2 Washer. It is designed as a direct replacement for the following part numbers:

- WP8318084
- AP6012742
- 8318084
- ES8084

- PS11745957
- TJ90ES8084
- WP8318084VP

Always verify compatibility with your appliance's existing part number before installation.

IMPORTANT SAFETY INFORMATION

Before attempting any repair or installation, please read and understand all safety precautions. Failure to follow these instructions may result in personal injury or property damage.

- **Disconnect Power:** Always unplug the washing machine from the electrical outlet or turn off the circuit breaker before beginning any work.
- **Wear Protective Gear:** Use appropriate personal protective equipment, such as gloves and safety glasses.
- **Professional Assistance:** If you are unsure about any step, consult a qualified appliance repair technician.
- **Handle with Care:** Components may have sharp edges or pinch points.

INSTALLATION GUIDE

This section outlines the general steps for replacing a washer lid switch. Specific procedures may vary slightly depending on your washing machine model. Refer to your appliance's service manual for detailed instructions if available.

Tools Required:

- Screwdriver (Phillips and/or Flathead)
- Nut Driver or Socket Wrench (if applicable)
- Pliers (optional)

Step-by-Step Installation:

1. **Disconnect Power:** Unplug the washing machine from the wall outlet. This is a critical safety step.
2. **Access the Lid Switch:**

Depending on your washer model, you may need to:

- Lift the control panel: Often, there are screws at the back or clips at the front.
- Remove the washer cabinet: Some models require removing the entire outer cabinet.

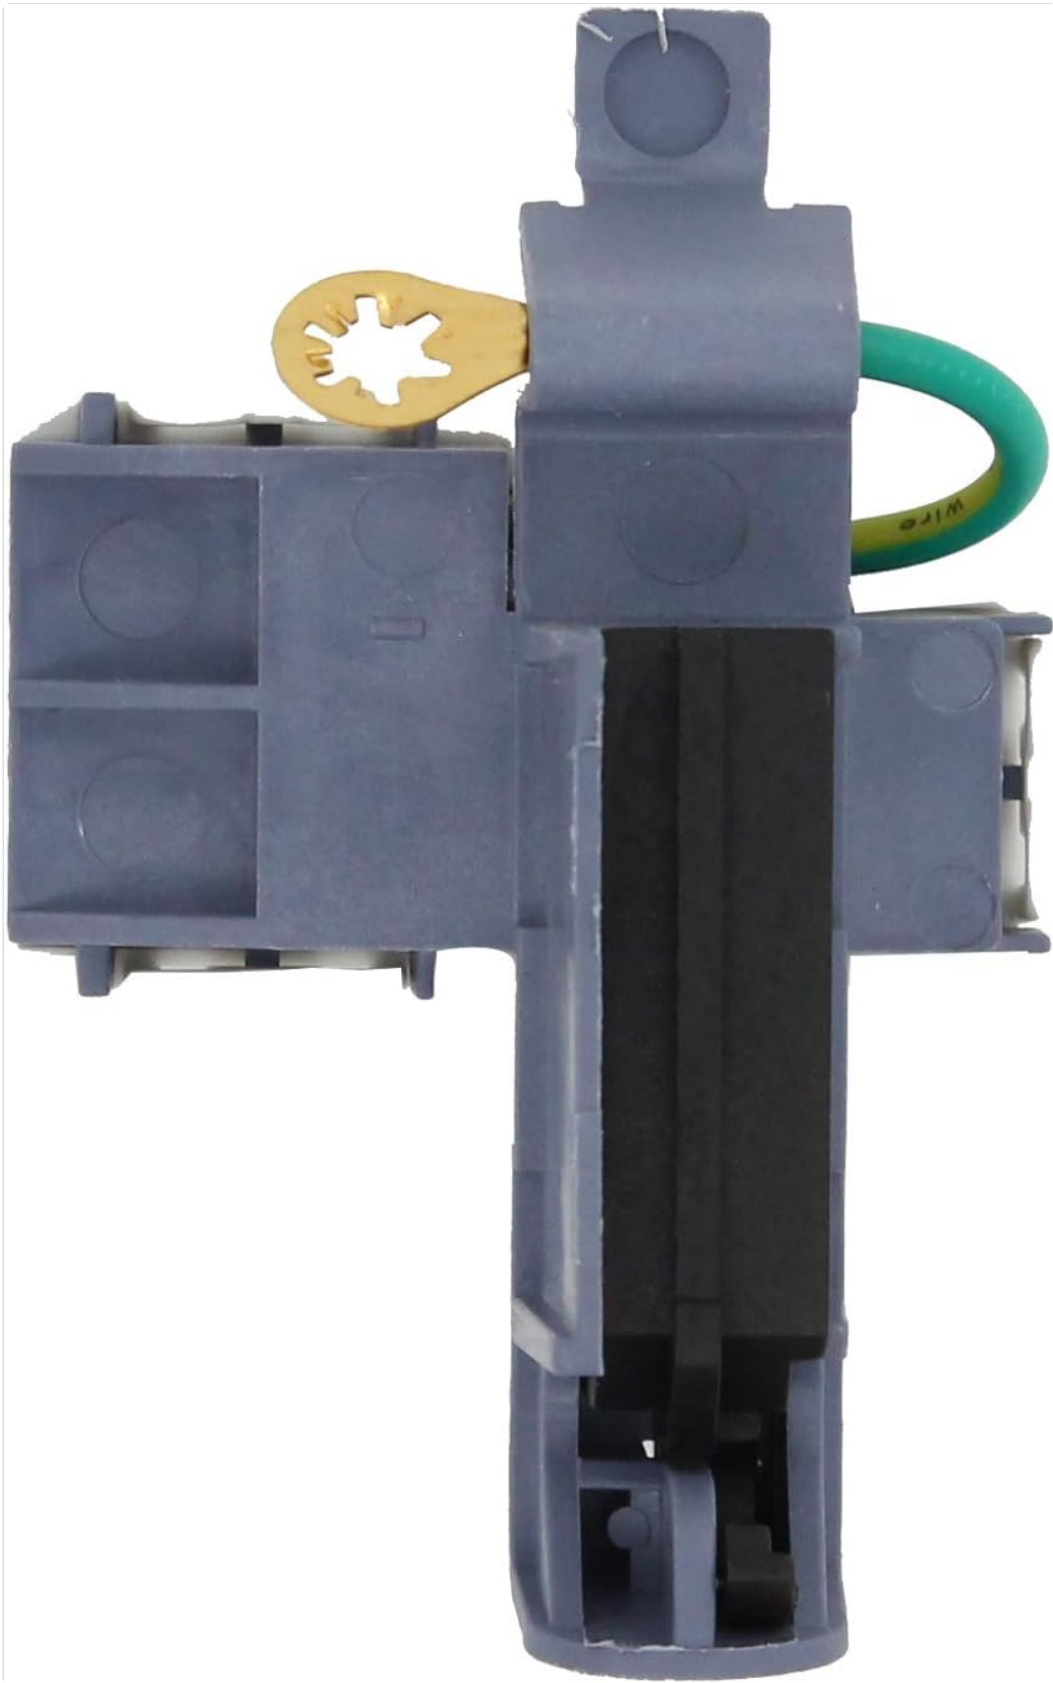


Image: A side view of the lid switch, showing its general shape and connection points.

3. **Locate the Old Switch:** The lid switch is typically located near the lid hinge, often mounted to the washer's top frame.
4. **Disconnect Wiring:** Carefully disconnect the electrical wires connected to the old lid switch. Note their positions or take a photo for reference if necessary.
5. **Remove the Old Switch:** Unscrew or unclip the old lid switch from its mounting bracket.
6. **Install the New Switch:**
Position the new UpStart Components 8318084 lid switch in the same location as the old one. Secure it with the

screws or clips.



Image: A close-up of the lid switch, highlighting the electrical specifications (125V, 250V).

7. **Reconnect Wiring:** Connect the electrical wires to the new switch, ensuring they are securely attached to the correct terminals.
8. **Reassemble Washer:** Reattach the control panel or washer cabinet, ensuring all screws and clips are properly secured.
9. **Test Functionality:** Plug the washing machine back into the electrical outlet. Close the lid and start a short cycle to confirm the new lid switch is functioning correctly and the washer operates as expected.

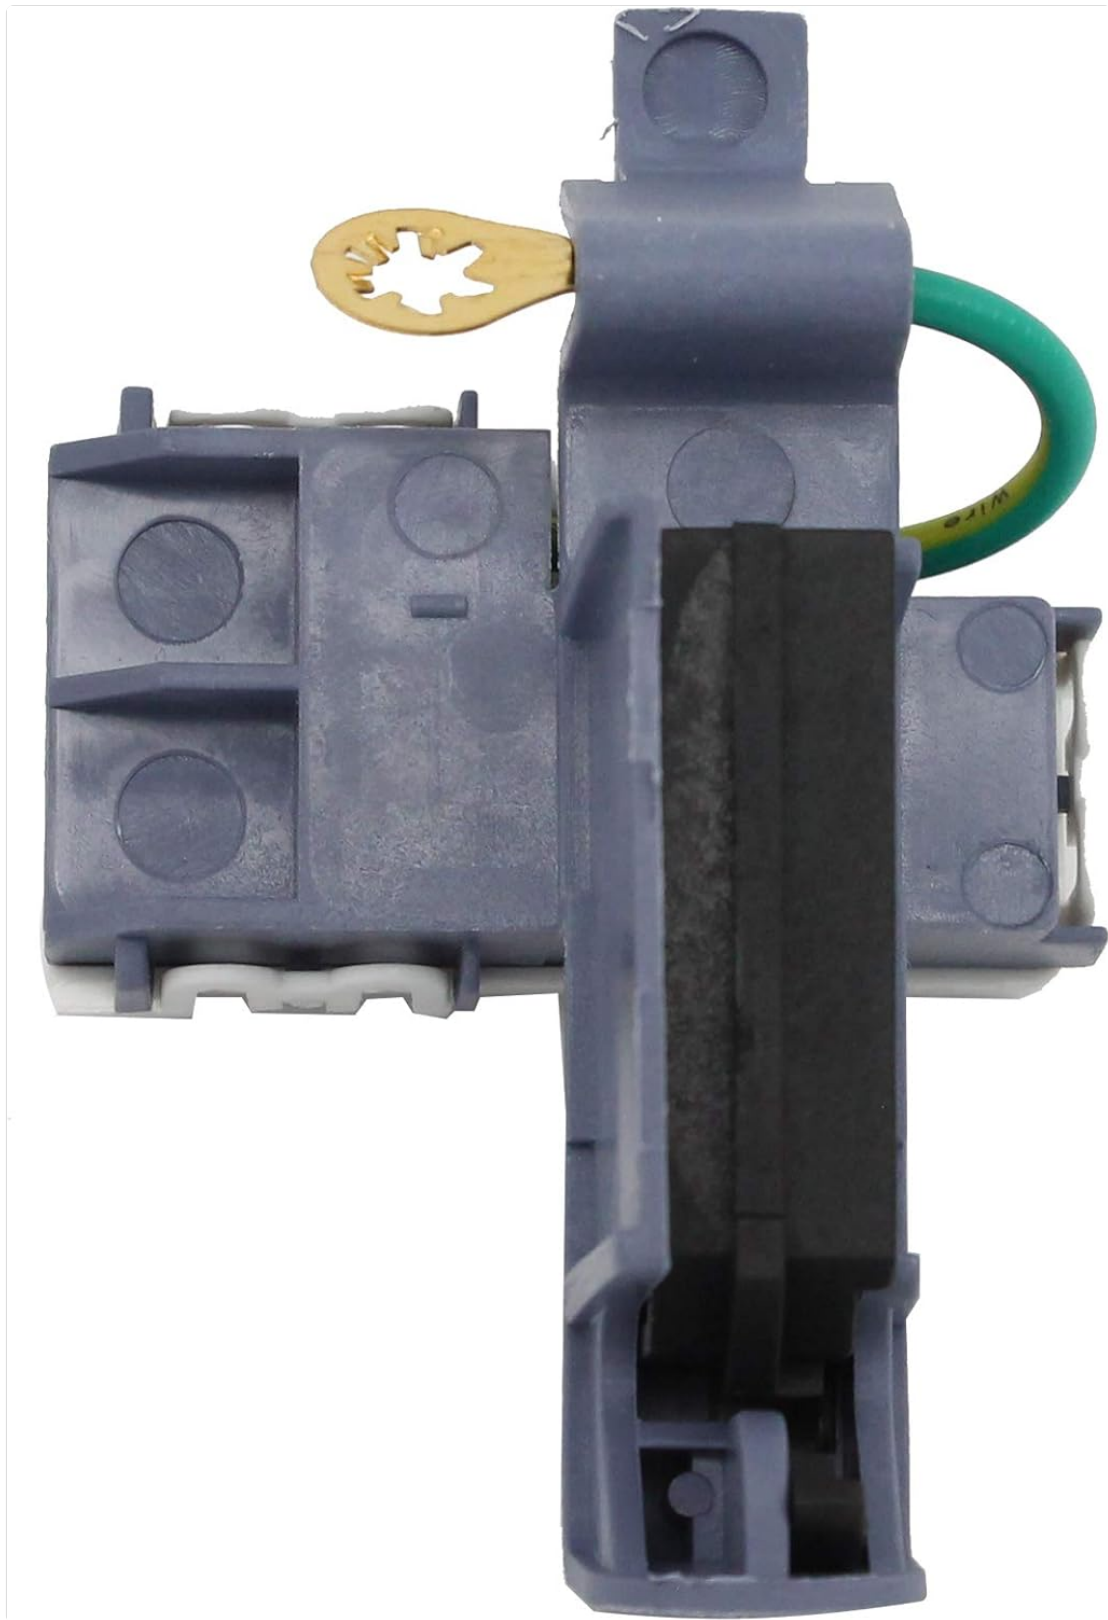


Image: A top-down view of the lid switch, showing the overall component layout.

OPERATION

The 8318084 Washer Lid Switch is a safety component that prevents the washing machine from operating when the lid is open. Once installed, its operation is automatic and integrated into the washer's control system. When the lid is closed, the switch engages, allowing the wash cycle to proceed. If the lid is opened during operation, the switch disengages, pausing or stopping the cycle to prevent injury or water spillage.

MAINTENANCE

The UpStart Components 8318084 Washer Lid Switch is designed for durability and typically requires no routine maintenance. However, to ensure the longevity of your appliance and its components:

- **Keep Area Clean:** Ensure the area around the lid and hinge is free from debris, lint, or detergent residue that could obstruct the switch mechanism.
- **Avoid Forceful Closing:** Close the washer lid gently to prevent undue stress on the switch and hinge assembly.
- **Regular Inspections:** Periodically check the lid switch for any visible signs of wear or damage.

TROUBLESHOOTING

If your washing machine is experiencing issues related to the lid switch, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Washer does not start or fill with water when lid is closed.	Faulty lid switch, lid not fully closing, or wiring issue.	Ensure lid closes completely. Inspect lid switch for damage. Check wiring connections. Replace lid switch if faulty.
Washer stops mid-cycle.	Intermittent lid switch failure or lid opening slightly during cycle.	Verify lid remains securely closed. Replace lid switch if it's intermittently failing.
Washer drains but does not spin.	Lid switch not signaling "closed" for spin cycle.	Confirm lid is fully closed. Replace lid switch if it's not properly engaging the spin function.

If troubleshooting steps do not resolve the issue, it is recommended to consult a qualified appliance repair technician.

SPECIFICATIONS

Brand	UpStart Components
Model Number	AP-8318084-5PK-DL1019
Compatible Part Numbers	WP8318084, AP6012742, 8318084, ES8084, PS11745957, TJ90ES8084, WP8318084VP
Quantity	5-Pack
ASIN	B07QW9Q85W

WARRANTY INFORMATION

This product is an UpStart Components Brand replacement part. Any warranties for this product are offered solely by UpStart Components. This product is not affiliated with any other brands mentioned and is not covered under any warranties offered by the original manufacturers of the appliances it is compatible with.

For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact UpStart Components directly.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding the UpStart Components 8318084 Washer Lid Switch, please contact UpStart Components customer service. When contacting support, please have your product model number (AP-8318084-5PK-DL1019) and purchase details available.

Note: Contact information for UpStart Components is typically found on their official website or product packaging.

© 2024 UpStart Components. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question