

MEBUYZ YW-E18

MEBUYZ YW-E18 True Wireless Earbuds User Manual

Model: YW-E18 | Brand: MEBUYZ

1. INTRODUCTION

Thank you for choosing the MEBUYZ YW-E18 True Wireless Earbuds. This manual provides essential information for setting up, operating, and maintaining your earbuds to ensure optimal performance and longevity. Please read this manual thoroughly before use.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- MEBUYZ YW-E18 True Wireless Earbuds (Left and Right)
- Portable Charging Case
- USB Charging Cable
- Multiple Sizes of Eartips (S, M, L, XL)
- User Manual (This document)



Image: Contents of the MEBUYZ YW-E18 earbud package, including earbuds, charging case, USB cable, and various eartip sizes.

3. PRODUCT OVERVIEW

The MEBUYZ YW-E18 earbuds are designed for a comfortable and secure fit, featuring a compact charging case for portability and extended battery life.



Image: The MEBUYZ YW-E18 True Wireless Earbuds resting in their open charging case, illustrating their compact design and charging contacts.

Earbud Components

- **Multi-Function Button (MFB):** Located on the outer surface of each earbud for controlling playback, calls, and voice assistant.
- **LED Indicator:** Displays pairing status, charging status, and power.
- **Microphone:** Built-in for hands-free calls.
- **Charging Contacts:** Located on the bottom of each earbud for charging within the case.

Charging Case Components

- **Earbud Charging Slots:** Securely hold and charge the earbuds.
- **Charging Case LED Indicator:** Shows the charging status of the case.
- **USB Charging Port:** For connecting the USB cable to charge the case.

4. SETUP

4.1 Charging the Earbuds and Charging Case

Before first use, fully charge both the earbuds and the charging case.

1. **Charge the Charging Case:** Connect the provided USB charging cable to the charging port on the case and a USB power source (e.g., computer, wall adapter). The case LED indicator will show charging status. A full charge takes approximately 6.5 hours.
2. **Charge the Earbuds:** Place the earbuds into their respective slots in the charging case. Ensure the charging contacts align. The earbuds will automatically begin charging. The earbud LED indicators will show charging status. A full charge for the earbuds takes approximately 1.5 hours.

High-Efficiency Micro-Battery of Earbuds
Adopt the Latest Chip

Bluetooth 5.0

6Hrs	24Hrs	100Hrs	1.5Hrs
Playing time on a Single charge	Playing time with charging case	Standby Time for earbuds	Charging time for Earbuds

Image: Graphic illustrating the battery performance of the MEBUYZ YW-E18 earbuds, showing 6 hours playtime on a single charge, 24 hours total with the charging case, 100 hours standby, and 1.5 hours charging time for earbuds.

4.2 Pairing with a Bluetooth Device

The earbuds utilize Bluetooth 5.0 for a stable connection.

1. **Power On:** Take both earbuds out of the charging case. They will automatically power on and attempt to connect to each other. You will hear an audible prompt indicating they are connected.
2. **Enable Bluetooth:** On your device (smartphone, tablet, laptop), enable Bluetooth.
3. **Select Device:** In your device's Bluetooth settings, search for available devices and select "MEBUYZ E18".
4. **Confirm Connection:** Once paired, you will hear a confirmation sound from the earbuds. The earbuds will automatically reconnect to the last paired device when removed from the case.

5. OPERATING INSTRUCTIONS

5.1 Multi-Function Button (MFB) Controls

Each earbud has an MFB for various functions. Both left (L) and right (R) earbuds can perform these actions:

- **Play/Pause:** Short press the MFB once (L/R).
- **Next Song:** Long press the MFB for 2 seconds (R).
- **Previous Song:** Long press the MFB for 2 seconds (L).
- **Answer/End Call:** Short press the MFB once (L/R).
- **Reject Call:** Press the MFB for 2 seconds (L/R).
- **Activate Voice Assistant (Siri/Google Assistant):** Short press the MFB twice (L/R).

ONE TAP CONTROL



Function Button

- | | | |
|---|---|---|
|  |  | short press button once (L/R) |
|  |  | Long press button 2Sec (L/R) |
|  | | Short press button twice(L/R) |
|  |  | Short press button once(L/R)
(call answer/end) |
|  | | press button 2Sec (L/R)
(call Reject) |

Image: Diagram illustrating the 'One Tap Control' functions of the MEBUYZ YW-E18 earbuds, detailing actions for short press, long press, and double press on the multi-function button for playback, calls, and voice assistant.

5.2 Mono and Binaural Modes

The earbuds support both single-ear (mono) and dual-ear (binaural) usage.

- **Mono Mode:** Either earbud can be used independently. Simply take one earbud out of the case, and it will connect to your device. This is useful for maintaining awareness of your surroundings or extending listening time by alternating earbuds.
- **Binaural (TWS) Mode:** Use both earbuds together for a full stereo audio experience. Both earbuds will automatically connect to each other and then to your device when removed from the case.



Mono mode: Pay attention to your surroundings when you on street or driving



TWS mode: Enjoy high-quality stereo sounding or Share your fun with your friends

Image: Two scenarios demonstrating earbud usage: a person driving with one earbud in (Mono mode for situational awareness) and two people sharing earbuds (TWS mode for shared listening).

6. MAINTENANCE

6.1 Cleaning

Regular cleaning helps maintain sound quality and hygiene.

- Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove eartips and clean any earwax or debris from the earbud nozzles using a small brush or cotton swab.

- Ensure charging contacts on both earbuds and case are clean and dry.

6.2 Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged.

- Store in a cool, dry place, away from extreme temperatures and direct sunlight.

6.3 IPX5 Waterproof Rating

The MEBUYZ YW-E18 earbuds are IPX5 rated, meaning they are protected against low-pressure water jets from any direction. This makes them suitable for sports and workouts where they may be exposed to sweat or light rain.

- Do not submerge the earbuds in water.
- Ensure earbuds are dry before placing them back into the charging case to prevent damage to the charging contacts.

Certificated IPX5 Waterproof

Sweat Proof | Rain Proof | Dustproof

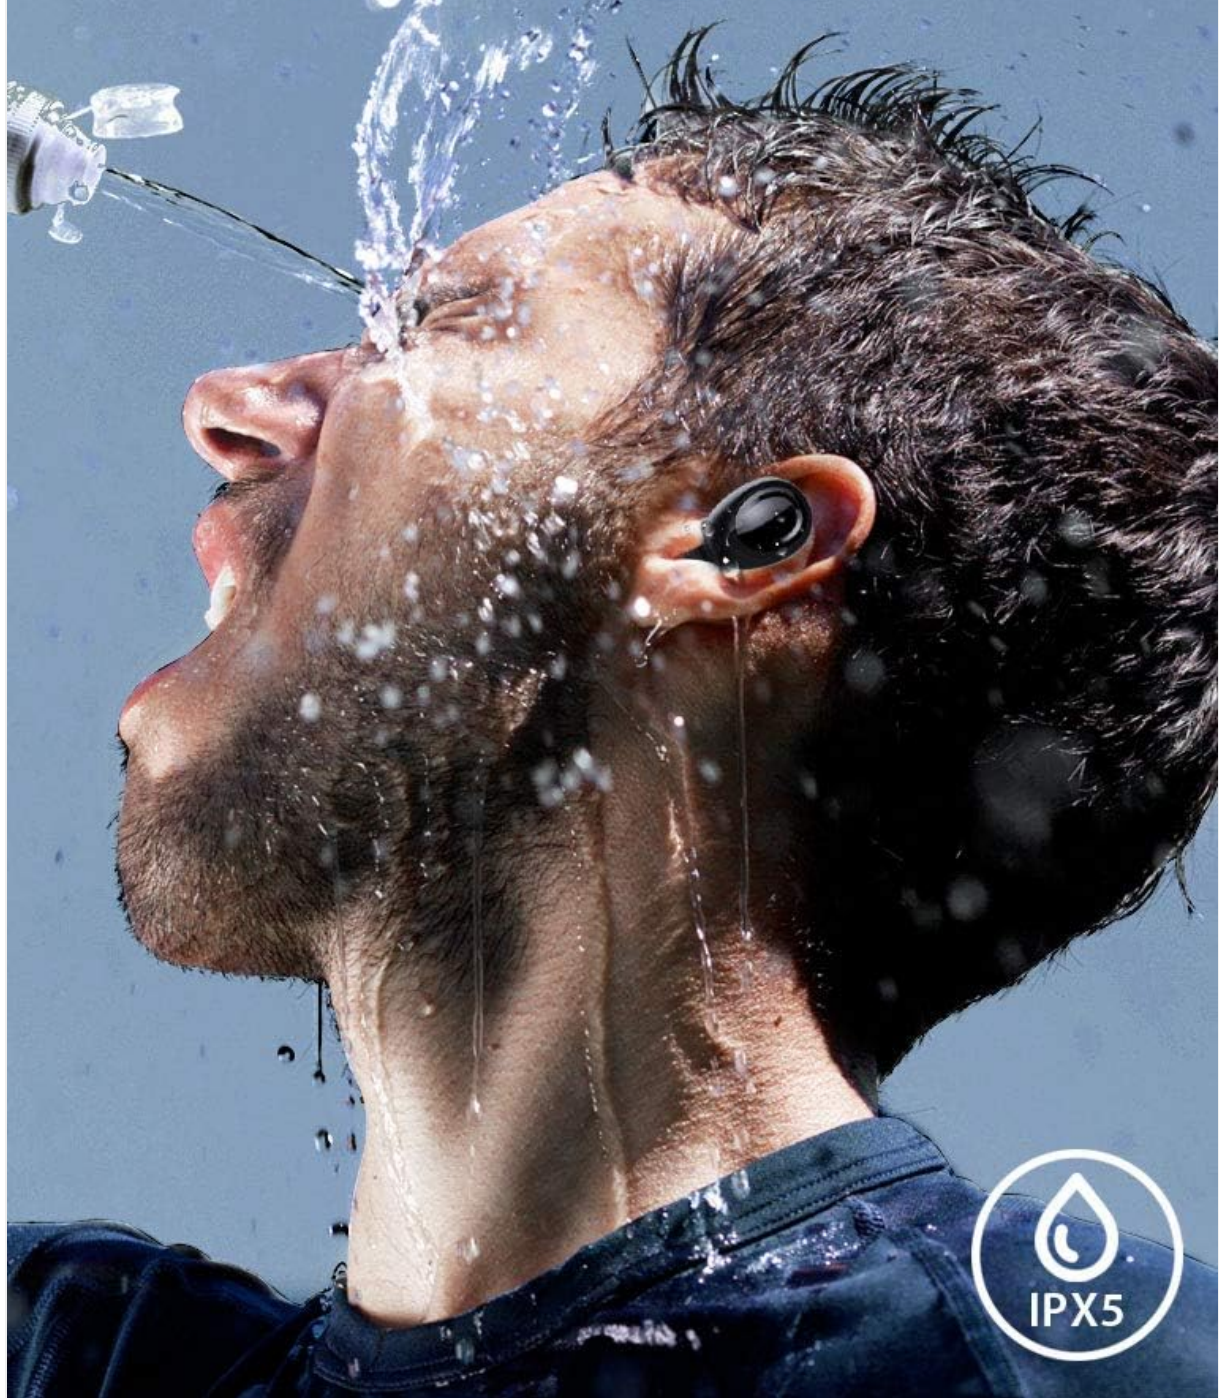


Image: A person's face being splashed with water, demonstrating the IPX5 waterproof rating of the MEBUYZ YW-E18 earbuds, indicating resistance to sweat, rain, and dust.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Solution
---------	----------

Problem	Solution
Earbuds not pairing with device.	1. Ensure earbuds are charged. 2. Turn off Bluetooth on your device and turn it back on. 3. Forget "MEBUYZ E18" from your device's Bluetooth list and re-pair. 4. Place earbuds back in the case, close, then reopen and try again.
Only one earbud is playing sound.	1. Ensure both earbuds are charged. 2. Place both earbuds back into the charging case, close the lid, wait a few seconds, then take them out simultaneously. They should automatically connect to each other. 3. If issues persist, try resetting the earbuds (refer to manufacturer's website for specific reset instructions if not in manual).
Earbuds not charging.	1. Ensure the charging case has power. 2. Check that the charging cable is securely connected to the case and power source. 3. Clean the charging contacts on both the earbuds and inside the case with a dry cotton swab. 4. Ensure earbuds are correctly seated in the charging slots.
Poor sound quality or intermittent connection.	1. Ensure earbuds are fully charged. 2. Move closer to your Bluetooth device to reduce interference. 3. Avoid physical obstructions between the earbuds and your device. 4. Try cleaning the earbud nozzles and replacing eartips for a better seal.

8. SPECIFICATIONS

Detailed technical specifications for the MEBUYZ YW-E18 True Wireless Earbuds:

Feature	Specification
Model	YW-E18
Bluetooth Version	5.0
Wireless Range	Up to 10 meters (33 feet)
Earbud Battery Life (Single Charge)	6-8 Hours
Total Playtime with Charging Case	Up to 24 Hours
Earbud Charging Time	Approx. 1.5 Hours
Charging Case Charging Time	Approx. 6.5 Hours
Standby Time	100 Hours
Water Resistance Rating	IPX5 (Sweatproof, Rainproof, Dustproof)
Microphone	Built-in, Bidirectional

Feature	Specification
Control Type	Touch / Multi-Function Button
Material	Plastic
Item Weight	132 g (total with case)
Product Dimensions	8 x 3.3 x 3.3 cm
Compatible Devices	Smartphones, Laptops, Tablets, Desktops

9. SAFETY INFORMATION

Please read and follow these safety guidelines to prevent injury or damage to your device:

- Do not disassemble, repair, or modify the product.
- Keep the product away from extreme temperatures, direct sunlight, and open flames.
- Avoid exposing the product to excessive moisture or liquids beyond its IPX5 rating.
- Do not use abrasive cleaners or harsh chemicals.
- Listen at moderate volumes to prevent hearing damage.
- Keep out of reach of children and pets.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official MEBUYZ website. Please retain your proof of purchase for warranty claims.