

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components Dishwasher Lower Dishrack Wheel Replacement User Manual

UpStart Components AP-165314-4PK-DL157

UpStart Components Dishwasher Lower Dishrack Wheel Replacement Manual

Model: AP-165314-4PK-DL157

PRODUCT OVERVIEW

This manual provides instructions for the installation and maintenance of the UpStart Components 4-Pack 165314 Dishwasher Lower Dishrack Wheel Replacement. These wheels are designed to restore smooth operation to your dishwasher's lower dishrack, ensuring proper movement and stability.

The package includes four (4) replacement lower dishrack wheels, compatible with specific Gaggenau dishwasher models.



Components



Image: The complete 4-pack of UpStart Components dishwasher lower dishrack wheels and their accompanying clips, as they appear in their packaging.

SAFETY INFORMATION

- Always disconnect power to the dishwasher by unplugging it or turning off the circuit breaker before attempting any repairs or replacements.
- Wear appropriate personal protective equipment, such as gloves, if necessary.
- Handle parts carefully to avoid injury.
- If you are unsure about any step, consult a qualified appliance technician.

INSTALLATION (SETUP)

Follow these steps to replace the lower dishrack wheels on your compatible Gaggenau dishwasher. This is a tool-free installation process.

1. **Prepare the Dishwasher:** Ensure the dishwasher is unplugged from the power outlet. Open the dishwasher door and pull out the lower dishrack.
2. **Remove the Old Wheel:** Carefully inspect the existing dishrack wheels. Most dishrack wheels are attached to a small axle or clip. Gently pry off or unclip the old, damaged wheel from its mounting point on the dishrack. Some designs may require a slight twist or pull.
3. **Inspect Mounting Point:** Once the old wheel is removed, check the mounting point on the dishrack for any debris or damage. Clean if necessary.
4. **Attach the New Wheel:** Take one of the new UpStart Components replacement wheels. Align the new wheel with the mounting point on the dishrack. Push or snap the new wheel firmly into place until it is securely seated. Ensure the wheel can rotate freely.
5. **Repeat for All Wheels:** Repeat steps 2-4 for all other wheels that need replacement. It is often recommended to replace all wheels on the lower dishrack for consistent performance.
6. **Test Operation:** Once all wheels are replaced, carefully slide the lower dishrack back into the dishwasher. Test its movement to ensure it glides smoothly and without obstruction.
7. **Restore Power:** Plug the dishwasher back into the power outlet.



Image: A detailed view of a single replacement wheel and its corresponding clip, demonstrating the two main components of the assembly.

MAINTENANCE

To ensure the longevity and smooth operation of your new dishrack wheels:

- **Regular Cleaning:** Periodically inspect the wheels and their axles for food debris, grease, or mineral deposits. Clean them gently with a soft brush and mild detergent if necessary.
- **Avoid Overloading:** Do not overload the lower dishrack, as excessive weight can put undue stress on the wheels and lead to premature wear.

- **Gentle Handling:** Always slide the dishrack in and out smoothly. Avoid forcing it, which can damage the wheels or the dishrack rails.

TROUBLESHOOTING

If you encounter issues after replacing the dishrack wheels, consider the following:

- **Rack Not Rolling Smoothly:**
 - Ensure all new wheels are securely attached and can rotate freely.
 - Check the dishrack rails inside the dishwasher for obstructions or damage.
 - Verify that the dishrack is properly seated on the rails.
- **Wheel Falls Off:**
 - Confirm the wheel was snapped firmly into place during installation.
 - Ensure the correct replacement part was used for your specific dishwasher model.
- **Part Does Not Fit:**
 - Double-check your dishwasher's model number and compare it with the compatible models listed in the specifications.
 - Verify the original part number of your old wheel against the compatible part numbers provided.

SPECIFICATIONS

Product Name	Dishwasher Lower Dishrack Wheel Replacement
Brand	UpStart Components
Model Number	AP-165314-4PK-DL157
Quantity	4 Wheels per Pack
Compatible Dishwasher Models	Gaggenau GM915-710 UC/06 (FD 7710-7912) Dishwasher
Compatible Part Numbers	00165314, AP2802428, 165314, 420198, 423232, AH3439123, EA3439123, PS3439123, PS8697067



Image: Left: Top view of a single replacement wheel. Right: Bottom view of a single replacement wheel, showing its structural details.

WARRANTY AND SUPPORT

This product is a replacement part manufactured by UpStart Components. Any warranties for this product are offered solely by UpStart Components.

For warranty claims, technical assistance, or any questions regarding this product, please contact UpStart Components directly through their official support channels. Please refer to the product packaging or the retailer's website for specific contact information.

Note: This product is not affiliated with any original equipment manufacturers (OEMs). All brand names and logos mentioned are registered trademarks of their respective owners and are used strictly for compatibility illustration.

© 2024 UpStart Components. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question