

HUAYU L 1335V

HUAYU Universal Remote Control L 1335V Instruction Manual

Model: L 1335V

INTRODUCTION

This manual provides instructions for the HUAYU Universal Remote Control, model L 1335V. This remote is designed to operate various HISENSE LCD Smart TV models, offering a convenient replacement or secondary control unit. It features dedicated buttons for popular streaming services like YouTube and Netflix.

SETUP

1. Battery Installation

Before using the remote control, you must install two AAA batteries (not included). Ensure correct polarity (+/-) as indicated inside the battery compartment.





Image: Back of the remote control with the battery compartment open, showing the correct orientation for AAA battery insertion.

1. Open the battery compartment cover on the back of the remote control.
2. Insert two new AAA batteries, matching the positive (+) and negative (-) terminals with the markings inside the compartment.
3. Close the battery compartment cover securely.

2. Initial Programming (Code Setting)

This remote control is designed with an intelligent chipset and may work directly with your HISENSE TV after battery installation. If it does not function normally, you may need to program it using one of the built-in codes. Ensure your TV is powered on before proceeding.





Image: Back of the remote control with programming instructions printed on the battery cover.

1. Point the remote control towards your HISENSE TV.
2. Press and hold the **POWER** button and the number **0** button simultaneously.
3. Release both buttons. Test the remote's functions. If it works correctly, the programming is complete.
4. If the remote does not function normally, repeat step 2, but this time press and hold the **POWER** button and the number **1**

button simultaneously.

5. Continue this process, incrementing the number (POWER+2, POWER+3, ..., up to POWER+8) until the remote functions correctly with your TV.
6. If after trying all codes from POWER+0 to POWER+8 the remote still does not work, it may not be compatible with your specific TV model or further programming may be required (refer to manufacturer support if available).

OPERATING INSTRUCTIONS

The HUAYU Universal Remote Control L 1335V features a standard layout for easy navigation and control of your HISENSE Smart TV. Below is a general overview of key button functions.



Image: Front view of the remote control, displaying all buttons and their labels.

- **Power Button (Red):** Turns the TV on or off.
- **Input:** Selects the input source (HDMI, AV, etc.).
- **Number Keys (0-9):** Direct channel selection or numerical input.
- **Volume Up/Down (VOL +/-):** Adjusts the sound volume.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Mute:** Mutes or unmutes the TV sound.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Back:** Returns to the previous menu or screen.
- **Exit:** Exits the current menu or application.
- **Home (House icon):** Accesses the TV's main smart hub or home screen.
- **Live TV:** Switches to live television broadcast.
- **Info:** Displays information about the current program or content.
- **T-shift/CC:** Activates or deactivates Time Shift or Closed Captions.
- **Subtitle:** Controls subtitle display.
- **Media Playback Controls (Play, Pause, Fast Forward, Rewind):** Controls media playback.
- **Dedicated App Buttons (Netflix, YouTube, Google Play, Amazon):** Provides direct access to these streaming applications.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Verify that the remote is programmed correctly for your TV model by following the "Initial Programming (Code Setting)" steps.
- **Some buttons not working:**
 - This might indicate an incomplete or incorrect programming code. Re-attempt the "Initial Programming (Code Setting)" process, trying different codes (POWER+0 through POWER+8).
 - Ensure the TV is not in a specific mode (e.g., a smart app) where certain buttons might have different or no function.
- **TV not turning on/off:**
 - Confirm the TV is plugged into a power source.
 - Try the power button on the TV itself. If it works, the remote may need reprogramming.

SPECIFICATIONS

| | |
|-------------------------|---|
| Model | L 1335V |
| Brand | HUAYU |
| Compatible Devices | HISENSE LCD Smart TVs (Specific models include EN2B27, ER-31607R, ER-22655HS, ER-22642R, ER-22641R, EN-22652A, BGH EN2h27B, EN2h27hs, EN-31906D, EN-31603B) |
| Connectivity Technology | Infrared |
| Controller Type | Button Control |
| Special Feature | Universal, Dedicated App Buttons (Netflix, YouTube, Google Play, Amazon) |
| Power Source | 2 x AAA Batteries (not included) |

WARRANTY AND SUPPORT

Information regarding product warranty is not available in the provided documentation. For warranty claims, technical support, or further assistance, please contact the manufacturer, HUAYU, or your point of purchase.
Manufacturer: HUAYU

