

[Manuals.plus](#) /

› [Klipsch](#) /

› Klipsch Bar 48 Sound Bar + Wireless Subwoofer User Manual

Klipsch 1066557

Klipsch Bar 48 Sound Bar + Wireless Subwoofer User Manual

Model: 1066557

INTRODUCTION

The Klipsch Bar 48 Sound Bar and Wireless Subwoofer system is designed to elevate your home audio experience. Featuring a dedicated center channel for clear dialogue and powerful surround sound capabilities, this system delivers immersive audio for movies, TV shows, and music. Its compact design allows for flexible placement below your television.

WHAT'S IN THE BOX

- Klipsch Bar 48 Sound Bar
- 8" Wireless Subwoofer
- Remote Control
- Power Cords (for Sound Bar and Subwoofer)
- HDMI Cable
- Optical Cable
- User Manual (this document)

SETUP

1. Placement

Position the sound bar centrally below your television. Ensure the sound bar is not obstructed. The wireless subwoofer can be placed anywhere in the room, ideally within 30 feet of the sound bar, for optimal bass performance. Consider placing it in a corner for enhanced bass response.



Image: Klipsch Bar 48 Sound Bar and Wireless Subwoofer. The sound bar is long and black, designed to sit horizontally, while the larger, cube-shaped subwoofer is also black and sits vertically on four small feet.

2. Connections

1. **Power Connection:** Connect the power cords to the sound bar and the wireless subwoofer, then plug them into a wall outlet. The sound bar and subwoofer will automatically pair.
2. **Audio Connection (HDMI ARC Recommended):**
 - Connect one end of the HDMI cable to the HDMI (ARC) port on the sound bar and the other end to the HDMI (ARC) port on your television. This allows for control of the sound bar volume and power using your TV remote.
 - If your TV does not have an HDMI (ARC) port, use the Optical Digital Audio cable. Connect one end to the OPTICAL IN port on the sound bar and the other end to the Optical Digital Audio OUT port on your television.
3. **Bluetooth Connection:** To connect a Bluetooth device, press the Bluetooth button on the sound bar or remote. The Bluetooth indicator will blink. Select "Klipsch Bar 48" from your device's Bluetooth settings.

OPERATING

Remote Control Functions

The included remote control provides full command over your Klipsch Bar 48 system. Familiarize yourself with its buttons for optimal use.





Image: Klipsch Bar 48 Remote Control. A black remote control with various buttons including power, input selection (Bluetooth, Analog, Digital, TV, Sub), volume up/down, mute, subwoofer level adjustment, Dialog, Surround, and Night modes.

- **Power Button:** Turns the sound bar on or off.
- **Input Selection:** Buttons for ANALOG, DIGITAL, TV (HDMI ARC), and BLUETOOTH to switch audio sources.
- **Volume Control:** Increase or decrease the main volume.
- **Mute:** Mutes or unmutes the sound.
- **SUB +/-:** Adjusts the subwoofer volume level.
- **DIALOG:** Enhances vocal clarity, making dialogue easier to understand.
- **SURROUND:** Activates the surround sound mode for a more immersive audio experience.
- **NIGHT:** Reduces dynamic range for quieter listening, ideal for late-night viewing.

MAINTENANCE

To ensure the longevity and optimal performance of your Klipsch Bar 48 system, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the sound bar and subwoofer. Avoid using liquid cleaners, aerosols, or abrasive chemicals.
- **Ventilation:** Ensure proper ventilation around both the sound bar and subwoofer. Do not block any ventilation openings.
- **Environment:** Keep the system away from direct sunlight, heat sources, excessive dust, moisture, and extreme temperatures.
- **Power:** Unplug the system from the power outlet during lightning storms or when unused for long periods.

TROUBLESHOOTING

Problem	Possible Solution
No power	Ensure power cords are securely connected to the sound bar, subwoofer, and wall outlet. Check if the outlet is functional.
No sound	Verify the correct input source is selected on the sound bar. Check volume levels on both the sound bar and your TV/device. Ensure cables (HDMI ARC, Optical) are securely connected. If using HDMI ARC, confirm ARC is enabled in your TV's audio settings.
Subwoofer not pairing/no bass	Ensure both sound bar and subwoofer are powered on. Check the subwoofer's power indicator. Manually re-pair the subwoofer if necessary (refer to the full user manual for specific steps, usually involves pressing a pairing button on both units). Adjust the subwoofer volume using the remote.
Bluetooth connection issues	Ensure the sound bar is in Bluetooth pairing mode. Move the Bluetooth device closer to the sound bar. Forget "Klipsch Bar 48" from your device's Bluetooth list and try re-pairing.

SPECIFICATIONS

Feature	Detail
Model Name	BAR 48
Speaker Type	Soundbar, Subwoofer
Surround Sound Channel Configuration	3.1
Subwoofer Diameter	8 Inches
Connectivity Technology	Wireless (Bluetooth, Wi-Fi)
Product Dimensions (Sound Bar)	3.39 x 47.68 x 2.87 inches
Item Weight	30.7 pounds (total system)
Power Source	Corded Electric
Included Components	Soundbar, 8" wireless subwoofer, remote, manual

WARRANTY AND SUPPORT

The Klipsch Bar 48 Sound Bar + Wireless Subwoofer comes with a limited warranty. For detailed warranty information, please refer to the warranty card included in your product packaging or visit the official Klipsch website. For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact Klipsch Customer Service. You can find contact information on the official Klipsch website or through the support section of your purchase platform.

Online Resources:[Klipsch Support Website](#)

© 2024 Klipsch. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07QY1ZPRG>

More documents and user manuals: <https://manuals.plus/>