

[Manuals.plus](#) /

› [Klipsch](#) /

› Klipsch Bar 40 Sound Bar + Wireless Subwoofer User Manual

Klipsch BAR 40

Klipsch Bar 40 Sound Bar + Wireless Subwoofer User Manual

Model: BAR 40 (1064247)

INTRODUCTION

The Klipsch Bar 40 Sound Bar and Wireless Subwoofer system is designed to significantly enhance your television's audio experience, delivering clear dialogue and powerful bass for movies, music, and games. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your new audio system.



Figure 1: Klipsch Bar 40 Sound Bar and Wireless Subwoofer.

The system includes the sound bar, a wireless subwoofer, and a remote control, offering a simple solution for high-quality home audio. Its compact design allows for unobtrusive placement below your TV, whether wall-mounted or on a tabletop.

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before operating your Klipsch Bar 40. Retain these instructions for future reference.

- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WHAT'S IN THE BOX

Verify that all components are present in the packaging:

- Klipsch Bar 40 Sound Bar
- Wireless Subwoofer
- Remote Control (with 2 AA batteries required, not always included)
- Power Cord for Sound Bar
- Power Cord for Subwoofer
- HDMI Cable
- Optical Cable
- Wall Mounting Template (if applicable)
- User Manual (this document)

SETUP

1. Sound Bar Placement

The sound bar can be placed on a tabletop directly below your television or wall-mounted. Ensure it is centered with your TV for the best audio experience.



Figure 2: Sound Bar placed on a cabinet below a television.

2. Subwoofer Placement

The wireless subwoofer can be placed anywhere in the room, ideally within 30 feet of the sound bar. For optimal bass performance, consider placing it in a corner or near a wall.



Figure 3: Klipsch wireless subwoofer.

3. Connections

Connect the sound bar to your television using either the HDMI ARC port or an Optical Digital Audio cable.

- **HDMI ARC (Recommended):** Connect one end of the HDMI cable to the HDMI ARC port on the sound bar and the other end to the HDMI ARC port on your TV. This allows your TV remote to control the sound bar's volume.
- **Optical Digital Audio:** Connect one end of the optical cable to the OPTICAL IN port on the sound bar and the other end to the Optical Digital Audio OUT port on your TV.



Figure 4: Rear view of the sound bar with connection ports.

4. Power Connection

Connect the power cords to the sound bar and the wireless subwoofer, then plug them into a wall outlet. The subwoofer and sound bar should automatically pair. If not, refer to the Troubleshooting section.

OPERATING INSTRUCTIONS

1. Remote Control Functions

The included remote control provides full command over your sound bar system.





Figure 5: Remote control for the Klipsch Bar 40.

- **Power Button:** Turns the sound bar on or off.
- **LED Button:** Controls the brightness of the LED indicators on the sound bar.
- **VOL+ / VOL-:** Adjusts the master volume.
- **Mute Button:** Mutes or unmutes the sound.
- **SUB+ / SUB-:** Adjusts the subwoofer volume level.
- **Bluetooth Button:** Initiates Bluetooth pairing mode.
- **Input Select Button:** Cycles through available audio inputs (HDMI, Optical, Bluetooth).
- **SUR (Surround) Button:** Toggles surround sound mode on/off.
- **DIALOG Button:** Enhances dialogue clarity.
- **Moon (Night) Mode Button:** Reduces dynamic range for late-night listening.

2. Basic Operation

- **Power On/Off:** Press the Power button on the remote or the sound bar.
- **Volume Adjustment:** Use VOL+ or VOL- buttons.
- **Input Selection:** Press the Input Select button to switch between HDMI, Optical, and Bluetooth sources.

3. Bluetooth Pairing

1. Press the Bluetooth button on the remote control. The LED indicator on the sound bar will flash.
2. On your mobile device, enable Bluetooth and search for "Klipsch Bar 40".
3. Select "Klipsch Bar 40" to pair. Once connected, the LED indicator will glow solid.

4. Sound Modes

- **Surround Mode:** Activates a virtual surround sound effect for a more immersive experience.
- **Dialog Mode:** Optimizes vocal frequencies to make speech clearer, especially useful for movies and TV shows.
- **Night Mode:** Compresses the audio's dynamic range, making loud sounds quieter and quiet sounds louder, ideal for not disturbing others.

MAINTENANCE

- **Cleaning:** Use a dry, soft cloth to clean the surfaces of the sound bar and subwoofer. Do not use liquid cleaners or aerosols.
- **Storage:** If storing the unit for an extended period, disconnect it from power and store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Ventilation:** Ensure proper ventilation around the sound bar and subwoofer to prevent overheating. Do not block any vents.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; outlet not active.	Ensure power cords are securely connected to the sound bar, subwoofer, and a working wall outlet.
No sound	Incorrect input selected; TV volume muted; cables loose.	Press the Input Select button to choose the correct source. Check TV volume and mute settings. Ensure all audio cables are securely connected.
Subwoofer not pairing	Out of range; interference; manual pairing needed.	Ensure subwoofer is within 30 feet of the sound bar. Reduce interference from other wireless devices. To manually pair: Press and hold the 'Pair' button on the back of the subwoofer until the LED flashes. Then, press and hold the 'Bluetooth' button on the sound bar remote until the sound bar's LED flashes. They should connect.
Bluetooth connection issues	Device too far; previously paired device connected.	Ensure your device is within range. Disconnect from other Bluetooth devices. Try re-pairing.

Problem	Possible Cause	Solution
Remote control not working	Batteries low/dead; obstruction; incorrect aim.	Replace batteries (2 AA). Ensure no obstructions between remote and sound bar. Point remote directly at the sound bar.

SPECIFICATIONS

Model Name	BAR 40
Item Model Number	1064247
Speaker Type	Soundbar
Special Feature	Wireless Subwoofer
Surround Sound Channel Configuration	2.1
Speaker Maximum Output Power	320 Watts
Subwoofer Diameter	6.5 Inches
Connectivity Technology	HDMI, Wired, Bluetooth
Compatible Devices	Television
Product Dimensions (Sound Bar)	8.6D x 101.4W x 7.3H Centimetres
Colour	Black
Manufacturer	Klipsch
Included Components	Remote, manual, sound bar, wireless subwoofer

WARRANTY AND SUPPORT

Klipsch products are manufactured to high quality standards and are warranted to be free from defects in materials and workmanship. The specific warranty period for your Klipsch Bar 40 may vary by region and retailer. Please retain your proof of purchase for warranty claims.

For technical support, service, or warranty inquiries, please visit the official Klipsch website or contact their customer service department. You may find contact information and frequently asked questions on their support pages.

Online Resources: www.klipsch.com/support

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question