

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components W10195416 Lower Dishwasher Wheel Replacement Manual

UpStart Components AP-W10195416-DL719

UpStart Components W10195416 Lower Dishwasher Wheel Replacement Manual

Model: AP-W10195416-DL719

1. INTRODUCTION

This manual provides instructions for the installation, operation, maintenance, and troubleshooting of the UpStart Components W10195416 Lower Dishwasher Wheel Replacement. This part is designed to replace a worn or damaged lower rack wheel in compatible dishwasher models, ensuring smooth movement of the dishwasher's lower rack.

Compatibility: This replacement wheel is compatible with Whirlpool WDT780SAEM0 dishwashers and replaces part numbers W10195416V, AP5983730, W10195416, PS11722152, and W10195416VP.

2. SAFETY INFORMATION

Always prioritize safety when performing appliance repairs. Failure to follow these safety guidelines may result in injury or damage to the appliance.

- **Disconnect Power:** Before beginning any installation or maintenance, always unplug the dishwasher from its power source or turn off the circuit breaker to prevent electrical shock.
- **Wear Protective Gear:** Wear work gloves to protect your hands from sharp edges or debris.
- **Handle with Care:** The dishwasher rack can be heavy. Exercise caution when removing or reinserting it.
- **Keep Children Away:** Ensure children and pets are kept away from the work area during installation.

3. PRODUCT CONTENTS

Your package should contain the following item:

- 1 x UpStart Components W10195416 Lower Dishwasher Wheel



Image 1: Top view of the UpStart Components W10195416 Lower Dishwasher Wheel. This image shows the overall shape and design of the replacement wheel.

4. INSTALLATION INSTRUCTIONS

This replacement wheel features an easy, tool-free installation process.

1. Prepare the Dishwasher:

- Ensure the dishwasher is completely unplugged from the power outlet or the circuit breaker is turned off.
- Open the dishwasher door and pull out the lower dish rack.
- Carefully lift and remove the lower dish rack from the dishwasher tub. Set it aside on a clean, stable surface.

2. Remove the Old Wheel:

- Locate the damaged or broken lower rack wheel.
- The old wheel assembly typically snaps onto the rack. Gently pry or unclip the old wheel from its mounting post on the rack. Some models may require a slight twist or pull.



Image 2: Side view of the UpStart Components W10195416 Lower Dishwasher Wheel. This view highlights the wheel's profile and attachment points.

3. Install the New Wheel:

- Align the new UpStart Components W10195416 wheel with the mounting post on the lower dish rack.
- Press the new wheel firmly onto the post until it snaps securely into place. Ensure it is fully seated and does not wobble.



Image 3: Angled view of the UpStart Components W10195416 Lower Dishwasher Wheel. This perspective shows the wheel from a different angle, revealing more structural details.

4. Reassemble and Test:

- Carefully place the lower dish rack back into the dishwasher tub, ensuring all wheels are properly seated on the rack rails.
- Gently push and pull the rack to confirm it rolls smoothly and freely.
- Plug the dishwasher back into the power outlet or turn on the circuit breaker.

5. OPERATING THE DISHWASHER WITH NEW WHEELS

Once the new lower rack wheels are installed, the dishwasher's lower rack should glide smoothly along its tracks. This ensures proper loading and unloading of dishes and allows the spray arms to effectively clean all items.

- Ensure the rack is not overloaded, which can put undue stress on the wheels.
- Distribute dishes evenly to maintain balance and prevent the rack from derailing.

6. MAINTENANCE

Regular maintenance can extend the life of your dishwasher wheels and ensure optimal performance.

- **Regular Cleaning:** Periodically remove the lower rack and inspect the wheels. Clean any food debris, grease, or mineral deposits that may accumulate on the wheels or tracks. Use a soft brush and mild detergent if necessary.
- **Inspect for Damage:** Routinely check the wheels for cracks, wear, or signs of breakage. Replace any damaged wheels promptly to prevent further issues with the rack's movement.
- **Check Rack Rails:** Ensure the dishwasher's rack rails are clean and free of obstructions. A smooth rail surface is essential for the wheels to glide properly.

7. TROUBLESHOOTING

If you encounter issues after installing the new wheel, refer to the following troubleshooting tips:

- **Rack Not Rolling Smoothly:**
 - Ensure the new wheel is fully snapped into place on its mounting post.
 - Check for any debris on the dishwasher rack rails or within the wheel assembly.
 - Verify that no other wheels on the rack are damaged or missing.
 - Confirm the rack is not overloaded or unevenly loaded.
- **Wheel Falls Off:**
 - Re-attach the wheel, ensuring it clicks firmly into place.
 - Inspect the mounting post on the rack for damage. If the post is broken, the entire rack may need replacement.
 - Ensure the correct replacement wheel was used for your specific dishwasher model.

8. SPECIFICATIONS

Brand:	UpStart Components
Model Number:	AP-W10195416-DL719
Compatible Dishwasher Models:	Whirlpool WDT780SAEM0
Replaces Part Numbers:	W10195416V, AP5983730, W10195416, PS11722152, W10195416VP
Material:	Premium quality materials (as per product description)
Installation:	Tool-free

9. WARRANTY AND SUPPORT

This product is a replacement part manufactured by UpStart Components. Any warranties for this product are offered solely by UpStart Components, not by the original appliance manufacturer.

For warranty information, technical support, or assistance with this product, please contact UpStart Components directly. Refer to the product packaging or the UpStart Components website for contact details.

© 2023 UpStart Components. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question