



Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Remote Control for PYE Hellen Air Conditioners (Models YKR-C/01, ACP1, ACP15, ACP25) User Manual

Easytry123 YKR-C/01

Easytry123 Replacement Remote Control User Manual

For PYE Hellen Air Conditioners: Models YKR-C/01, ACP1, ACP15, ACP25

1. INTRODUCTION

This manual provides instructions for the Easytry123 replacement remote control, designed for use with specific PYE Hellen air conditioner models, including YKR-C/01, ACP1, ACP15, and ACP25. This remote functions as an infrared replacement and may not offer all the exact features or functions of your original remote. Please ensure your original remote control matches the appearance of this replacement for optimal compatibility.

2. SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Battery compartment with cover removed, showing battery placement.

3. OPERATING INSTRUCTIONS

This section describes the primary functions of the remote control buttons.



Figure 2: Front view of the remote control with button layout.

Power Button (Orange, bottom): Press to turn the air conditioner ON or OFF.

MODE Button (Center): Cycles through operating modes such as Cool, Dry, Fan, Heat (if supported by AC unit), and Auto.

Temperature Adjustment Buttons (°C+ / °C-): Increases or decreases the set temperature.

Fan Speed Button (Fan icon): Adjusts the fan speed (e.g., Low, Medium, High, Auto).

Swing Button (Arrows icon): Activates or deactivates the louver swing function.

Sleep Mode Button (Moon icon): Activates or deactivates sleep mode, which typically adjusts temperature and fan speed for comfortable sleep.

TIMER Button: Used to set the ON/OFF timer for the air conditioner.

SET Button: Confirms timer settings or other advanced functions.

CANCEL Button: Cancels timer settings or exits a menu.

4. MAINTENANCE

4.1. Cleaning the Remote Control

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's finish or internal components.

4.2. Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or the display fades. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries or different types of batteries.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are installed correctly with the correct polarity.
 - Replace the batteries with new ones.
 - Ensure there are no obstructions between the remote control and the air conditioner's infrared receiver.
 - Verify that the remote is pointed directly at the air conditioner.
- **Air conditioner functions incorrectly:**
 - Confirm that your air conditioner model is listed as compatible with this remote control.
 - This replacement remote may not support all advanced functions of your original unit. Refer to your air conditioner's original manual for specific features.

6. SPECIFICATIONS

Brand	Easytry123
Compatible Models	PYE Hellen YKR-C/01, ACP1, ACP15, ACP25 Air Conditioners
Controller Type	Infrared (IR) Button Control
Power Source	2 x AAA Batteries (not included)
Special Feature	Ergonomic Replacement Remote

7. SUPPORT

For any questions, concerns, or issues regarding the operation or compatibility of this replacement remote control, please contact the seller directly through the platform where the purchase was made. Provide your order details and a clear description of the issue for prompt assistance.

