

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components 297147700 Freezer Door Key Replacement Manual for Kenmore/Sears Freezers

UpStart Components AP-297147700-4PK-DL1037

UpStart Components 297147700 Freezer Door Key Replacement Instruction Manual

For Kenmore/Sears 2539187110 Freezers and Compatible Models

1. INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your UpStart Components 297147700 Freezer Door Key Replacement. Please read these instructions carefully before use to ensure correct application and to extend the life of your freezer lock system.

2. PRODUCT OVERVIEW

The UpStart Components 297147700 Freezer Door Key is a high-quality replacement part designed to restore the locking functionality of compatible freezers. This package includes four (4) replacement keys.

Key Features:

- Quantity: 4 replacement keys.
- Constructed from durable, high-quality plastic for longevity.
- Designed for tool-free installation.
- A cost-effective solution to maintain freezer security.



Image 2.1: Four UpStart Components 297147700 Freezer Door Keys.

3. COMPATIBILITY

This replacement key is compatible with various freezer models, including Kenmore/Sears 2539187110 freezers. It is designed to replace original part number 297147700 and other cross-referenced part numbers. Please verify your freezer's existing key or lock part number for compatibility.

Compatible Part Numbers:

- 297147700
- AP4301346
- 216702900
- 06599905
- 08037402
- 1259502
- 216388700

- 5308027402
- 5308037402
- 6599905
- AH1991481
- C000460771
- EA1991481
- F000113978
- F000115646
- F113978
- F115646
- G157033
- K1235141
- K1244302
- PS1991481
- WR05X0065
- WR05X0072
- WR05X5010
- WR05X5029
- WR05X5036
- WR05X5050
- WR5X5010
- WR5X5029
- WR5X5036
- WR5X5050
- WR5X65
- WR5X72

4. INSTALLATION

The UpStart Components 297147700 Freezer Door Key is designed for simple, tool-free installation. It functions identically to the original key.

Installation Steps:

1. Identify the freezer door lock mechanism.
2. Insert the key into the lock's keyhole.
3. Turn the key clockwise to lock the freezer door or counter-clockwise to unlock it.
4. Remove the key after locking or unlocking.

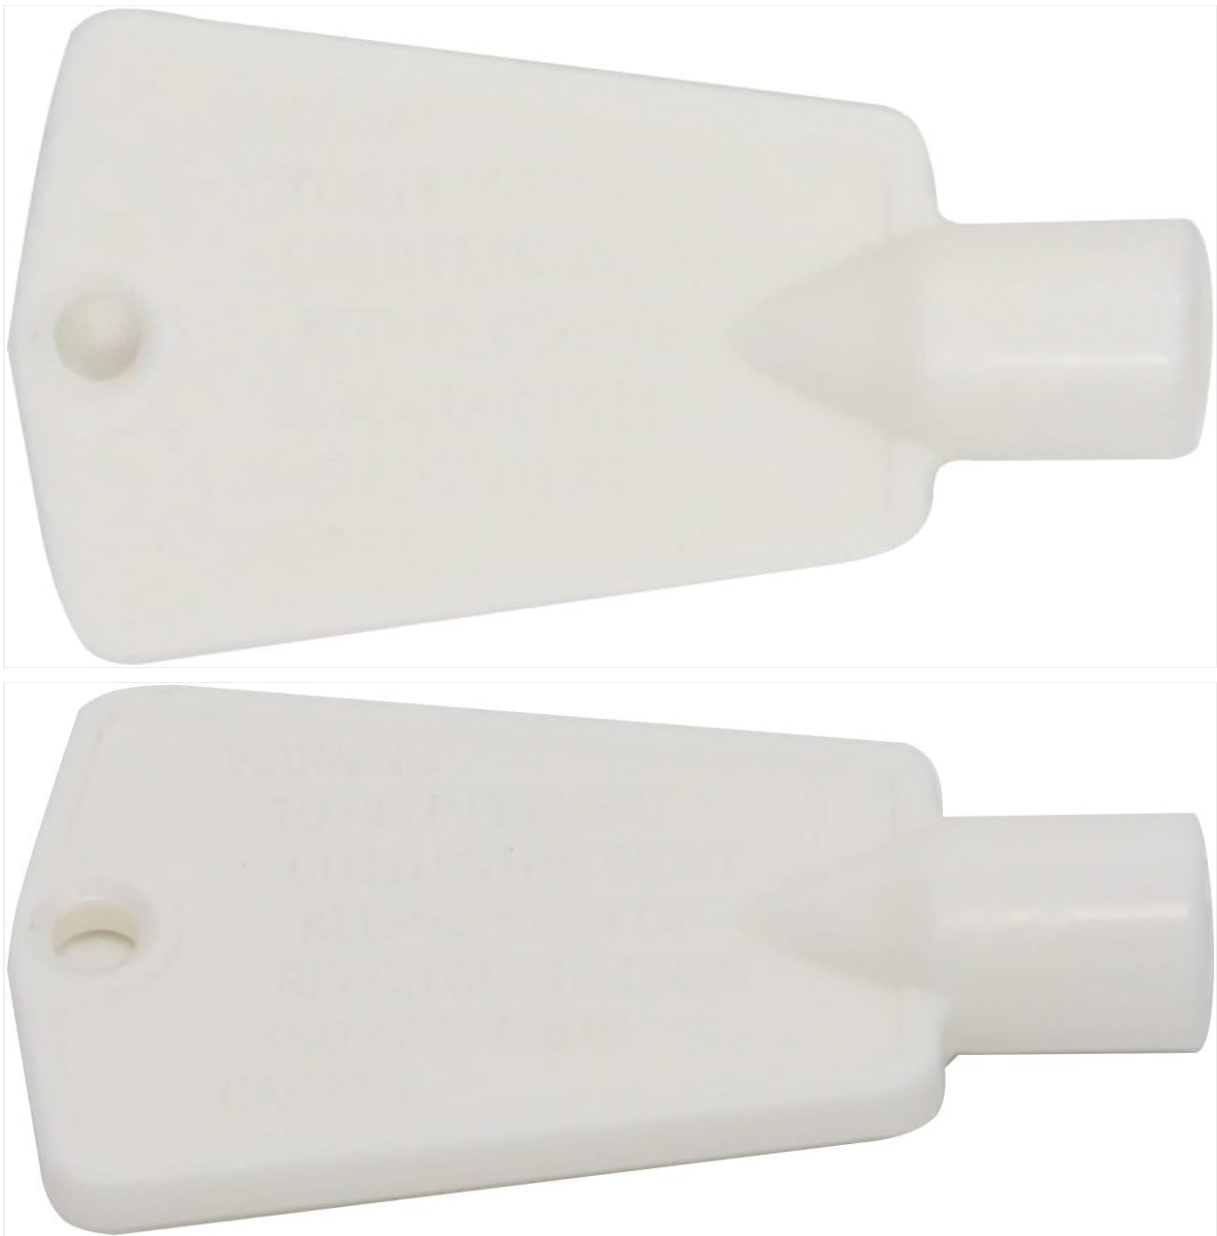


Image 4.1: Detailed views of the replacement freezer door key.

5. OPERATION

To operate the freezer door lock, simply insert the key into the lock cylinder and turn it. The key is designed for a secure fit and smooth operation. Always ensure the key is fully inserted before turning to prevent damage to the key or the lock mechanism.

6. MAINTENANCE

The freezer door key requires minimal maintenance. To ensure its longevity and proper function:

- Keep the key clean and free from debris. A soft, dry cloth can be used for cleaning.
- Store the key in a safe, accessible location to prevent loss.
- Avoid applying excessive force when turning the key, as this can damage the key or the lock.

7. TROUBLESHOOTING

If you encounter issues with your freezer door key, consider the following:

Key Does Not Turn:

- **Check for Obstructions:** Ensure there is no foreign material blocking the keyhole.
- **Correct Key:** Verify that you are using the correct key for the specific freezer lock.
- **Lock Mechanism:** If the key still does not turn, the issue may be with the freezer's lock mechanism itself, not the key. Consult your freezer's service manual or a qualified technician.

8. SPECIFICATIONS

Manufacturer	UpStart Components
Part Number	AP-297147700-4PK-DL1037
ASIN	B07QY9P42H
Date First Available	April 19, 2019

9. WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part and is not an OEM (Original Equipment Manufacturer) product. All mentions of brand names or model descriptions are made strictly to illustrate compatibility. All brand names and logos are registered trademarks of their respective owners. This product is not affiliated with any brands and is not covered under any warranties offered by the original manufacturers.

Any warranties for this product are offered solely by UpStart Components. For support or warranty inquiries, please contact UpStart Components directly through their official channels.