



Manuals.plus /

› Galanz /

› Galanz GLR10TBKEFR Retro Refrigerator User Manual

Galanz GLR10TBKEFR

Galanz GLR10TBKEFR Retro Refrigerator User Manual

Model: GLR10TBKEFR

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Galanz GLR10TBKEFR 10.0 cu. ft. Retro Refrigerator. This appliance features a top freezer, frost-free operation, dual doors, and an adjustable electrical thermostat control. It is designed for storing and keeping food and beverages cool.

Key features include a high-efficiency R600a compressor for quick cooling and low energy consumption, adjustable leveling legs, glass shelves for organized storage, a removable slide-out glass shelf, and a clear fruit and vegetable crisper. The manual control dial allows for temperature adjustment.

Product Features



Retro Black Design



Energy-Saving



Refrigeration



Adjustable Temperature



Interior Light



Image: Front view of the Galanz GLR10TBKEFR Retro Refrigerator, showcasing its retro black design and key features.

2. IMPORTANT SAFETY INFORMATION

Read all instructions before using this appliance to reduce the risk of fire, electric shock, or injury.

- **Electrical Safety:** Ensure the refrigerator is connected to a grounded 120V/60Hz electrical outlet. Do not use extension cords.
- **Ventilation:** Maintain adequate space around the refrigerator for proper ventilation.
- **Flammable Materials:** Do not store explosive substances or flammable materials inside the appliance.
- **Children:** Supervise children to ensure they do not play with the appliance.
- **Disposal:** Dispose of the appliance according to local regulations, considering the use of flammable refrigerant and insulation gas.
- **Cleaning:** Always unplug the refrigerator before cleaning or performing maintenance.
- **Service:** Do not attempt to repair or replace any part of your refrigerator unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Inspect the refrigerator for any damage. Keep packaging materials away from children.

3.2 Placement

Place the refrigerator on a flat, stable surface. Ensure there is sufficient space around the unit for proper air circulation (minimum 4 inches from walls). Avoid direct sunlight or heat sources.

- **Leveling:** Use the adjustable leveling legs to ensure the refrigerator is stable and level. This helps in efficient operation and proper door sealing.



Image: Refrigerator dimensions for proper placement.

3.3 Door Handle Installation

The door handles may require assembly. Align the handles with the pre-drilled holes on the refrigerator doors and secure them with the provided screws. Ensure they are firmly attached.

3.4 Initial Power-On

After placement and handle installation, wait at least 2-4 hours before plugging the refrigerator into the power outlet. This allows the refrigerant to settle. Once plugged in, allow the unit to cool for several hours before loading food.

4. OPERATING INSTRUCTIONS


4.1 Temperature Control

The refrigerator temperature is controlled manually using a dial located inside the fresh food compartment.

- Turn the dial to adjust the temperature from 'Cool' to 'Cold' to 'Coldest'.
- The recommended temperature range for the refrigerator compartment is 32°F to 47°F (0°C to 8°C).
- The freezer compartment maintains temperatures at or below 0°F (-18°C).
- Adjust the dial gradually and allow several hours for the temperature to stabilize before making further adjustments.

Handle Design ▶

Retro streamlined design gives you comfortable feeling.

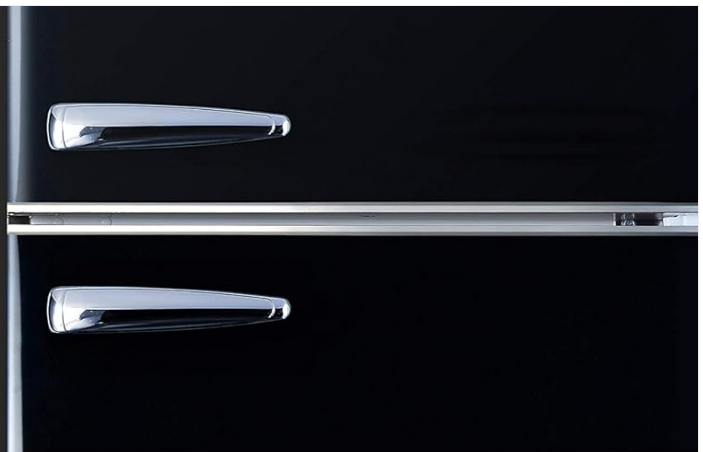

◀ Adjustable Electrical Thermostat Control

Refrigerator compartment 32°F to 47°F.
Freezer compartment $\leq 0^{\circ}\text{F}$.



Crystal Crisper ▶

Transparent and large capacity.



Image: Adjustable Electrical Thermostat Control and interior features.

4.2 Food Storage

Organize food efficiently using the provided storage options.

- **Glass Shelves:** The refrigerator includes four removable glass shelves. These can be adjusted to accommodate items of various heights.
- **Crystal Crisper:** A spacious, clear crisper drawer is located at the bottom of the fresh food compartment, ideal for fruits and vegetables.
- **Door Shelves:** The door offers multiple shelves for storing beverages, condiments, and smaller items.
- **Freezer Compartment:** Use the top freezer for storing frozen foods and making ice cubes.



Image: Interior layout and storage capacity of the refrigerator.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and longevity of your refrigerator. Always unplug the appliance before cleaning.

5.1 Cleaning the Interior

- Clean the interior with a solution of mild detergent and warm water.
- Wipe down shelves, drawers, and door bins.
- For stubborn odors, use a solution of baking soda and water.

- Rinse thoroughly and dry with a soft cloth.

5.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft cloth and mild detergent.
- For the door seals, use a damp cloth to remove any food particles or debris. Ensure seals are clean and flexible for proper closure.

5.3 Defrosting

This refrigerator features a frost-free defrost system, eliminating the need for manual defrosting of the freezer compartment. However, ensure that the air vents inside are not blocked by food items to allow proper air circulation for the frost-free function.

6. TROUBLESHOOTING GUIDE

Before contacting customer service, review this section for potential solutions to common issues.

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; check circuit breaker; verify power supply.
Refrigerator is not cold enough.	Temperature control set too warm; door opened too frequently; large amount of warm food added; poor ventilation.	Adjust temperature control to a colder setting; minimize door openings; allow new food to cool gradually; ensure adequate space around the unit.
Food in refrigerator freezes.	Temperature control set too cold; food placed too close to cooling vents.	Adjust temperature control to a warmer setting; reposition food away from direct airflow.
Excessive noise.	Refrigerator not level; objects vibrating against the unit; normal compressor operation.	Adjust leveling legs; ensure nothing is touching the refrigerator; some operational sounds are normal.
Condensation inside refrigerator.	High humidity; door not sealed properly; door opened too frequently.	Ensure door seals are clean and intact; minimize door openings; wipe away excess moisture.

7. SPECIFICATIONS

Feature	Detail
Brand	Galanz
Model Info	GLR10TBKEFR
Item Weight	125.7 pounds
Product Dimensions	23.74 x 27.48 x 61.81 inches (D x W x H)
Capacity	10 Cubic Feet
Annual Energy Consumption	292 Kilowatt Hours Per Year
Refrigerator Fresh Food Capacity	7.42 Cubic Feet
Freezer Capacity	2.42 Cubic Feet
Noise Level	42 Decibels
Installation Type	Freestanding
Form Factor	Compact, Freezer Top
Special Features	Automatic Defrost, Compact, Energy Efficient, Low Noise, Separate Freezer
Color	Black
Voltage	120 Volts
Crispers/Drawers	1
Defrost System	Frost Free
Door Hinges	Left
Door Material Type	Aluminum
Shelf Type	Glass
Number of Shelves	4
Certification	Energy Star
Material Type	ABS+METAL+GLASS+FOAMING+PAPER
Included Components	1 X Refrigerator; 4 X Removable Glass Shelves; 1 X Crystal Crisper
Number Of Doors	2

8. WARRANTY AND CUSTOMER SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Galanz website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you encounter issues not covered in the troubleshooting guide, or require replacement parts, contact Galanz customer service.

