

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Klipsch](#) /
- › [Klipsch Heritage Wireless The One II Tabletop Stereo Walnut User Manual](#)

Klipsch 1067554

Klipsch Heritage Wireless The One II

TABLETOP STEREO USER MANUAL

Model: 1067554

1. Introduction

Welcome to the user manual for your Klipsch Heritage Wireless The One II Tabletop Stereo. This manual provides essential information for setting up, operating, and maintaining your device to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.



2. Safety Information

For your safety and to prevent damage to your product, please observe the following precautions:

- Do not expose the unit to dripping or splashing liquids.
- Do not place objects filled with liquids, such as vases, on the apparatus.
- Ensure proper ventilation. Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm (Proposition 65 warning).

3. Package Contents

Verify that all items are present in your product packaging:

- Klipsch Heritage Wireless The One II Tabletop Stereo
- Power Cable
- User Manual

4. Product Overview

The Klipsch Heritage Wireless The One II is a compact tabletop stereo system designed for high-quality audio playback. It features a classic design with modern connectivity options.

4.1. Controls and Indicators



Figure 4.1: Top panel controls including volume knob, source selector, and power switch.

- **Volume Knob:** Adjusts the overall audio output level.
- **Source Selector:** Toggles between Bluetooth, AUX, and Phono/Line inputs.
- **Power Switch:** Turns the unit on or off.

4.2. Rear Panel Connections



Figure 4.2: Rear panel with AUX input and DC power input.

- **AUX Input:** 3.5mm stereo input for connecting external audio devices.
- **DC IN:** Power input for connecting the provided AC adapter.
- **Phono/Line Input:** (Not explicitly visible in provided images but mentioned in specs) Input for connecting a turntable or other line-level audio sources.

5. Setup

5.1. Placement

For optimal sound performance, place the Klipsch The One II on a stable, flat surface. Positioning the speaker closer to a wall in a smaller room can enhance bass response. Avoid placing it in enclosed cabinets that may restrict airflow or sound dispersion.

5.2. Power Connection

1. Connect the provided AC power adapter to the 'DC IN' port on the rear of the speaker.
2. Plug the other end of the power adapter into a suitable wall outlet.

5.3. Battery Information

The unit requires 2 AA batteries. These are typically for internal functions or a remote control if applicable. Ensure batteries are inserted with correct polarity.

6. Operating

6.1. Bluetooth Connectivity

1. Turn on the Klipsch The One II using the power switch.
2. Select 'Bluetooth' as the source using the source selector. The Bluetooth indicator light will begin to flash, indicating pairing mode.
3. On your Bluetooth-enabled device (smartphone, tablet, computer), search for available Bluetooth devices.
4. Select 'Klipsch The One II' from the list. Once connected, the Bluetooth indicator light will become solid.
5. Begin playing audio from your device.

Important Note on Bluetooth Standby: If the speaker does not detect audio for approximately 10 minutes while connected via Bluetooth, it will enter a standby mode. The speaker will *not* automatically wake up when audio resumes. To reactivate the speaker, you must physically interact with it (e.g., press a button or rotate a dial on the unit).

6.2. AUX Input

1. Connect your audio device to the 'AUX IN' port on the rear of the speaker using a 3.5mm audio cable (not included).
2. Select 'AUX' as the source using the source selector.
3. Begin playing audio from your connected device.

6.3. Phono/Line Input

1. Connect your turntable or other line-level audio source to the 'Phono/Line' input on the rear of the speaker. Ensure your turntable has a built-in pre-amp or use an external one if needed.
2. Select 'Phono/Line' as the source using the source selector.
3. Begin playing audio from your connected device.

7. Maintenance

To keep your Klipsch The One II in optimal condition:

- **Cleaning:** Use a soft, dry cloth to wipe down the exterior surfaces. Avoid abrasive cleaners or solvents. For the fabric grille, use a soft brush or vacuum with a brush attachment to remove dust.

- **Storage:** If storing the unit for an extended period, unplug it from the power outlet and store it in a cool, dry place, away from direct sunlight and extreme temperatures.

8. Troubleshooting

Problem	Possible Cause	Solution
No Power	Power cable not connected; Outlet not active.	Ensure power cable is securely connected to the unit and a working wall outlet. Try a different outlet.
No Sound	Incorrect source selected; Volume too low; Device not playing audio.	Verify the correct input source is selected. Increase the volume on both the speaker and the connected device. Ensure audio is playing on the source device.
Bluetooth Disconnection / Cannot Pair	Device out of range; Interference; Speaker in standby.	Move device closer to the speaker. Turn off other Bluetooth devices. If speaker is in standby, physically interact with it to wake it up. Try unpairing and re-pairing the device.
Speaker goes into standby and won't wake automatically	Designed behavior for power saving.	This is a known characteristic. To wake the speaker from standby, you must physically interact with its controls (e.g., turn a knob, flip a switch).
Distorted Sound	Volume too high; Poor audio source quality.	Reduce the volume. Try a different audio source or file.

9. Specifications

Feature	Detail
Model Name	The One II
Speaker Type	Stereo Sound
Product Dimensions	5"D x 5"W x 6"H
Item Weight	8.4 Pounds
Color	Walnut
Connectivity Technology	Bluetooth, AUX, Phono/Line Input
Wireless Communication Technology	Bluetooth
Power Source	AC
Speaker Maximum Output Power	60 Watts
Included Components	Speaker, Manual
Batteries Required	2 AA batteries (for unspecified function)
Indoor/Outdoor Usage	Indoor

10. Warranty and Support

Your Klipsch Heritage Wireless The One II Tabletop Stereo comes with a Limited Warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your product or visit the official Klipsch website.

For technical support, troubleshooting assistance beyond what is covered in this manual, or service inquiries, please contact Klipsch customer support. Contact information can typically be found on the Klipsch website or in your product packaging.

Please retain your proof of purchase for warranty claims.

© 2025 Klipsch. All rights reserved.

Related Documents - 1067554

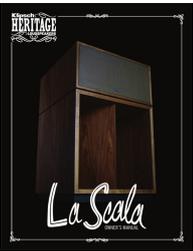
	<p>Klipsch Detroit Portable Bluetooth Speaker User Guide</p> <p>Explore the features and functionalities of the Klipsch Detroit portable Bluetooth speaker with this comprehensive user guide. Learn about app control, virtual remote, equalizer settings, channel control, battery charging, USB reverse charging, and Bluetooth pairing.</p>
	<p>Klipsch La Scala Heritage Loudspeaker Owner's Manual</p> <p>Comprehensive owner's manual for the Klipsch La Scala Heritage loudspeaker, detailing unpacking, assembly, optimal placement, various connection methods (single amplifier, bi-amping, tri-amping, active crossover), safety instructions, and warranty information.</p>
	<p>Klipsch Jubilee Loudspeakers Owner's Manual</p> <p>This manual provides instructions for the Klipsch Jubilee loudspeakers, covering unpacking, assembly, placement, active crossover operation, and connections. It details how to set up and optimize the performance of these high-fidelity speakers.</p>
	<p>Klipsch kO-R1 Loudspeaker Owner's Manual - Placement, Assembly, Safety & Connections</p> <p>Comprehensive owner's manual for the Klipsch kO-R1 2-Way Multicelled Loudspeaker. Includes detailed guidance on speaker placement, horn assembly steps, amplifier connections, important safety instructions, inspection advice, and warranty information for international purchases.</p>
	<p>Klipsch The Three with Google Assistant: User Manual and Setup Guide</p> <p>Comprehensive guide for the Klipsch The Three wireless smart speaker with Google Assistant. Learn about setup, controls, Bluetooth pairing, factory reset, care, safety instructions, and compliance information.</p>

Table of Contents

- 1. Introduction
- 2. Safety Precautions
- 3. Unpacking Instructions
- 4. Setup Instructions
- 5. Troubleshooting
- 6. Contact Information

[Klipsch Heritage Speaker Unpacking and Setup Guide](#)

Detailed unpacking instructions for Klipsch Heritage series speakers, including Heresy III, Cornwall III, Klipschorn, and La Scala II models. Learn how to safely unbox and prepare your speakers for connection.