

[Manuals.plus](#) /

› [WONNIE](#) /

› WONNIE 7.5-inch Portable Dual DVD Player User Manual

WONNIE WN-UK612

WONNIE 7.5-inch Portable Dual DVD Player User Manual

Model: WN-UK612

INTRODUCTION

Thank you for choosing the WONNIE 7.5-inch Portable Dual DVD Player. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure optimal performance and longevity of your product. This dual-screen system is designed to provide entertainment for passengers, especially during long car journeys, by playing the same video content on both screens simultaneously.



Image: The WONNIE 7.5-inch Portable Dual DVD Player system, featuring two screens.

PRODUCT OVERVIEW AND COMPONENTS

Before you begin, please ensure all components are present in the package. The following items are typically included:



Image: Diagram showing all components included in the WONNIE Portable Dual DVD Player package.

1. DVD Player (Main Unit)
2. LCD Monitor (Slave Unit)
3. Headrest Velcro Straps (2 sets)
4. User Manual
5. Car Adapter
6. AC Adapter
7. AV Cable
8. DC Input Cable
9. Signal Cable
10. Remote Control

SETUP

Initial Charging

Before first use, it is recommended to fully charge the main DVD player unit using the provided AC adapter. Connect the AC adapter to the DC IN port on the main unit and plug it into a wall outlet. The charging indicator will show the charging status.

Connecting the Dual Screens

To enable synchronized playback on both screens, connect the main DVD player unit to the slave LCD monitor using the provided DC Input Cable and AV Cable.

- Connect one end of the DC Input Cable to the **DC OUT** port on the main DVD player and the other end to the **DC IN** port on the slave monitor.
- Connect one end of the AV Cable to the **AV OUT** port on the main DVD player and the other end to the **AV IN** port on the slave monitor.

7.5 Inch Portable Dual DVD Player Watching Videos Synchronized



Image: Diagram illustrating the connection points for the main DVD player and the slave monitor.



Image: Side view of the DVD player units, showing the DC IN, DC OUT, USB, CARD, AV OUT, AV IN, and EARPHONE ports.

In-Car Installation

Use the provided headrest Velcro straps to securely attach both the main DVD player and the slave monitor to the back of the car seats. Ensure the units are firmly mounted to prevent movement during travel.

Enjoy Your Favorite Videos, Musics&Images Anytime, Anywhere



Image: The WONNIE dual DVD players installed on car headrests, providing entertainment for rear passengers.

For power in the car, connect the car adapter to the DC IN port of the main unit and plug it into your vehicle's cigarette lighter socket.

OPERATING INSTRUCTIONS

Power On/Off

Press the **POWER** button on the main unit or the remote control to turn the device on or off.

Disc Playback

1. Gently insert a compatible DVD or CD into the disc slot of the main unit. Ensure the disc label faces upwards.
Note: Remove any protective film or internal card before inserting a disc.
2. The player will automatically detect and begin playing the disc.

3. Use the controls on the unit or the remote control (e.g., PLAY/PAUSE, STOP, NEXT/PREV, VOLUME) to manage playback.



Image: Close-up of the main DVD player unit, showing the control buttons (POWER, SET UP, UP, DOWN, OK, LEFT, RIGHT).

USB/SD Card Playback

Insert a USB drive or SD card (up to 32GB) into the respective slot on the main unit. The player supports various media formats including VOB, AVI, MPEG1, MPEG2, XVID, MP3, WMA, and JPEG. Navigate through your files using the UP/DOWN/LEFT/RIGHT and OK buttons on the unit or remote.

270-Degree Rotation

The main DVD player unit features a screen that can rotate up to 270 degrees, allowing you to adjust the viewing angle for optimal comfort.

Break-Point Memory Function

The device is equipped with a break-point memory function, which allows it to resume playback from where it was last stopped, even after the unit has been powered off.

Enjoy Your Favorite Videos, Musics&Images Anytime, Anywhere



Image: Illustration demonstrating the break-point memory feature, showing the player resuming a movie from the last watched point after being powered off.

MAINTENANCE

Cleaning

- Use a soft, dry cloth to clean the exterior of the units.
- For screen cleaning, use a microfiber cloth specifically designed for electronics. Do not use abrasive cleaners or solvents.
- Keep the disc slot free from dust and debris.

Battery Care

- To prolong the battery life, it is recommended to charge the device before the battery is completely depleted.

- Avoid exposing the device to extreme temperatures, which can affect battery performance.
- If storing the device for an extended period, charge the battery to about 50% and store in a cool, dry place.

General Care

- Handle the units with care to avoid dropping or impacting them.
- Keep the device away from water and other liquids.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel.

TROUBLESHOOTING

If you encounter issues with your WONNIE DVD player, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No power / Device won't turn on	Battery is depleted. Connect the AC adapter or car adapter and charge the unit. Ensure power cables are securely connected.
Disc not playing / Disc error	Disc is dirty or scratched. Clean the disc with a soft cloth. Ensure the disc is inserted correctly with the label facing up. Verify the disc format is supported (CD/DVD/CD-R/RW/VCD). HD/Blu-ray discs are not supported.
No picture on slave monitor	AV cable or DC input cable is not properly connected between the main and slave units. Check connections. Note that the pixel resolution of the slave monitor may be lower than the main DVD player due to audio/video transmission.
USB/SD card not recognized	Ensure the USB drive or SD card is formatted correctly and its capacity does not exceed 32GB. Check if the media files are in supported formats (VOB/AVI/MPEG1/MPEG2/XVID, MP3/WMA, JPEG).
No sound	Volume is too low or muted. Adjust the volume. Check if headphones are plugged in.
Remote control not working	Ensure there are no obstructions between the remote and the player. Replace the remote control battery if necessary.

SPECIFICATIONS

Feature	Detail
Brand	WONNIE
Model Number	WN-UK612

Feature	Detail
Color	Black
Screen Size	7.5 Inches
Display Type	LCD
Display Resolution	1024 x 800
Connectivity Technology	RCA, USB
Supported Media Types	CD, DVD, CD-R/RW, VCD, USB, SD (up to 32GB)
Supported File Formats	VOB, AVI, MPEG1, MPEG2, XVID, MP3, WMA, JPEG
Special Features	Multi-region, Last Memory Function (Break-point Memory), Built-in Rechargeable Battery, Synchronized Dual Screen Playback, Anti-shock Function, 270-degree Screen Rotation
Battery Composition	Lithium-ion

WARRANTY AND SUPPORT

Your WONNIE Portable Dual DVD Player comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the quality of your product.

If you encounter any problems or have questions regarding your device, please do not hesitate to contact WONNIE customer support. You can reach us via Amazon message or through our after-sales mailbox. We are committed to providing the best service to our customers.

© 2024 WONNIE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Can the WONNIE WN-UK612 7.5-inch Portable Car DVD Player play VCDs?

Yes, the WONNIE WN-UK612 7.5-inch Portable Car DVD Player is compatible with VCDs. According to the product specifications and troubleshooting guide, the device supports the following media types and formats: Supported Disc Formats: DVD, CD, CD-R,...

[Read full answer](#)