

[manuals.plus](#) /

- › [Baby Einstein](#) /
- › [Baby Einstein Magic Touch Ukulele Wooden Musical Toy Instruction Manual](#)

**Baby Einstein 11874**

## Baby Einstein Magic Touch Ukulele Wooden Musical Toy Instruction Manual

Model: 11874

### **1. PRODUCT OVERVIEW**

---

The Baby Einstein Magic Touch Ukulele is a wooden musical toy designed to introduce young children to music. It features two play modes: Freestyle and Play Along, allowing children to explore musical creativity and rhythm. The toy produces realistic chord sounds and includes volume control for user convenience.



Front view of the Baby Einstein Magic Touch Ukulele, showcasing its wooden body, red trim, colorful strings, and control panel with a frog design.

### Key Features:

- Instrument with real chord sounds.
- Two interactive play modes: Freestyle and Play Along.
- Adjustable volume control.
- Durable wooden construction.

## 2. WHAT'S IN THE Box

Verify that all components are present upon opening the package:

- 1 x Baby Einstein Magic Touch Ukulele Wooden Musical Toy

## 3. SETUP

### Battery Installation:

The Magic Touch Ukulele requires 3 AA batteries (not included).

1. Locate the battery compartment on the back of the ukulele.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 3 AA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.



Rear view of the Baby Einstein Magic Touch Ukulele, showing the smooth wooden back and the battery compartment cover.

## **4. OPERATING INSTRUCTIONS**

---

### **Power On/Off:**

Locate the power switch on the control panel. Slide the switch to the 'ON' position to activate the toy. Slide to 'OFF' to power down.

### **Volume Control:**

The control panel includes buttons for adjusting the volume. Press the '+' button to increase volume and '-' button to decrease volume. There are multiple volume levels, including a silent mode where the toy can still be used for tactile play without sound.

### **Play Modes:**

The ukulele offers two distinct play modes, selectable via a switch on the control panel:

- **Freestyle Mode:** In this mode, touching the strings or the touch-sensitive area will produce individual chord sounds, allowing for creative and spontaneous musical exploration.
- **Play Along Mode:** When this mode is selected, touching the strings or the touch-sensitive area will trigger pre-recorded melodies, and the child's touch will interact with the tune.

Press the central Baby Einstein button to switch between different melodies or sound effects within the selected mode.



A toddler sitting on the floor, actively engaging with the Baby Einstein Magic Touch Ukulele, demonstrating its size and interactive nature.



A young child holding the Baby Einstein Magic Touch Ukulele, illustrating its lightweight design suitable for small hands.

## 5. MAINTENANCE

---

### Cleaning:

- Wipe the toy with a soft, damp cloth.
- Do not immerse the toy in water.
- Avoid using harsh chemicals or abrasive cleaners.

### Storage:

- Store the toy in a cool, dry place away from direct sunlight.
- Remove batteries if the toy will not be used for an extended period to prevent leakage.

## 6. TROUBLESHOOTING

---

Issue	Possible Cause	Solution
No sound or intermittent sound	Low or dead batteries; incorrect battery installation; power switch off.	Check battery polarity and replace with fresh AA batteries. Ensure the power switch is in the 'ON' position.
Toy does not respond to touch	Power is off; toy malfunction.	Ensure the power switch is 'ON'. If the issue persists after checking batteries, contact customer support.

Issue	Possible Cause	Solution
Sound is too loud or too quiet	Volume setting is incorrect.	Adjust the volume using the '+' and '-' buttons on the control panel.

## 7. SPECIFICATIONS

---

Feature	Detail
Product Dimensions	17 x 7 x 2 inches
Item Model Number	11874
Batteries Required	3 AA batteries
Target Gender	Unisex
Material Type	Wood, Plastic
Item Weight	14.4 ounces

## 8. WARRANTY AND SUPPORT

---

This product is covered by a manufacturer's warranty against defects in materials and workmanship. For specific warranty details, registration, or technical support, please refer to the contact information provided on the product packaging or visit the official Baby Einstein website.

Please retain your proof of purchase for warranty claims.