

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bright Starts](#) /

› [Bright Starts Safari Fun Baby Bouncer Infant Seat Instruction Manual](#)

Bright Starts 12204

Bright Starts Safari Fun Baby Bouncer Infant Seat

Model: 12204

INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your Bright Starts Safari Fun Baby Bouncer Infant Seat. Please read all instructions carefully before use and retain this manual for future reference.

The Bright Starts Safari Fun Baby Bouncer is designed to provide a comfortable and engaging space for infants from birth up to 20 pounds (approximately 0-6 months). It features soothing vibrations, a removable toy bar with two interactive toys, a secure 3-point harness, and non-slip feet for stability.

SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Never leave child unattended.
- Always use the restraint system.
- Never use this product on an elevated surface (e.g., a table).
- This product is not intended for prolonged periods of sleep. If your child falls asleep, move them to a firm, flat sleep surface.
- Do not use this product once your child can sit up unassisted or attempts to climb out.
- Maximum weight recommendation: 20 pounds (9 kg).
- Always ensure the bouncer is placed on a flat, level surface.
- Keep away from open flames, heaters, and other sources of strong heat.
- Do not use if any components are broken or missing.

PARTS LIST

Before assembly, ensure all parts are present. Refer to the included diagram in your product packaging for visual identification.

- Seat Frame (Front and Rear Legs)
- Seat Pad (with 3-point harness)
- Vibration Unit
- Toy Bar

- 2 x Hanging Toys (e.g., monkey, leaf teether)
- Non-slip Feet (pre-attached or separate)

SETUP AND ASSEMBLY

Assembly is generally straightforward and requires no tools. Follow these steps:

1. **Assemble the Frame:** Connect the front and rear leg pieces of the frame until they click securely into place. Ensure all connections are firm.
2. **Attach the Seat Pad:** Drape the seat pad over the assembled frame. Secure the fabric loops or straps of the seat pad to the corresponding attachment points on the frame. Ensure the 3-point harness is correctly positioned.
3. **Install Batteries (for Vibration Unit):** Locate the battery compartment on the underside of the vibration unit. Open the compartment, insert 1 C battery (not included) ensuring correct polarity (+/-). Close the compartment securely. Insert the vibration unit into its designated pocket on the underside of the seat pad.
4. **Attach the Toy Bar:** Align the ends of the toy bar with the slots on either side of the bouncer frame. Press down firmly until the toy bar clicks into place. Ensure it is securely attached. The toy bar is designed to be easily removable for access to your baby.



Figure 1: Fully assembled Bright Starts Safari Fun Baby Bouncer.



Figure 2: Close-up view of the vibration unit, located beneath the seat pad.

OPERATING INSTRUCTIONS

To ensure your baby's comfort and safety, follow these operating guidelines:

- **Placing Your Baby:** Gently place your baby into the bouncer seat. Ensure their back is flat against the seat and their head is supported.
- **Securing the Harness:** Fasten the 3-point harness securely around your baby. Adjust the straps to ensure a snug but comfortable fit. The harness should not be too tight or too loose.
- **Activating Vibrations:** To turn on the soothing vibrations, locate the switch on the vibration unit (typically on the front underside of the seat). Slide the switch to the 'ON' position. To turn off, slide the switch to 'OFF'.
- **Using the Toy Bar:** The toy bar provides entertainment for your baby. The two hanging toys are designed for batting and reaching. The toy bar can be easily removed by pressing the release buttons on either side of the frame and lifting it off.



Figure 3: Baby secured in the bouncer, engaging with the toy bar.



Figure 4: Detailed view of the interactive hanging toys.

MAINTENANCE AND CARE

Regular cleaning and maintenance will prolong the life of your bouncer.

- **Seat Pad:** The seat pad is machine washable. Remove the seat pad from the frame. Fasten all buckles on the seat restraint and any hook-and-loop patches. Machine wash with cold water on a gentle cycle. Do not use bleach. Tumble dry on low heat.
- **Frame and Toys:** Wipe the frame, plastic parts, and toys with a damp cloth and mild soap. Air dry thoroughly. Do not immerse the vibration unit in water.
- **Battery Replacement:** Replace the C battery in the vibration unit when the vibrations weaken or stop. Always use fresh batteries and dispose of old batteries responsibly.

TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Vibration unit not working	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with a fresh C battery. Ensure the unit is properly inserted into its pocket.
Toy bar detaches easily	Not securely attached.	Ensure both ends of the toy bar are fully clicked into the frame slots.
Bouncer feels unstable	Not on a flat surface or frame not fully assembled.	Place the bouncer on a completely flat and level surface. Verify all frame connections are securely clicked.

SPECIFICATIONS

- Model Number:** 12204
- Product Dimensions:** 22.6 x 17.13 x 15.9 inches (57.4 x 43.5 x 40.4 cm)
- Item Weight:** 3.7 pounds (1.68 kg)
- Maximum Weight Recommendation:** 20 pounds (9 kg)
- Target Age:** 0-6 Months
- Material Composition:** 35% Plastic, 30% Metal, 35% Polyester
- Batteries Required:** 1 C battery (for vibration unit, not included)
- Portability:** Yes

WARRANTY AND SUPPORT


For warranty information or customer support, please refer to the contact details provided in your product packaging or visit the official Bright Starts website. Keep your proof of purchase for warranty claims.

Related Documents - 12204

 <p>Safari Fun™ Vibrating Bouncer Bouncer - Animal - Forest Babyspan - Rajas - Selva</p> <p>brightstarts.com</p>	<p><u>Bright Starts Safari Fun™ Vibrating Bouncer: Safety, Assembly, and Care Guide</u></p> <p>Comprehensive guide for the Bright Starts Safari Fun™ Vibrating Bouncer. Includes safety warnings, assembly instructions, care and cleaning, battery information, parts list, and usage details. Multilingual content summarized in English.</p>
 <p>Playful Paradise™ Vibrating Bouncer Bouncer - Animals - Forest Babyspan - Rajas - Selva</p> <p>brightstarts.com</p>	<p><u>Bright Starts Playful Paradise Vibrating Bouncer User Manual and Safety Guide</u></p> <p>Comprehensive user manual for the Bright Starts Playful Paradise Vibrating Bouncer, including assembly instructions, safety warnings, care guidelines, and battery information.</p>

 <p>bright starts 12204-ES</p> <p>Toucan Tango™ Bouncer Bouncer • Asiento • Transat Babywippe • Caderia De Asiento • Sdraietta brightstarts.com</p>	<p>Bright Starts Toucan Tango Bouncer - User Manual and Safety Guide Comprehensive user manual and safety guide for the Bright Starts Toucan Tango Bouncer. Includes assembly instructions, care guidelines, battery information, and important safety warnings.</p>
 <p>bright starts 12204-ES</p>	<p>Bright Starts Tiki Toy Bar™ Activity Gym: Care, Safety, and Assembly Guide Comprehensive guide for the Bright Starts Tiki Toy Bar™ Activity Gym, covering essential care and cleaning instructions, critical safety warnings, and step-by-step assembly guidance. Includes a parts list for easy identification.</p>
 <p>bright starts 12204-ES</p> <p>Playful Paradise™ Vibrating Bouncer Bouncer • Asiento • Transat Babywippe • Caderia De Asiento • Sdraietta brightstarts.com</p>	<p>Bright Starts Playful Paradise Vibrating Bouncer - Safety, Care, and Assembly Instructions Comprehensive guide for the Bright Starts Playful Paradise Vibrating Bouncer, covering safety warnings, assembly instructions, care and cleaning, battery information, and parts list. Ensure safe use for infants.</p>
 <p>bright starts 12204-ES</p> <p>Rosy Rainbow™ Infant to Toddler Rocker™ Bouncer • Asiento • Transat Babywippe • Caderia De Asiento • Sdraietta brightstarts.com</p>	<p>Bright Starts Rosy Rainbow Infant to Toddler Rocker - Safety, Care, and Assembly Guide Comprehensive guide for the Bright Starts Rosy Rainbow Infant to Toddler Rocker, covering safety warnings, care instructions, battery information, parts list, and assembly steps.</p>

Documents - Bright Starts – 12204

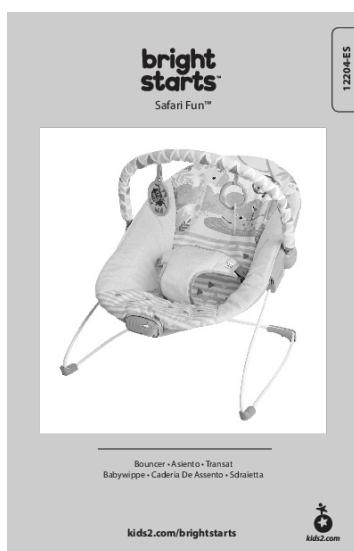

[\[pdf\] Instructions](#)

Safari Fun™bright starts safari fun bouncer 0438076001631749240babyfactory co nz content manuals
bright 0438076001631749240 srsltid AfmBOooYJRFCe7e52Tux4KDViKriQ8CKWXi5MYlgB
BS0OWQSkICljDy |||

12204-ES Safari FunTM Bouncer Asiento Transat Babywippe Caderia De Asiento Sdraietta
kids2.com/brightstarts ENGLISH IMPORTANT KEEP FOR FUTURE
REFERENCE WARNING FALL HAZARD: Babies have suffered skull fractures falling while in and from bouncers when not used properly. Use bouncer ONLY on th...
lang:en score:19 filesize: 3.05 M page_count: 28 document date: 2019-02-11

**bright
starts™**
Safari Fun™

12204-ES



Bouncer • Asiento • Transat
Babywippe • Caderia De Asiento • Sdraietta

kids2.com/brightstarts



[\[pdf\] Instructions](#)

Safari Fun™ 3 The vibration Unit requires 1 size C LR14 5V alkaline batteries not included CAUTION
Follow the battery guidelines in this section Otherwise life may be shortened or leak rupture bright starts
safari fun bouncer 0438076001631749240 babyfactory co nz content manuals |||

12204-ES Safari FunTM Bouncer Asiento Transat Babywippe Caderia De Asiento
Sdraietta kids2.com/brightstarts ENGLISH IMPORTANT KEEP FOR FUTURE
REFERENCE WARNING FALL HAZARD: Babies have suffered skull fractures falling
while in and from bouncers when not used properly. Use bouncer ONLY on th...

lang:en score:15 filesize: 3.05 M page_count: 28 document date: 2019-02-11