

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Swing-N-Slide](#) /
- › [Swing-N-Slide Ranger Wooden Swing Set \(Model PB 8360\) Instruction Manual](#)

## Swing-N-Slide PB 8360

# Swing-N-Slide Ranger Wooden Swing Set (Model PB 8360) Instruction Manual

Brand: Swing-N-Slide | Model: PB 8360

## INTRODUCTION

---

The Swing-N-Slide Ranger Wooden Swing Set is designed for backyard residential use, offering a classic A-frame structure with multiple swing options. This manual provides comprehensive instructions for assembly, operation, maintenance, and safety to ensure a safe and enjoyable experience.

## WHAT'S IN THE BOX

---

Before beginning assembly, verify that all components are present:

- Pre-cut Cedar Lumber
- All necessary Hardware (bolts, nuts, washers, etc.)
- Two (2) Swing Seats with Plastisol Coated Chains
- One (1) Ring/Trapeze Combination Swing with Coated Chain
- Fully Illustrated Installation Manual



Image: Contents are packaged in two boxes, clearly labeled with the model number PB 8360.

## SETUP AND ASSEMBLY

---

Assembly of the Swing-N-Slide Ranger Wooden Swing Set requires careful attention to the provided instructions. It is recommended to have at least two adults for assembly. Ensure you have adequate space (104"L x 92"W x 82"H when fully assembled) and a level surface for installation.

1. **Site Preparation:** Choose a level area in your backyard. Clear any obstacles or debris.
2. **Unpack Components:** Lay out all lumber and hardware. Refer to the included installation manual for a detailed parts list.
3. **Assemble A-Frame:** Follow the illustrated instructions to connect the wooden beams using the provided hardware. Ensure all bolts are securely tightened.
4. **Install Swings:** Attach the two swing seats and the ring/trapeze combination swing to the main beam. The chains are plastisol coated to prevent pinching and rust. Adjust chain height as needed for users.
5. **Secure to Ground:** The swing set meets ASTM safety standards for residential use. For enhanced stability, especially with active use, consider anchoring the legs into the ground.

Your browser does not support the video tag.

Video: Demonstrates the ease of setting up the swing set, highlighting its simple design.

Your browser does not support the video tag.

Video: Shows the assembly process and the completed swing set in a backyard setting.



Image: The assembled wooden swing set, featuring two swing seats and a trapeze bar, ready for use.

## OPERATING INSTRUCTIONS

The Swing-N-Slide Ranger Wooden Swing Set is designed for active play. Each swing supports up to 115 pounds. The swing seats and ring/trapeze combination swing are ready for immediate use after proper assembly.

- **Swing Seats:** Users should sit centered on the swing seat and hold onto the chains firmly.
- **Ring/Trapeze Swing:** This swing allows for various acrobatic maneuvers. Users should maintain a secure grip on the rings or bar.

- **Height Adjustment:** The chains can be adjusted to suit the height of the users. Refer to the installation manual for specific instructions on adjusting chain length.

# DIMENSIONS

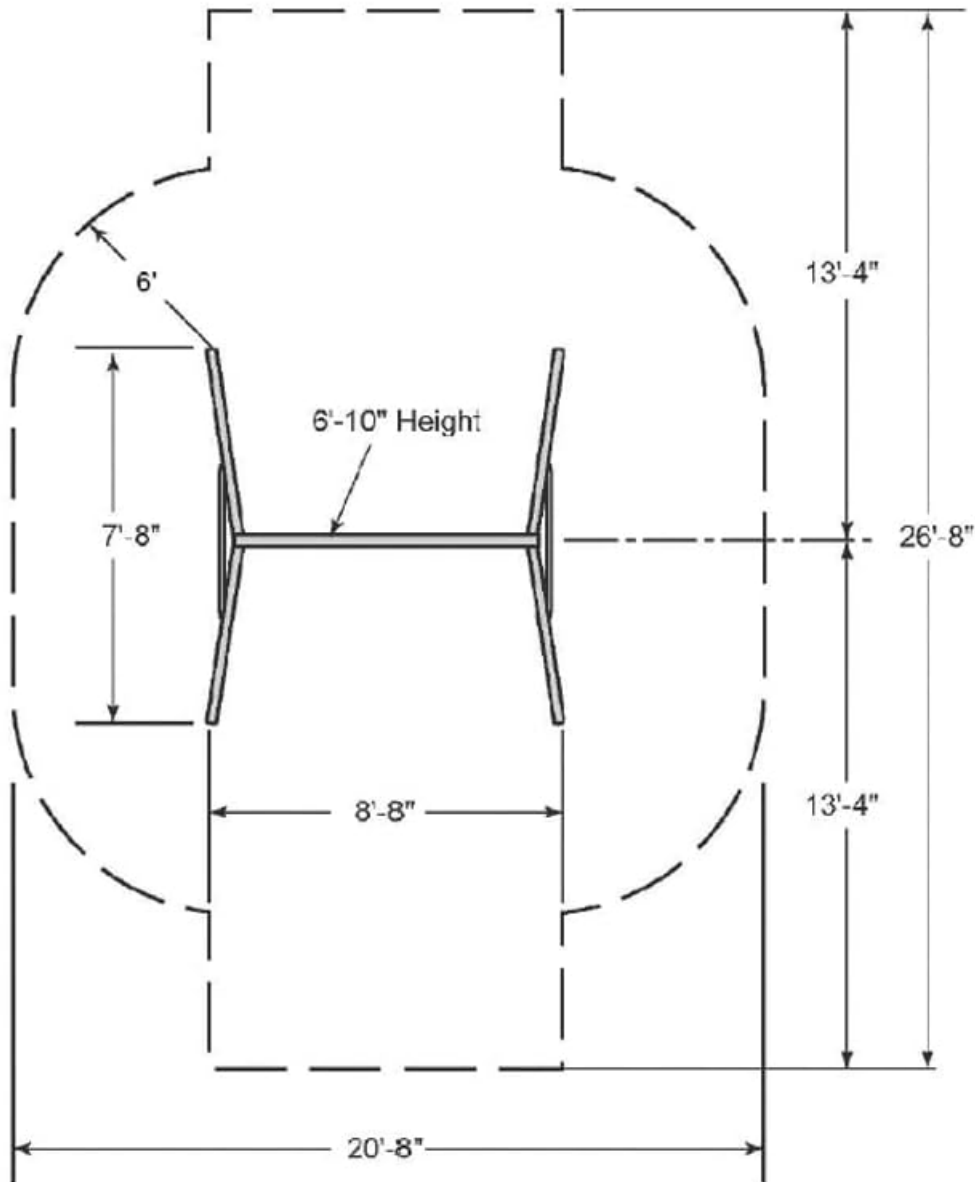


Image: Children enjoying the swing set, demonstrating the use of both the standard swings and the trapeze bar.

## MAINTENANCE

Regular maintenance is crucial to ensure the longevity and safety of your swing set. Perform the following checks periodically:

- **Wood Inspection:** Annually inspect all wooden components for cracks, splinters, or signs of rot. Sand down any rough spots and apply a weather-resistant sealant as needed to protect the wood.
- **Hardware Check:** Periodically check all bolts, nuts, and connections for tightness. Tighten any loose hardware to prevent instability.
- **Swing Chains:** Inspect the plastisol coated chains for wear or damage. Ensure the coating is intact to prevent pinched

fingers and rust.

- **Ground Anchors:** If anchored, ensure the ground anchors remain secure.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Swing set feels wobbly or unstable.	Loose hardware or uneven ground.	Tighten all bolts and nuts. Ensure the swing set is on a level surface. Consider using ground anchors if not already installed.
Holes for bolts do not align during assembly.	Minor manufacturing tolerance or wood expansion.	Carefully re-align components. If necessary, gently widen the hole with a drill bit (ensure not to compromise structural integrity).
Wood shows signs of weathering (fading, minor cracks).	Exposure to sun, rain, and other elements.	Apply a weather-resistant sealant or stain annually. Sand down any splinters or rough areas.

## SPECIFICATIONS

- **Brand:** Swing-N-Slide
- **Model:** PB 8360 Ranger
- **Material:** Wood (Cedar)
- **Color:** Brown
- **Assembled Dimensions (L x W x H):** 104" x 92" x 82"
- **Item Weight:** 90 pounds
- **Maximum Weight Capacity per Swing:** 115 pounds
- **Recommended Age:** 3 months - 10 years
- **Assembly Required:** Yes
- **Safety Standards:** Meets and/or exceeds ASTM safety standards for backyard residential use only
- **Swing Chain Material:** Plastisol coated chain (prevents pinched fingers and rust)



Image: Detailed dimensions and recommended safety zone for the swing set installation.

## **SAFETY INFORMATION**

---

This product is intended for backyard residential use only. Always supervise children during play. Recommended ages for use are 3 months to 10 years. Ensure all safety guidelines in the included installation manual are followed.

## **WARRANTY AND SUPPORT**

---

For customer support or inquiries regarding your Swing-N-Slide Ranger Wooden Swing Set, please refer to the contact information provided in your installation manual. This product is eligible for 30-day easy returns through Amazon.com.