

Manuals.plus /

› VINABTY /

› VINABTY RM-YD037 Remote Control Instruction Manual for Sony LCD TVs

VINABTY RM-YD037

VINABTY RM-YD037 Remote Control Instruction Manual

For Sony LCD TV Models

1. INTRODUCTION

This manual provides comprehensive instructions for the VINABTY RM-YD037 replacement remote control. This remote is designed to be compatible with various Sony LCD TV models, offering a direct replacement for your original remote without requiring complex setup.

Compatible Sony LCD TV Models include:

- KDL-60NX801, KDL-60NX800, KDL-52NX801, KDL-52NX800
- KDL-46NX800, KDL-46NX700, KDL-40NX700
- KDL-46HX701, KDL-32EX308, KDL-22EX308
- KDL-40HX701, KDL-55HX701, KDL-60NX810
- KDL-55NX811, KDL-55NX810, KDL-46NX810
- KDL-46NX711, KDL-46NX710, KDL-40NX711, KDL-40NX710

2. PRODUCT OVERVIEW

The VINABTY RM-YD037 is an infrared (IR) remote control designed for ease of use and direct compatibility with the listed Sony LCD TV models. It features an ergonomic design for comfortable handling and provides all essential functions for controlling your television.

The remote control is a direct replacement, meaning no programming or pairing is required. Simply insert batteries, and it is ready for operation.



Image 2.1: Angled view of the VINABTY RM-YD037 remote control, showing its overall shape and button layout.

3. SETUP

Setting up your RM-YD037 remote control is a simple process that involves installing batteries.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it. If the cover is stiff, apply gentle, firm pressure.
3. Insert two AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Once batteries are installed, the remote control is ready for immediate use with your compatible Sony LCD TV. No additional programming or pairing is required.





Image 3.1: Top-down view of the remote control, illustrating the button layout and general design.

4. OPERATING INSTRUCTIONS

To operate your Sony LCD TV with the RM-YD037 remote control, point the remote directly at the TV's infrared receiver and press the desired buttons. Ensure there are no obstructions between the remote and the TV.

4.1 Basic Functions

- **POWER (TV I/O):** Turns the TV on or off.
- **INPUT:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the television channel.
- **MUTE:** Mutes or unmutes the TV audio.
- **Number Buttons (0-9):** Directly select channels.
- **MENU / HOME:** Accesses the TV's main menu or smart TV home screen.
- **Navigation (Up/Down/Left/Right) and ENTER:** Navigates through menus and confirms selections.
- **RETURN / BACK:** Returns to the previous screen or menu.

4.2 Advanced Functions

The remote also includes buttons for specific functions such as:

- **GUIDE:** Displays the electronic program guide.
- **FAVORITES:** Accesses favorite channels or content.
- **DISPLAY:** Shows information about the current program or input.

- **OPTIONS:** Provides context-sensitive options for the current screen.
- **THEATER:** Activates a specific picture/sound mode.
- **SYNC MENU:** Accesses Sony's BRAVIA Sync menu for connected devices.
- **I-MANUAL:** Accesses the TV's on-screen instruction manual.
- **SCENE:** Changes the scene selection mode.
- **TOP MENU / MENU:** Accesses the top menu of a connected device (e.g., Blu-ray player).
- **BD/DVD MENU:** Accesses the menu of a connected Blu-ray/DVD player.
- **QRIOCITY / INTERNET WIDGETS / VIDEO:** Accesses internet services or video content.

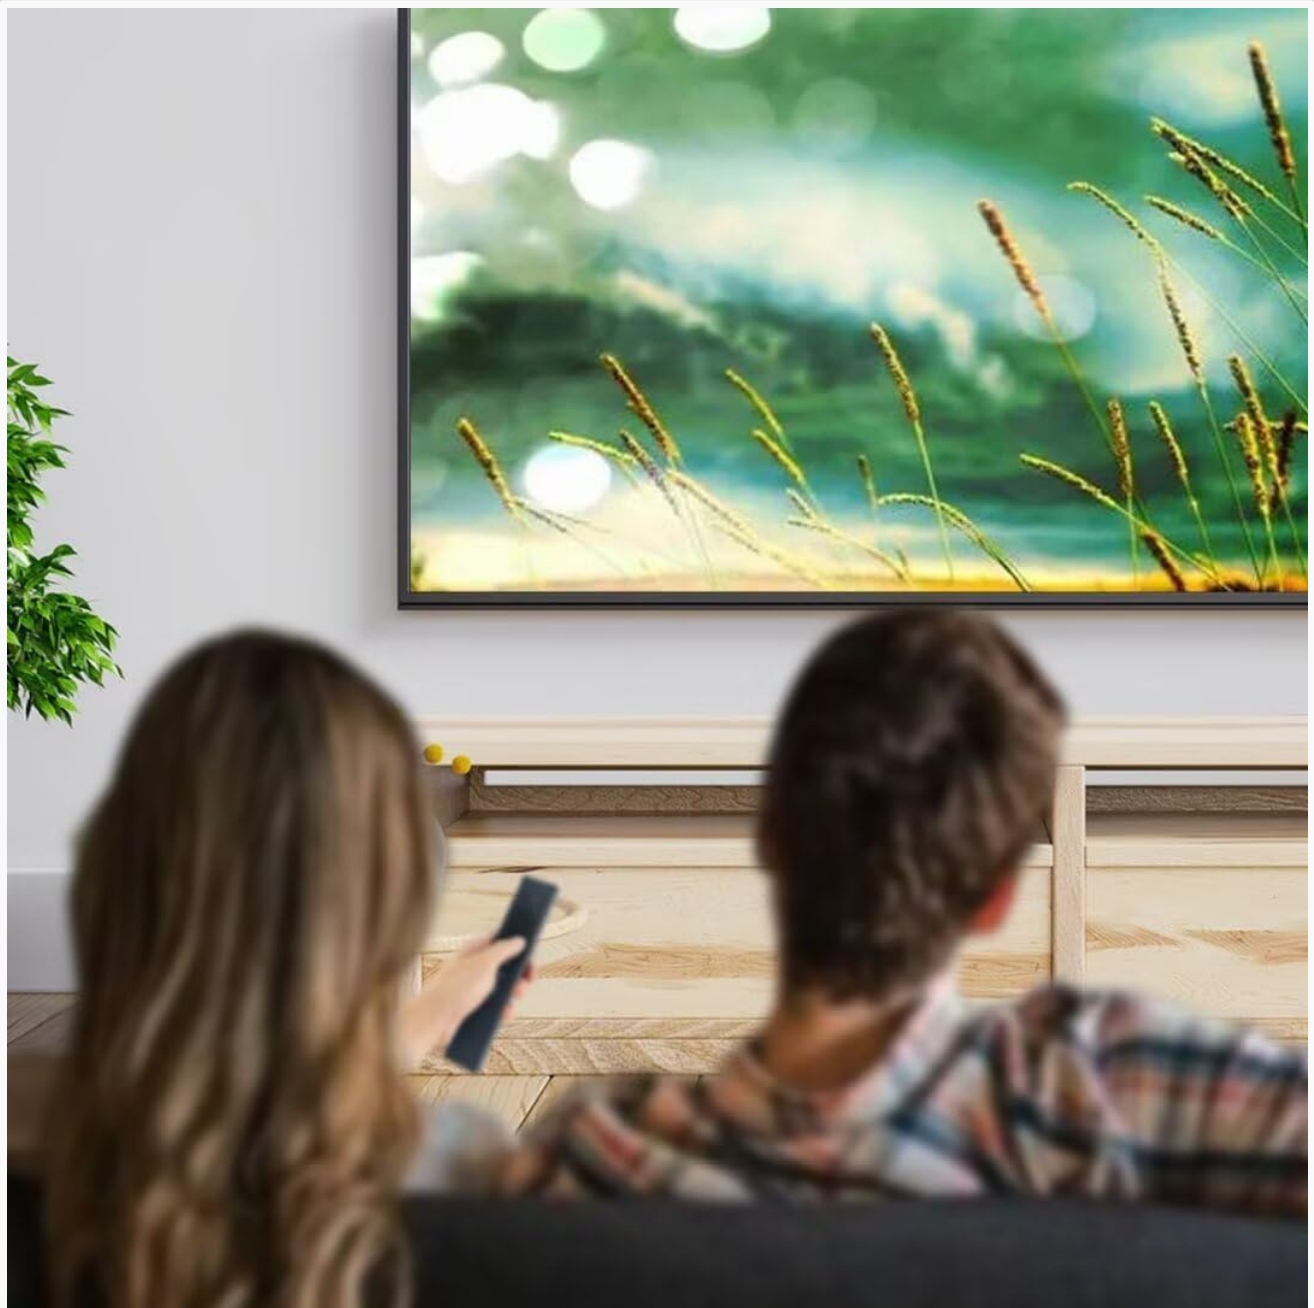


Image 4.1: Illustrative image of a remote control being used to operate a television.

5. MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your remote control.

5.1 Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, or solvents, as these can damage the surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.

5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage to the remote.

6. TROUBLESHOOTING

If you encounter issues with your RM-YD037 remote control, refer to the following common troubleshooting steps:

- **Remote not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective operating range and pointing the remote directly at the TV.
- **Specific buttons not working:**
 - This could indicate a faulty button or a low battery. Try replacing the batteries first.
 - Ensure the TV is powered on and not in a mode that disables certain functions.
- **Difficulty opening battery compartment:**
 - Apply gentle, firm pressure when sliding the cover. Avoid excessive force to prevent damage.

If these steps do not resolve the issue, please refer to the Warranty and Support section for further assistance.

7. SPECIFICATIONS

Feature	Specification
Model Number	RM-YD037
Brand	VINABTY
Product Dimensions	9.5 x 2 x 0.6 inches
Item Weight	3.5 ounces
Connectivity Technology	Infrared (IR)
Compatible Devices	Television (Sony LCD TVs)
Max Number of Supported Devices	1
Special Feature	Ergonomic Design

8. WARRANTY AND SUPPORT

Specific warranty terms for the VINABTY RM-YD037 remote control are typically provided by the seller or manufacturer at the time of purchase. Please refer to your purchase documentation or contact the seller directly for detailed warranty information.

For technical support or further assistance with your remote control, please contact the seller or the VINABTY manufacturer through their official support channels. Provide your product model number (RM-YD037) and details of your issue for efficient service.
