

VINABTY CT-90336

VINABTY CT-90336 Remote Control User Manual

Model: CT-90336

Compatible with Toshiba TV Models: 32CV700E, 32CV700T, 32CV700V, 40CV700E, 40CV700T, 40CV700V, CT-90380, CT-90406

1. INTRODUCTION

This manual provides instructions for the VINABTY CT-90336 replacement remote control. This remote is designed to function as a direct replacement for the original Toshiba TV remote controls, specifically for the listed models. It is pre-programmed and requires no additional setup beyond battery installation.

2. PACKAGE CONTENTS

- 1 x VINABTY CT-90336 Remote Control

3. SETUP

3.1 Installing Batteries

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back view of the VINABTY CT-90336 remote control, illustrating the battery compartment location.

3.2 Initial Use

This remote control is pre-programmed for the specified Toshiba TV models. No additional programming or pairing is required. Once batteries are installed, the remote is ready for immediate use.

4. OPERATING INSTRUCTIONS

Point the remote control directly at your Toshiba TV's infrared receiver. Ensure there are no obstructions between the remote and the TV.



Image: Front view of the VINABTY CT-90336 remote control, showing the layout of all buttons.

4.1 Basic Functions

- **Power Button** (⏻): Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select TV channels.
- **Volume Up/Down (+ / -)**: Adjusts the sound volume.
- **Channel Up/Down (P ^ / P v)**: Changes the TV channel sequentially.
- **Mute Button** (⏸): Mutes or unmutes the TV sound.
- **Input/Source Button** (⏏): Cycles through available input sources (HDMI, AV, etc.).

4.2 Menu and Navigation

- **MENU Button**: Opens the TV's main menu.
- **Navigation Arrows** (⬆, ⬇, ⬅, ➡): Used to move through menu options.
- **OK Button**: Confirms a selection within the menu.
- **EXIT Button**: Closes the current menu or on-screen display.
- **RETURN Button**: Goes back to the previous screen or menu.

4.3 Special Function Buttons

- **QUICK Button:** Accesses quick settings or a frequently used menu.
- **TEXT Button:** Activates or deactivates Teletext (if supported by your TV and broadcast).
- **LIST Button:** Displays a list of channels or recorded programs.
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons typically correspond to specific functions displayed on-screen within TV menus or interactive services.
- **SUBTITLE Button:** Toggles subtitles on or off.
- **CD/VII Button:** Functionality may vary depending on TV model, often related to external device control or specific TV features.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly installed with the correct polarity.
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective range of the TV's IR receiver.
- **Only some buttons work:**
 - This remote is designed for specific Toshiba TV models. Verify your TV model is listed as compatible.
 - Some advanced functions or buttons may not be supported by all compatible TV models, depending on the original remote's capabilities.
 - Ensure the remote is pointed directly at the TV.
- **Remote range is poor:**
 - Replace the batteries with new ones.
 - Ensure the TV's IR sensor is clean and not obstructed.

7. SPECIFICATIONS

- **Product Dimensions:** 7.5 x 2 x 0.5 inches
- **Item Weight:** 2.39 ounces
- **Batteries Required:** 2 x AAA (not included)

- **Manufacturer:** VINABTY factory
- **Brand:** VINABTY
- **Special Feature:** Ergonomic design
- **Color:** Black
- **Max Number of Supported Devices:** 1 (specifically for compatible Toshiba TVs)
- **Compatible Devices:** Television

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller or retailer from whom you purchased this product. Keep your purchase receipt for any warranty claims.