

## Mando ZH/JT01(JT-03)

# Mando A/C Remote Control Instruction Manual

Model: ZH/JT01(JT-03) | Brand: Mando

## 1. INTRODUCTION

This instruction manual provides comprehensive guidance for the proper use, setup, operation, and maintenance of your Mando A/C Remote Control, Model ZH/JT01(JT-03). Please read this manual carefully before using the remote control to ensure optimal performance and longevity. This remote is designed for universal compatibility with various air conditioning units.

## 2. PRODUCT OVERVIEW

The Mando A/C Remote Control is a white, infrared-based device designed for convenient control of your air conditioner. It features a clear LCD display and an array of buttons for various functions.

### 2.1 Remote Control Layout

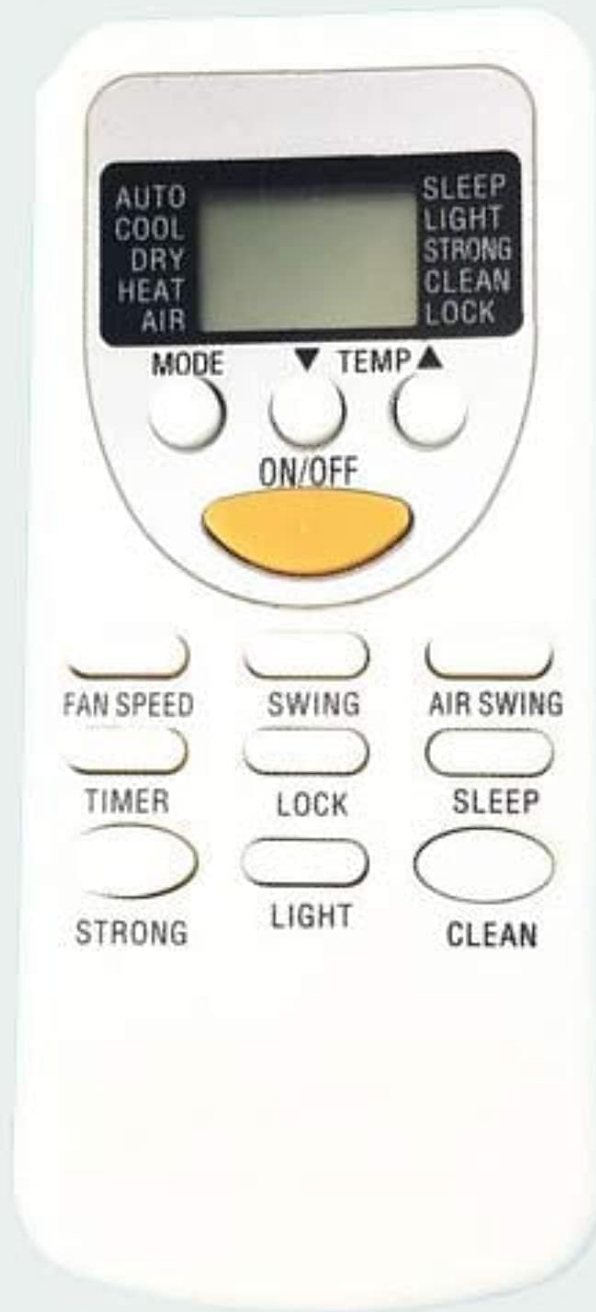


Figure 1: Front view of the Mando A/C Remote Control, Model ZH/JT01(JT-03). The remote is white with a grey LCD screen at the top. Below the screen are buttons for various functions, including power, mode selection, temperature adjustment, fan speed, swing, timer, and special features.

## 2.2 Button Functions

**ON/OFF:** Powers the air conditioner on or off.

**MODE:** Cycles through operating modes:

- **AUTO:** Automatically selects the best mode based on room temperature.
- **COOL:** Activates cooling function.
- **DRY:** Reduces humidity in the room.
- **HEAT:** Activates heating function (if supported by A/C unit).
- **AIR (Fan):** Operates the fan without heating or cooling.

**TEMP ▼ / ▲:** Adjusts the desired temperature up or down.

**FAN SPEED:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).

**SWING:** Controls the horizontal air swing of the air conditioner's louvers.

**AIR SWING:** Controls the vertical air swing of the air conditioner's louvers.

**TIMER:** Sets a timer for the air conditioner to turn on or off automatically.

**LOCK:** Locks the remote control buttons to prevent accidental changes.

**SLEEP:** Activates sleep mode, which adjusts temperature and fan speed for comfortable sleep.

**STRONG:** Activates a powerful cooling/heating mode for rapid temperature change.

**LIGHT:** Controls the display light on the air conditioner unit (if applicable).

**CLEAN:** Activates a self-cleaning function on the air conditioner unit (if applicable).

## 3. SETUP

---

### 3.1 Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two new AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.
4. *Note: Remove batteries if the remote will not be used for an extended period to prevent leakage.*

### 3.2 Initial Use

As a universal remote, this Mando A/C remote is often pre-programmed for common air conditioner brands. In most cases, it should work directly with your unit after battery installation. If it does not respond, point the remote directly at your air conditioner's receiver and try pressing the ON/OFF button. If still unresponsive, consult your air conditioner's manual for specific remote control pairing instructions, or try cycling through common codes if the remote has a code-setting feature (not explicitly listed for this model).

## 4. OPERATING INSTRUCTIONS

---

Ensure the remote control is pointed directly at the air conditioner's infrared receiver for optimal communication.

### 4.1 Power On/Off

Press the **ON/OFF** button once to turn the air conditioner on or off.

### 4.2 Selecting Operating Mode

Press the **MODE** button repeatedly to cycle through the available modes: AUTO, COOL, DRY, HEAT, and AIR (Fan). The selected mode will be displayed on the remote's LCD screen.

### 4.3 Adjusting Temperature

Use the **TEMP ▲** button to increase the temperature and the **TEMP ▼** button to decrease it. The current temperature setting will be shown on the display.

### 4.4 Fan Speed Control

Press the **FAN SPEED** button to adjust the fan's intensity. Options typically include Low, Medium, High, and Auto.

### 4.5 Airflow Direction (Swing)

Press **SWING** to control the horizontal movement of the air louvers. Press **AIR SWING** to control the vertical movement of

the air louvers. Pressing repeatedly may cycle through fixed positions or continuous swing.

### 4.6 Timer Function

Press the **TIMER** button to set a specific time for the air conditioner to turn on or off. Refer to your air conditioner's manual for detailed timer programming steps, as this can vary by unit.

### 4.7 Special Functions

**SLEEP:** Activates a quiet, energy-saving mode that gradually adjusts temperature for comfortable sleep.

**STRONG:** Engages maximum cooling or heating power for quick temperature changes.

**LIGHT:** Toggles the display light on the air conditioner unit.

**CLEAN:** Initiates a self-cleaning cycle on compatible air conditioner units.

**LOCK:** Press and hold to lock the remote's buttons, preventing accidental input. Press and hold again to unlock.

## 5. MAINTENANCE

### 5.1 Cleaning the Remote

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these can damage the remote's surface or internal components.

### 5.2 Battery Replacement

Replace batteries when the remote's display becomes dim or the remote becomes unresponsive. Always replace both batteries at the same time with new ones of the same type. Dispose of used batteries according to local regulations.

### 5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent potential leakage and damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## 6. TROUBLESHOOTING

| Problem                            | Possible Cause                                                                                                                                                                                                                 | Solution                                                                                                                                                                                                                                     |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remote not responding to A/C unit. | <ul style="list-style-type: none"><li>• Low or dead batteries.</li><li>• Remote not pointed at A/C receiver.</li><li>• Obstruction between remote and A/C.</li><li>• Incorrect code/pairing (for universal remotes).</li></ul> | <ul style="list-style-type: none"><li>• Replace batteries.</li><li>• Ensure direct line of sight to A/C unit.</li><li>• Remove any obstructions.</li><li>• If applicable, re-program or try different codes (refer to A/C manual).</li></ul> |
| LCD display is dim or blank.       | <ul style="list-style-type: none"><li>• Low batteries.</li></ul>                                                                                                                                                               | <ul style="list-style-type: none"><li>• Replace batteries.</li></ul>                                                                                                                                                                         |
| Buttons are unresponsive.          | <ul style="list-style-type: none"><li>• Batteries are low or incorrectly inserted.</li><li>• Remote is in LOCK mode.</li></ul>                                                                                                 | <ul style="list-style-type: none"><li>• Check/replace batteries.</li><li>• Press and hold the LOCK button to unlock the remote.</li></ul>                                                                                                    |

## 7. SPECIFICATIONS

|                                 |                  |
|---------------------------------|------------------|
| Model Number                    | ZH/JT01(JT-03)   |
| Brand                           | Mando            |
| Color                           | White            |
| Compatibility                   | Air Conditioners |
| Product Dimensions              | 10 x 10 x 10 cm  |
| Item Weight                     | 79 g             |
| Connectivity Technology         | Infrared         |
| Controller Type                 | Button Control   |
| Special Features                | Universal        |
| Max Number of Supported Devices | 1                |

## 8. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your Mando A/C Remote Control, please refer to the purchase documentation or contact the retailer from whom the product was purchased. Keep your proof of purchase for any warranty claims.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

### Answered questions about this manual

#### Why is the room temperature not changing when I use the Mando ZH/JT01(JT-03) remote control?

If your Mando ZH/JT01(JT-03) remote is not changing the room temperature, please check the following troubleshooting steps based on the manual: Check for LOCK Mode: The remote has a LOCK function to prevent accidental changes....

[Read full answer](#)