



Manuals.plus /

› **Sweety Fox** /

› Sweety Fox 7-in-1 Multifunction Baby Food Cooker Mixer User Manual

**Sweety Fox SSD-yxerji-F2-0053**

# Sweety Fox 7-in-1 Multifunction Baby Food Cooker Mixer

MODEL: SSD-YXERJI-F2-0053

## 1. Introduction

---

The Sweety Fox 7-in-1 Multifunction Baby Food Cooker Mixer is designed to simplify the preparation of healthy and delicious meals for your baby. This versatile appliance combines seven essential functions: steaming, defrosting, reheating, sterilizing, mixing, pulse blending, and automatic cleaning. Its intuitive digital interface and robust safety features ensure a convenient and secure cooking experience for parents.



*Image: The Sweety Fox 7-in-1 Multifunction Baby Food Cooker Mixer, showcasing its sleek design and integrated mixing bowl.*

## 2. Safety Instructions

---

Please read all safety instructions carefully before using the appliance to prevent injury or damage.

- Always ensure the appliance is placed on a stable, flat, and heat-resistant surface.
- Do not immerse the main unit in water or any other liquid.
- Keep out of reach of children. This appliance is not a toy.

- The appliance is equipped with a safety lock system. The blades will not operate unless the mixing bowl, steaming basket, and lid are correctly installed and locked.
- The anti-scald handle is designed to protect against burns when handling hot components. Always use caution.
- The anti-overheating function will automatically shut down the appliance if it detects excessive heat. Allow it to cool down before resuming use.
- Ensure the product is unplugged before cleaning or assembly/disassembly.
- This product is BPA-free, ensuring safe food preparation for your baby.



*Image: Visual representation of the double locking systems, non-slip base, and anti-scald handle for enhanced safety.*

### 3. Product Components

Familiarize yourself with the main parts of your Sweet Fox Baby Food Cooker Mixer:

- **Main Unit:** Houses the motor, heating element, and control panel.
- **Water Tank:** Located at the top of the main unit for steaming.
- **Mixing Bowl:** Transparent container for blending and processing food.

- **Steaming Basket:** Inserted into the mixing bowl for steaming ingredients.
- **Blade Assembly:** Detachable blade for mixing and pureeing.
- **Lid:** Secures the mixing bowl and steaming basket during operation.
- **Digital Control Panel:** Touchscreen interface for selecting functions and adjusting settings.



Image: Diagram illustrating the 7-in-1 multifunction capabilities of the appliance, including auto-clean, steam, disinfect, defrost, reheat, pulse, and stir.

## 4. Setup

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, wash all detachable parts (mixing bowl, steaming basket, blade, lid) with warm soapy water. Rinse thoroughly and dry. The main unit can be wiped with a damp cloth.
3. **Assembly:** Place the blade assembly into the mixing bowl. Insert the steaming basket into the mixing bowl if steaming. Secure the lid onto the mixing bowl. Place the assembled mixing bowl onto the main unit, ensuring it clicks into place.
4. **Water Tank:** Open the water tank cover on top of the main unit and fill with clean water. Do not overfill. Close the cover securely.



*Image: Demonstrates the easy assembly of the mixing bowl and steaming basket, and the convenient large water tank for filling.*

## 5. Operating Instructions

---

The Sweety Fox Baby Food Cooker Mixer features a digital touchscreen for easy operation. It offers 7 pre-programmed functions for various food preparation needs.



Press 1 button  
and let the cooker  
work on its own.



**TOUCHSCREEN,  
ERGONOMIC AND  
AUTONOMOUS**

*Image: Close-up of the intuitive touchscreen control panel, highlighting its ergonomic design and autonomous operation.*

### **5.1. Steaming Food**

1. Prepare ingredients: Wash, peel, and chop fruits, vegetables, meat, or fish into small, uniform pieces.
2. Fill the water tank with the appropriate amount of water (refer to markings for desired steaming time).
3. Place the chopped ingredients into the steaming basket.
4. Insert the steaming basket into the mixing bowl, secure the lid, and place the bowl onto the main unit.
5. On the digital control panel, select the 'Steam' function. Adjust the steaming time using the '+' and '-' buttons if needed.
6. Press the start button. The appliance will automatically steam the food and alert you when finished.

### **5.2. Mixing/Pureeing Food**

1. After steaming, carefully remove the steaming basket from the mixing bowl.
2. Transfer the steamed food directly into the mixing bowl (without the steaming basket).
3. Secure the lid and place the mixing bowl onto the main unit.
4. Select the 'Mix' function for continuous blending or 'Pulse' for manual control over texture.

5. Press the start button. Blend until the desired consistency is achieved. For pulse blending, press and release the 'Pulse' button repeatedly.



*Image: Step-by-step guide showing how to fill the water tank, place food in the steaming basket, start steaming, fill the mixing cup with steamed food, start mixing, and serve the puree.*

### 5.3. Defrosting Food

To defrost frozen food, place the frozen portion (e.g., from a baby food container) into the steaming basket or directly into the mixing bowl if it fits. Select the 'Defrost' function on the control panel and start the process. The appliance will gently defrost the food.

### 5.4. Reheating Food

To reheat previously prepared food, place it in the mixing bowl. Select the 'Reheat' function on the control panel. The appliance will warm the food to a suitable temperature. Always check the food temperature before serving to your baby.

### 5.5. Sterilizing Items

The sterilize function is ideal for small baby items like pacifiers or bottle nipples. Place the items in the steaming basket. Select the 'Disinfect' function on the control panel and start the cycle. This function uses steam to sterilize.

## 5.6. Automatic Cleaning

The auto-clean function simplifies daily maintenance. After use, ensure the mixing bowl is empty. Add a small amount of water and a drop of mild dish soap to the mixing bowl. Select the 'Clean' function on the control panel and start the cycle. The appliance will perform a quick cleaning cycle. Afterwards, rinse the parts thoroughly under running water.

Your browser does not support the video tag.

*Video: Official product video demonstrating the various functions of the Sweety Fox Baby Food Cooker, including food preparation, steaming, mixing, and cleaning processes.*

## 6. Cleaning and Maintenance

---

Regular cleaning ensures the longevity and hygiene of your appliance.

- **Detachable Parts:** The mixing bowl, steaming basket, blade, and lid are dishwasher safe. For best results, place them on the top rack.
- **Hand Washing:** If hand washing, use warm soapy water and a soft brush to clean all parts. Rinse thoroughly to remove any soap residue.
- **Main Unit:** Wipe the main unit with a damp cloth. Do not use abrasive cleaners or immerse it in water.
- **Descaling:** Over time, mineral deposits may build up in the water tank. To descale, mix equal parts water and white vinegar. Pour into the water tank and run a steaming cycle without food. Rinse thoroughly afterwards.

## 7. Troubleshooting

---

If you encounter any issues with your Sweety Fox Baby Food Cooker Mixer, please refer to the following common solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; safety lock not engaged.	Ensure power cord is securely plugged in. Test the outlet with another appliance. Check that the mixing bowl, steaming basket, and lid are correctly assembled and locked.
Steaming function not working.	Insufficient water in tank; water tank cover not closed.	Fill the water tank to the appropriate level. Ensure the water tank cover is securely closed.
Mixing function not working.	Lid not secured; food pieces too large; motor overheated.	Ensure the lid is properly locked. Cut food into smaller pieces. If overheated, unplug and allow to cool for 15-20 minutes before restarting.
Error message on display.	Specific error (e.g., E1 for sensor issue).	Unplug the appliance, wait a few minutes, and plug it back in. If the error persists, contact customer support.

## 8. Specifications

---

- **Brand:** Sweety Fox
- **Model Number:** SSD-yxerji-F2-0053
- **Color:** White
- **Product Dimensions (L x W x H):** 29.5 x 15 x 26 cm
- **Item Weight:** 71 grams
- **Voltage:** 220 Volts
- **Material:** Metal
- **Number of Speeds:** 7 (referring to functions/programs)
- **Special Features:** Safety lock, Programmable
- **Care Instructions:** Dishwasher safe, Hand wash
- **Included Components:** Mixer, mixing bowl, blade
- **Country of Origin:** China

## 9. Warranty and Support

---

Sweety Fox offers a 30-day "100% satisfied or refunded" guarantee and a 12-month manufacturer's warranty on your baby food cooker mixer.

For any questions, technical support, or warranty claims, please contact Sweety Fox customer service through the retailer's platform or visit our official website for contact information.

Please retain your proof of purchase for warranty purposes.