

SINGER FP 56 N

Singer FP 56 N 600W Food Processor User Manual

Model: FP 56 N

[Overview](#) [Setup](#) [Operation](#) [Safety Information](#) [Product](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Singer FP 56 N Food Processor. Retain this manual for future reference.

- Always ensure the appliance is unplugged from the power outlet before assembling, disassembling, or cleaning.
- Keep hands and utensils away from moving blades or discs while processing food to prevent injury.
- Never operate the food processor without the lid securely locked in place.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Blades are sharp. Handle with extreme care during assembly, disassembly, and cleaning.
- This appliance is for household use only. Do not use outdoors.
- Supervise children closely when the appliance is in use or stored within their reach.
- Do not use attachments or accessories not recommended or sold by the manufacturer.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

2. PRODUCT OVERVIEW AND COMPONENTS

The Singer FP 56 N Food Processor is a versatile kitchen appliance designed to simplify various food preparation tasks. It features a powerful 600W motor and comes with 10 attachments for a wide range of functions.



Image: The Singer FP 56 N Food Processor, showcasing the main motor unit, processing bowl, and several attachments. The appliance is white with a sleek design.

Key Components:

- **Motor Unit:** The base of the appliance housing the 600W motor and speed control knob.
- **Processing Bowl (2 Liters):** Used for chopping, slicing, grating, and kneading with various blades and discs.
- **Liquidizing Jar (1.5 Liters):** Ideal for blending liquids, making smoothies, and pureeing.
- **Multipurpose Jar (1 Liter):** Suitable for various grinding and blending tasks.
- **Chutney Jar (300 ml):** Designed for grinding small quantities of spices, chutneys, and pastes.
- **Stainless Steel Blades:** Includes chopping blade, slicing disc, grating disc, and shredding disc.
- **Centrifugal Juicer:** For extracting juice from hard fruits and vegetables.
- **Citrus Juicer:** For extracting juice from citrus fruits like oranges and lemons.
- **Spatula:** For scraping down ingredients and safely removing food.

3. SETUP AND ASSEMBLY

Before first use, wash all removable parts (jars, blades, lids) in warm soapy water, rinse thoroughly, and dry. Wipe the motor unit with a damp cloth.

General Assembly Steps:

1. Place the motor unit on a clean, dry, and stable surface. Ensure it is unplugged.
2. Select the appropriate jar (processing bowl, liquidizing, multipurpose, or chutney jar) for your task.
3. For the processing bowl, insert the desired blade or disc onto the central shaft. For other jars, ensure the blade assembly is securely fitted at the bottom.
4. Place the assembled jar onto the motor unit, aligning the grooves. Turn clockwise until it locks.

securely into place. The appliance will not operate if the jar is not correctly locked.

5. Add your ingredients to the jar. Do not overfill beyond the maximum fill line indicated on the jar.
6. Place the lid onto the jar and turn clockwise until it locks securely. Ensure the feeder tube is aligned if using the processing bowl.
7. Plug the power cord into a suitable electrical outlet.

4. OPERATING INSTRUCTIONS

The Singer FP 56 N features a 600W motor with 3 speed settings and an incher (pulse) function for precise control.

Speed Control:

- **Speed 1 (Low):** For light mixing, gentle blending, or delicate ingredients.
- **Speed 2 (Medium):** For general processing, chopping, and blending.
- **Speed 3 (High):** For heavy-duty tasks, liquidizing, and grinding harder ingredients.
- **Incher/Pulse:** Provides short bursts of power at maximum speed. Useful for coarse chopping, quick blending, or when precise control is needed. Turn the knob to 'P' and release.

Using the Processing Bowl (Chopping, Slicing, Grating):

1. Assemble the processing bowl with the desired blade (e.g., chopping blade) or disc (e.g., slicing disc) as described in Section 3.
2. Add ingredients to the bowl. For chopping, cut large items into smaller pieces that fit comfortably. For slicing/grating, feed ingredients through the feeder tube using the pusher.
3. Secure the lid and ensure it is locked.
4. Select the desired speed or use the pulse function. Process until the desired consistency is achieved.
5. Once finished, turn the speed knob to 'OFF', unplug the appliance, and wait for the blades to stop completely before unlocking and removing the lid and bowl.

Using the Liquidizing Jar (Blending, Pureeing):

1. Assemble the liquidizing jar with its blade assembly onto the motor unit.
2. Add liquids and soft ingredients. Ensure the lid is securely closed.
3. Select a suitable speed (typically Speed 2 or 3) and blend until smooth.
4. Always turn off and unplug before opening.

Using the Chutney Jar (Grinding Small Quantities):

1. Attach the chutney jar with its blade assembly to the motor unit.
2. Add small quantities of spices, herbs, or other ingredients.
3. Secure the lid. Use the pulse function or Speed 1/2 for short intervals to achieve desired consistency.
4. Avoid continuous operation for too long to prevent overheating.

Using the Juicers (Centrifugal & Citrus):

1. Assemble the appropriate juicer attachment onto the motor unit according to the instructions provided with the attachment.
2. For the centrifugal juicer, feed pre-cut fruits/vegetables through the chute. For the citrus juicer, place half a citrus fruit onto the reamer and press down gently.
3. Ensure a collection container is placed to catch the juice.

4. Operate at the recommended speed for juicing.

5. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your food processor.

Cleaning Instructions:

- **Always unplug the appliance before cleaning.**
- **Motor Unit:** Wipe the motor unit with a soft, damp cloth. Do not immerse it in water or rinse under running water.
- **Jars, Lids, and Blades:** All removable parts (jars, lids, blades, discs, juicer components) should be washed by hand in warm, soapy water. Rinse thoroughly and dry immediately.
- **Caution:** Blades are extremely sharp. Handle with care. Use a brush to clean blades if necessary, avoiding direct contact with fingers.
- **Dishwasher Safety:** The product is **not dishwasher safe**. Hand washing is recommended for all components.
- For stubborn food residue, soak the parts in warm soapy water for a few minutes before cleaning.
- Store the food processor and its attachments in a clean, dry place.

6. TROUBLESHOOTING GUIDE

If you encounter issues with your food processor, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in. Jar/Lid not securely locked. Overload protection activated.	Ensure power cord is firmly plugged in. Check that the jar and lid are correctly assembled and locked. Unplug, remove some ingredients, wait 15-20 minutes for motor to cool, then restart.
Motor runs, but blades do not turn.	Blade/disc not correctly fitted. Ingredients jammed.	Unplug, check blade/disc assembly. Unplug, carefully remove ingredients obstructing the blade.
Poor processing results (e.g., uneven chopping).	Too many ingredients. Ingredients too large. Incorrect speed.	Reduce quantity of ingredients. Cut ingredients into smaller, uniform pieces. Use pulse function or higher speed for better control.
Appliance vibrates excessively or makes loud noise.	Unstable surface. Uneven load in jar. Damaged blade/component.	Place on a flat, stable surface. Distribute ingredients evenly. Unplug and inspect components for damage. If damaged, contact customer support.

If the problem persists after trying these solutions, please contact Singer customer support.

7. PRODUCT SPECIFICATIONS

- **Model:** FP 56 N
- **Brand:** SINGER
- **Power:** 600 Watts
- **Speeds:** 3 Speed settings + Incher (Pulse)
- **Processing Bowl Capacity:** 2 Liters
- **Liquidizing Jar Capacity:** 1.5 Liters
- **Multipurpose Jar Capacity:** 1 Liter
- **Chutney Jar Capacity:** 300 ml
- **Material:** Plastic body, Stainless Steel blades
- **Special Features:** Built-in grinder, Centrifugal & Citrus Juicer
- **Included Components:** Food Processor, User Manual, Warranty Card
- **Safety Certification:** ISI Certified
- **Product Care:** Hand Wash (Not dishwasher safe)

8. WARRANTY AND CUSTOMER SUPPORT

Your Singer FP 56 N Food Processor comes with a warranty. Please refer to the included Warranty Card for specific terms, conditions, and duration of the warranty.

For Service and Support:

In case of any queries, service requirements, or to claim warranty, please contact Singer customer support using the details below:

- **Manufacturer:** Singer India Limited
- **Customer Care Number:** 18001033474 | 8860118855
- **Email:** customersupport@singerindia.com
- **Website:** www.singerindia.com
- **Address:** Singer India Limited, Institute for Studies in Industrial Development (ISID), 3rd Floor, Block C-2-3, ISID Campus, 4, Vasant Kunj Institutional Area, New Delhi – 110070

Please have your product model number (FP 56 N) and purchase details ready when contacting customer support.