

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Sweety Fox](#) /
- › [Sweety Fox Baby High Chair Instruction Manual](#)

Sweety Fox Q1

Sweety Fox Baby High Chair Instruction Manual

Model: Q1 | Brand: Sweety Fox

1. INTRODUCTION

Thank you for choosing the Sweety Fox Baby High Chair. This high chair is designed for comfort, safety, and adaptability, growing with your child from infancy through toddlerhood. It features multiple adjustment options, a removable tray, and a compact folding design for convenient storage. Please read this manual thoroughly before assembly and use to ensure proper function and safety.

This high chair is suitable for babies and children up to 30 lb (15 kg).



Image 1.1: The Sweety Fox Baby High Chair in Pink, showcasing its overall design and included toy arch.

2. IMPORTANT SAFETY WARNINGS

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always use the restraint system. Ensure the 5-point harness is securely fastened and properly adjusted to your child's size.
- Always use the crotch strap in combination with the waist belt.
- Never leave the child unattended. Constant supervision is required.
- Prevent serious injury from falling or sliding out.
- Do not use the high chair if any components are broken or missing.
- Ensure the high chair is fully erected and all locking mechanisms are engaged before placing a child in it.
- Keep children away from the high chair during folding and unfolding to prevent injury.

- Do not place the high chair near windows, walls, or furniture where the child could push off or reach dangerous objects.
- Do not use the high chair on an elevated surface.
- Maximum weight recommendation: 15 kg (30 lb).

Ultimate safety

Sturdy materials and non-slip glides



5-point harness



Rear wheels



Image 2.1: Detail of the 5-point safety harness and rear wheels, highlighting the chair's safety features.

3. PARTS LIST

Before assembly, please ensure all parts are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Main High Chair Frame (pre-assembled)
- Seat Unit with Padding
- Removable Tray
- Toy Arch with Hanging Toys

- Instruction Manual

4. SETUP AND ASSEMBLY

The Sweety Fox Baby High Chair comes largely pre-assembled for quick setup.

1. **Unfolding the Frame:** Carefully unfold the main high chair frame until it clicks into place, ensuring all legs are stable and locked.
2. **Attaching the Seat Unit:** Align the seat unit with the designated slots on the frame and push down firmly until it locks securely.
3. **Installing the Tray:** Slide the removable tray onto the armrests until it clicks into one of the three distance levels. Ensure it is firmly attached.
4. **Attaching the Toy Arch:** Insert the toy arch into the designated slots on the high chair frame. Ensure it is securely in place.

5. OPERATING INSTRUCTIONS

5.1 Adjusting Height, Recline, and Footrest

The high chair offers extensive adjustability to suit your child's needs and your dining setup.

- **Seat Height:** Press the height adjustment buttons on both sides of the frame and slide the seat up or down to one of the 7 available height positions. Release the buttons to lock.
- **Backrest Recline:** Press the recline adjustment levers on both sides of the backrest and tilt the backrest to one of the 5 reclining positions. Release the levers to lock.
- **Footrest Position:** Adjust the footrest by pressing the buttons on its sides and moving it to one of the 3 available positions. Release to lock.

Adjustable baby chair

6-36 months

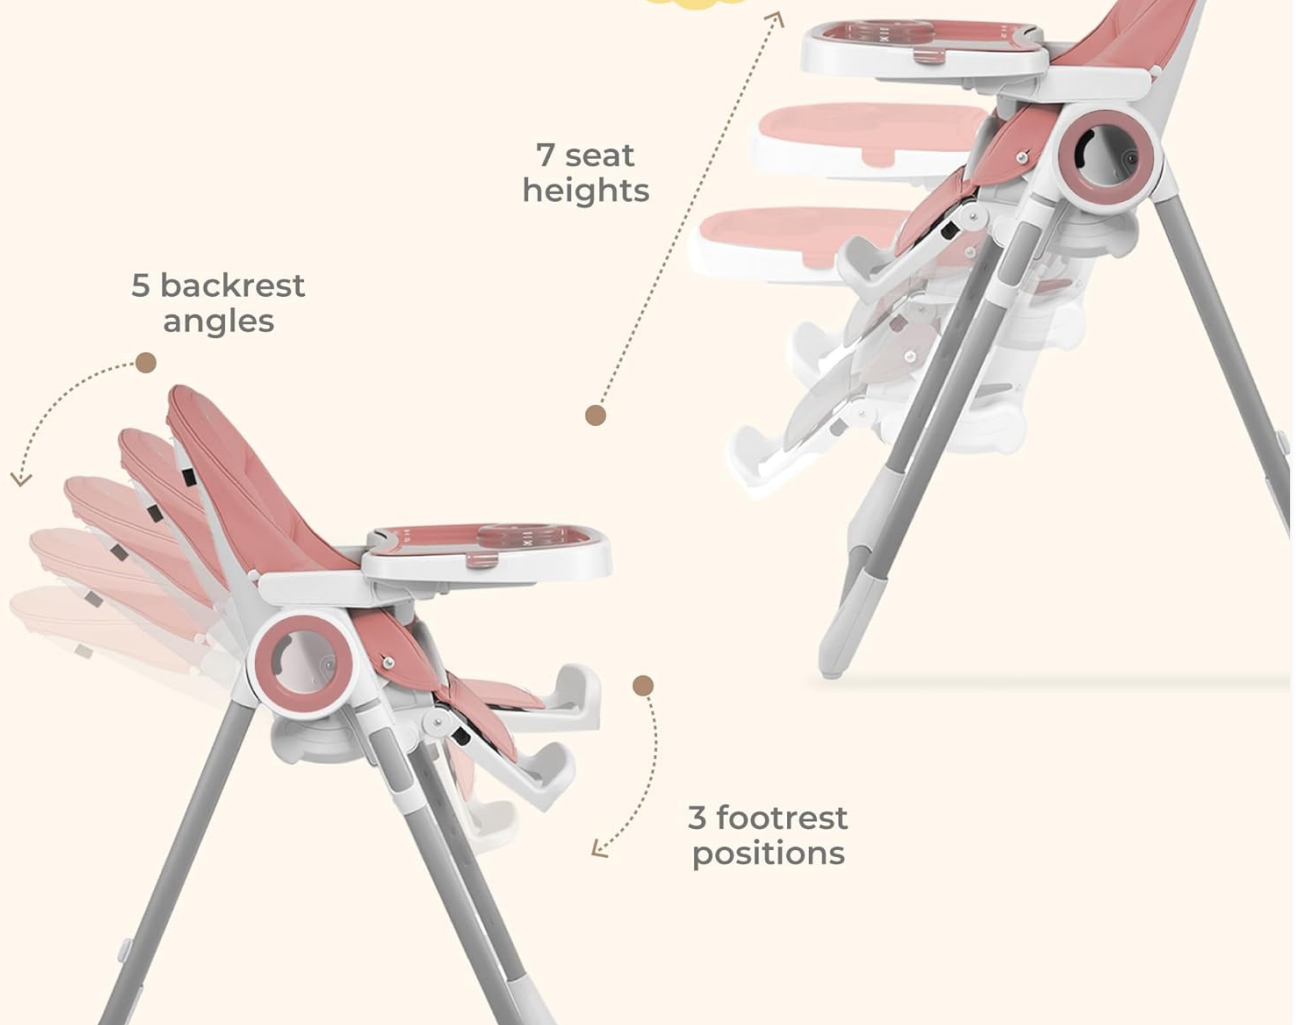


Image 5.1: Visual guide to the high chair's adjustable features, including seat height, backrest recline, and footrest positions.

5.2 Using the Removable Tray

The high chair features a practical, removable tray with three distance levels.

- **Attaching:** Slide the tray onto the armrests until it clicks into your desired distance level.
- **Removing:** Press the release levers located underneath the tray on both sides and pull the tray forward to remove.
- **Table Integration:** Once the tray is removed, the high chair can be positioned directly at a dining table, allowing your child to join family meals.

Practical removable tray

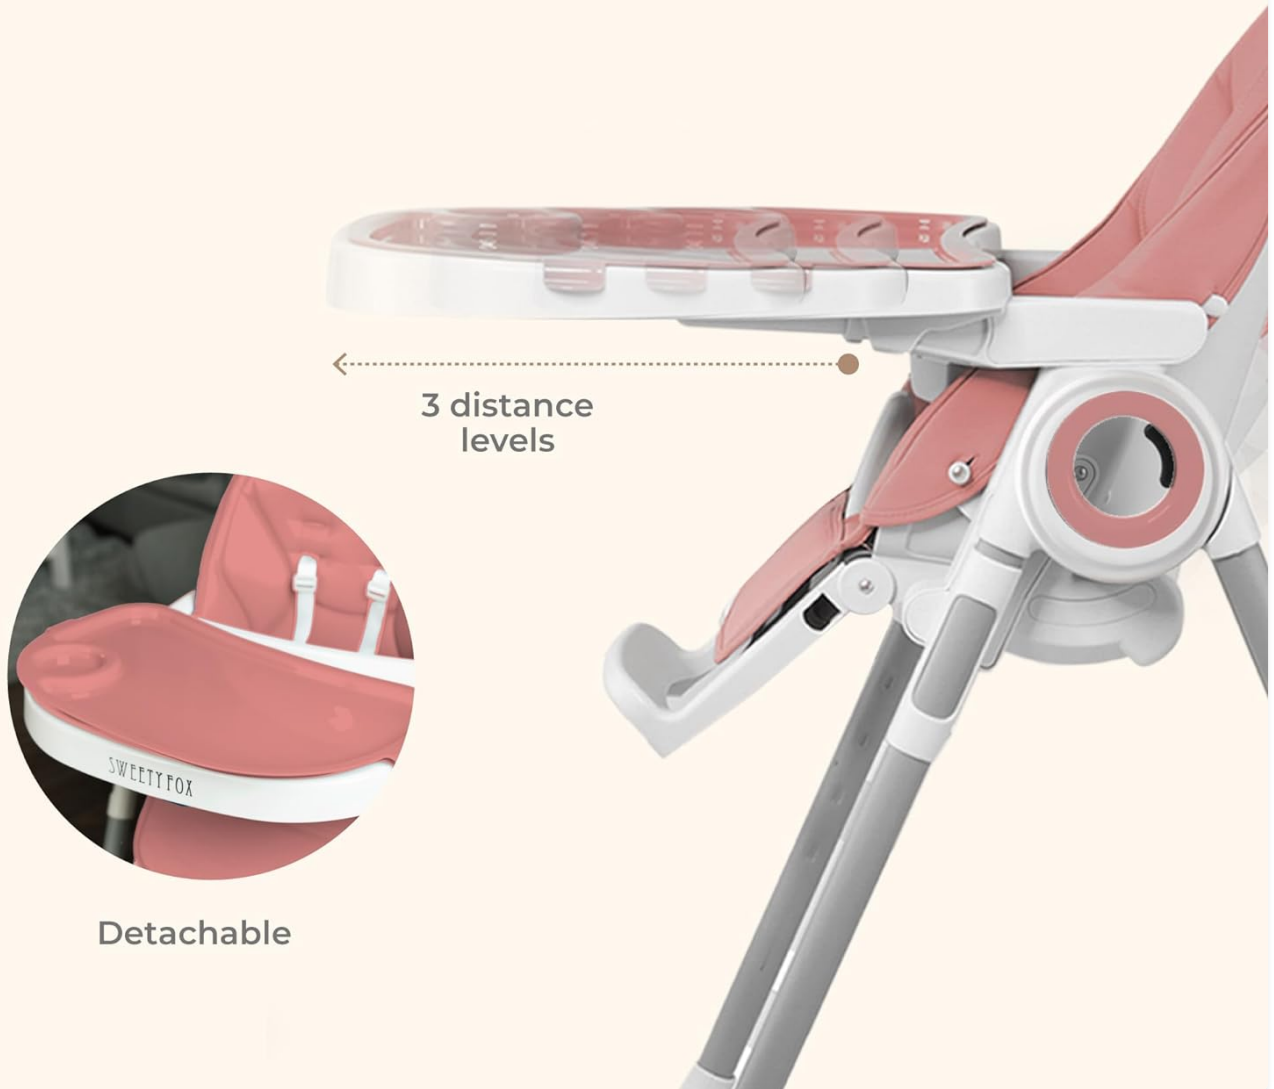


Image 5.2: The practical removable tray, illustrating its three adjustable distance levels and detachable design.

5.3 Folding for Storage

The high chair is designed to fold compactly for space-saving storage.

- Ensure the tray is removed and the seat is in its most upright position.
- Locate the folding mechanisms (usually buttons or levers) on the sides of the frame.
- Engage the mechanisms and gently push the top of the high chair forward and down until it folds into a compact, standing position.

Effortless folding

Easy to carry

53cm



116cm



Image 5.3: Demonstration of the high chair's effortless folding mechanism for compact storage.

5.4 Using the Toy Arch

The included toy arch provides entertainment for your child during meal preparation or waiting times.

- Ensure the toy arch is securely attached to the high chair frame.
- The hanging toys can be adjusted or removed as desired.



Image 5.4: A baby engaging with the toys attached to the high chair's removable arch.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your high chair and ensure hygiene for your child.

- **Seat Cover:** The polyurethane high chair cover can be wiped clean with a damp cloth and mild soap. For deeper cleaning, the cover is removable. Refer to the care label for specific washing instructions.
- **Tray:** The BPA-free plastic tray is removable and dishwasher-safe for thorough cleaning.
- **Frame:** Wipe the frame with a damp cloth. Avoid abrasive cleaners.
- **Harness:** Clean the harness straps with a damp cloth and mild soap. Allow to air dry completely before use.
- **General:** Periodically check all screws, fasteners, and locking mechanisms to ensure they are secure and in good working order.

Easy to clean



Dishwasher-safe



Image 6.1: The high chair's tray is dishwasher-safe, simplifying the cleaning process.

7. TROUBLESHOOTING

If you encounter any issues with your Sweety Fox Baby High Chair, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
High chair does not unfold or fold smoothly.	Locking mechanisms are not fully disengaged or engaged.	Ensure all release buttons/levers are pressed firmly. Check for any obstructions.
Tray does not attach securely.	Tray not aligned correctly or debris in slots.	Ensure the tray is aligned with both armrests. Check and clear any food debris from the attachment slots.

Problem	Possible Cause	Solution
Harness straps are too loose or fall off shoulders.	Straps are not adjusted for child's size.	Adjust the shoulder straps to the appropriate height and tighten the waist straps for a snug fit. Ensure the crotch strap is used.
Seat adjustments (height, recline, footrest) are stiff.	Mechanism may be dirty or not fully disengaged.	Clean around the adjustment points. Ensure adjustment buttons/levers are fully pressed before attempting to move.

8. SPECIFICATIONS

- **Model Number:** Q1
- **Product Dimensions (Erected):** Approximately 27.95 x 40.55 x 20.47 inches (71 x 103 x 52 cm)
- **Product Dimensions (Folded):** Approximately 20.87 x 45.67 inches (53 x 116 cm)
- **Item Weight:** Approximately 20.8 pounds (9.43 kg)
- **Maximum Weight Recommendation:** 15 kg (30 lb)
- **Material Type:** Plastic (BPA-free tray), Polyurethane (seat cover)
- **Adjustments:** 7 seat heights, 5 backrest recline positions, 3 footrest positions
- **Safety Features:** 5-point harness, non-slip glides, ASTM F404-certified
- **Portability:** Yes, foldable with rear wheels for easy movement.

9. WARRANTY AND SUPPORT

Sweetie Fox is committed to providing high-quality products and excellent customer service. This product is covered by a standard manufacturer's warranty against defects in materials and workmanship under normal use. For any questions, concerns, or assistance with your Sweetie Fox Baby High Chair, please do not hesitate to contact our customer support team. We strive to respond to all inquiries within 24 hours.

Contact Information:

Visit the [Sweetie Fox Store on Amazon](#)

Refer to your purchase documentation for direct contact details.