

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Estink BT12

Estink BT12 Motorcycle Helmet BT Headset User Manual

Model: BT12 (Yosoidbam0vzfn)

INTRODUCTION

This user manual provides detailed instructions for the Estink BT12 Motorcycle Helmet BT Headset. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan. Keep this manual for future reference.

The Estink BT12 headset is designed to provide high-fidelity audio and hands-free communication for motorcycle riders. It features Bluetooth V4.1 + EDR for stable connections, a built-in rechargeable Li-ion battery, voice prompt functions, and a low power warning system.

PRODUCT OVERVIEW

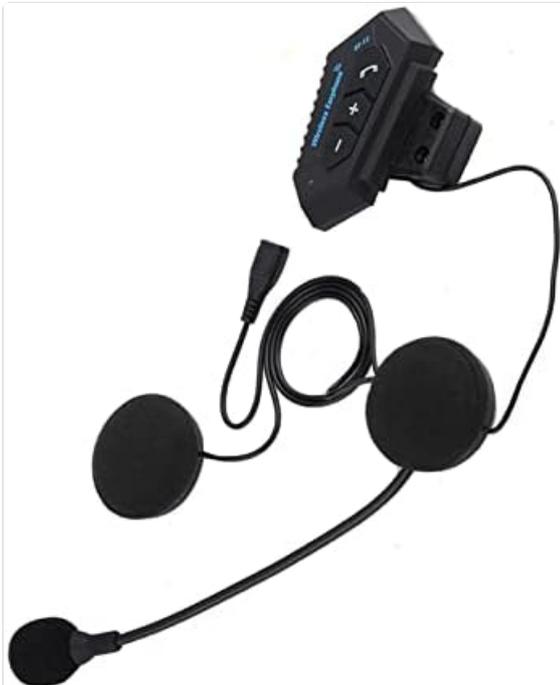


Image: The Estink BT12 Helmet BT Headset showing the main control unit, two speakers, and the microphone arm. This image displays all primary components of the headset.



Image: A detailed diagram illustrating the various parts of the Estink BT12 headset, including the microphone, volume keys, indicator light, and left/right speakers. It also shows the "Magic sticker" for speaker attachment.

Components:

- Main Control Unit
- Microphone Arm
- Left Speaker
- Right Speaker
- USB Charging Cable
- Additional Speaker Covers (Magic Stickers)

SETUP AND INSTALLATION

Charging the Device:

Before first use, fully charge the headset. Connect the provided USB charging cable to the charging port on the main control unit and plug the other end into a USB power source (e.g., computer, USB wall adapter). The indicator light will show charging status. A full charge takes approximately 3 hours.



Image: An infographic illustrating the battery life of the headset, indicating 15 hours of work time, 3 hours for charging, and 160 hours of standby time. This highlights the "Super long voyage" capability.

Installing into Helmet:

The Estink BT12 headset is suitable for various helmet types, including full helmets, visor helmets, and three-quarter helmets.

1. **Attach Speakers:** Use the provided "magic stickers" (velcro pads) to secure the left and right speakers inside the helmet, positioning them directly over your ears for optimal audio. Ensure the speaker wires are routed neatly.
2. **Position Microphone:** Attach the microphone arm inside the helmet, positioning the microphone close to your mouth for clear voice transmission. The arm is flexible for adjustment.
3. **Mount Control Unit:** Secure the main control unit to the side of your helmet using the integrated clip. Ensure it is easily accessible for operation while riding.
4. **Connect Components:** Plug the speaker and microphone cables into their respective ports on the main control unit.



Image: A black motorcycle helmet with the Estink BT12 headset control unit clipped to the side and the microphone extended. This demonstrates the typical installation of the headset on a helmet.



Image: A diagram illustrating two types of helmets (full helmet and three-quarter helmet) and how the headset components (speakers and microphone) are positioned within them, indicating compatibility.

OPERATING INSTRUCTIONS

Power On/Off:

- **Power On:** Press and hold the power button (usually the phone icon button) for a few seconds until you hear the "Power on" voice prompt and the indicator light illuminates.
- **Power Off:** Press and hold the power button again for a few seconds until you hear the "Power off" voice prompt and the indicator light turns off.

Bluetooth Pairing:

1. Ensure the headset is powered off.
2. Press and hold the power button until you hear the "Pairing" voice prompt and the indicator light flashes rapidly, indicating pairing mode.
3. On your mobile phone or Bluetooth device, enable Bluetooth and search for available devices.
4. Select "BT12" from the list of found devices.
5. Once successfully paired, you will hear the "Connected" voice prompt and the indicator light will flash slowly.

Hands-Free Calling:

- **Answering a Call:** When an incoming call rings, short press the phone icon button to answer.
- **Rejecting a Call:** When an incoming call rings, press and hold the phone icon button for 2 seconds to reject.
- **Ending a Call:** During a call, short press the phone icon button to hang up.
- **Redialing Last Number:** In standby mode, double-press the phone icon button to redial the last dialed number.

Music Playback:

- **Play/Pause:** Short press the phone icon button to play or pause music.
- **Volume Up:** Short press the "+" button to increase volume.
- **Volume Down:** Short press the "-" button to decrease volume.
- **Next Track:** Long press the "+" button to skip to the next track.
- **Previous Track:** Long press the "-" button to go to the previous track.

Your browser does not support the video tag.

Video: An official product video demonstrating the Estink Helmet BT Headset in use, highlighting its features and functionality. This video is provided by the seller, "ochun".

MAINTENANCE AND CARE

- **Cleaning:** Wipe the main control unit and speakers with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the headset in a cool, dry place when not in use. Avoid extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the battery when the low power warning is issued. If storing for extended periods, charge the battery every 3 months.
- **Water Resistance:** This product is not water resistant. Avoid exposure to rain or excessive moisture.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------------|-----------------------------|---|
| Device does not power on. | Battery is low or depleted. | Charge the device for at least 3 hours. |

| Problem | Possible Cause | Solution |
|---------------------------------|---|--|
| Cannot pair with phone. | Headset not in pairing mode; Bluetooth on phone is off; device too far. | Ensure headset is in pairing mode (rapid flashing light). Turn on phone's Bluetooth. Move devices closer. Try restarting both devices. |
| No sound or low sound. | Volume too low; speakers improperly positioned; connection issue. | Increase volume on headset and phone. Adjust speaker position inside helmet. Re-pair the device. |
| Voice prompts are unclear. | Volume settings. | Adjust the volume using the '+' and '-' buttons. |
| Device automatically turns off. | Low battery; power save mode activated. | Recharge the battery. If no device is paired for 5 minutes, it will automatically turn off (power save mode). |

SPECIFICATIONS

| Feature | Detail |
|-------------------------|---------------------------------|
| Model Name | BT12 (Yosoidbam0vzfn) |
| Connectivity Technology | Wireless (Bluetooth) |
| Bluetooth Version | 4.1 + EDR |
| Bluetooth Range | Up to 65.6 Feet (20 meters) |
| Battery Type | Rechargeable Li-ion Battery |
| Charging Time | Approximately 3 Hours |
| Working Hours | Up to 8 Hours (Music/Talk Time) |
| Standby Time | Up to 160 Hours |
| Frequency Range | 2.402GHz-2.480GHZ |
| Item Weight | 6.3 ounces (0.18 Kilograms) |
| Product Dimensions | 3.94 x 3.94 x 3.94 inches |
| Water Resistance Level | Not Water Resistant |
| Compatible Devices | Cellphones |

WARRANTY AND SUPPORT

Warranty Information:

Specific warranty details for the Estink BT12 Helmet BT Headset are typically provided at the point of purchase or within the product packaging. Please refer to your purchase receipt or the warranty card included with your product for terms and conditions. Estink products are generally designed for quality and durability.

Customer Support:

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Estink customer support. You may find contact information on the official Estink website or through the retailer where you purchased the product.

You can also visit the [Estink Store on Amazon](#) for more information and product updates.