



[Manuals.plus](#) /

› [Baby Trend](#) /

› Baby Trend Retreat Nursery Center Instruction Manual - Model PY75C54C

Baby Trend PY75C54C

Baby Trend Retreat Nursery Center Instruction Manual

Model: PY75C54C

[Introduction](#)

[Safety Information](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Warranty &](#)

[Support](#)

[Specifications](#)

1. INTRODUCTION

This manual provides instructions for the safe assembly, operation, and maintenance of your Baby Trend Retreat Nursery Center. Please read all instructions carefully before use and retain this manual for future reference.

The Baby Trend Retreat Nursery Center is a versatile solution designed to provide a safe and comfortable environment for your baby. It includes a portable playard, a removable Rock-a-Bye bassinet, a changing table, and a parent organizer for essentials. Its foldable design makes it suitable for both home use and travel.



Image: The Baby Trend Retreat Nursery Center showing the playard, bassinet, and changing table components.

2. IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always ensure all locking mechanisms are securely engaged before placing a child in the playard or bassinet.
- Never leave a child unattended.
- Discontinue use of the bassinet when the infant begins to push up on hands and knees or has reached 15 lbs (6.8 kg), whichever comes first.
- Discontinue use of the changing table when the infant begins to push up on hands and knees or has reached 15 lbs (6.8 kg), whichever comes first.
- The playard is intended for children unable to climb out, less than 35 inches (89 cm) tall, and weighing less than 30 lbs (13.6 kg).
- Only use the mattress/pad provided by the manufacturer. Never add a pillow, comforter, or another mattress for padding.
- Keep all cords, strings, and small items away from the child to prevent strangulation or choking

hazards.

- Regularly inspect the product for damaged hardware, loose joints, missing parts, or sharp edges. Do not use if any parts are missing or broken.

3. SETUP INSTRUCTIONS

3.1 Unfolding the Playard

1. Remove the playard from the carry bag.
2. Separate the legs and pull the center straps upwards.
3. Ensure all four top rails are locked into place. You should hear a "click." If a rail does not lock, lift the center of the floor slightly and try again.
4. Push the center of the floor down until it lies flat.



Image: The main playard area, showing the mattress pad at the bottom.

3.2 Assembling the Rock-a-Bye Bassinet

1. Assemble the bassinet frame according to the instructions provided with the bassinet component.
2. Attach the fabric cover to the frame.

3. Secure the canopy and attach the included toys.
4. The bassinet can be used standalone or attached to the playard.



Image: The Rock-a-Bye Bassinet shown as a separate, standalone unit.



Image: Close-up of the bassinet with its canopy extended and two hanging plush toys.

3.3 Attaching the Changing Table and Parent Organizer

1. Position the changing table over the playard rails and secure it using the provided clips or straps.
2. Attach the parent organizer to the side of the playard, ensuring it is stable and accessible.



Image: The parent organizer with compartments for diapers, wipes, and other baby essentials.

3.4 Video Demonstrations

Your browser does not support the video tag.

Video: An overview of the Baby Trend Nursery Center, demonstrating its features and setup process.

Your browser does not support the video tag.

Video: A demonstration highlighting the practical aspects and ease of use of the nursery center.

4. OPERATING INSTRUCTIONS

4.1 Using the Playard

The playard provides a secure space for your child to play or rest. Ensure the mattress pad is placed firmly at the bottom. The mesh sides allow for visibility and airflow.

4.2 Using the Rock-a-Bye Bassinet

The bassinet can be used for newborns up to 15 lbs (6.8 kg). It features a gentle rocking motion to soothe your baby. The canopy provides shade, and the handle allows for easy portability when used as a

standalone unit.

4.3 Using the Changing Table

The removable changing table offers a convenient surface for diaper changes. Always use the safety straps and keep one hand on your baby at all times while using the changing table.

4.4 Electronic Music Center

The built-in electronic music center features volume control, two musical styles, nature sounds, a soft nightlight, and vibration settings to help soothe your baby. Insert batteries (not included) as per the instructions on the unit.



Image: The control panel for the electronic music center, showing buttons for volume, music, nature sounds, nightlight, and vibration.

4.5 Folding for Travel and Storage

To fold the playard, first remove all accessories (bassinet, changing table, organizer). Pull up on the center strap of the floor, then release the locking mechanisms on the side rails. Gather the legs together and secure with the mattress pad. Place in the included carry bag.



Image: The playard folded compactly and stored in its travel bag, ready for transport.

Your browser does not support the video tag.

Video: A demonstration showing how the playard can be configured for different stages of a child's growth, from infant to toddler.

5. MAINTENANCE AND CARE

5.1 Cleaning Instructions

- **Fabric:** Wipe clean with a damp cloth and mild soap. Air dry. Do not bleach.
- **Frame:** Wipe metal and plastic parts with a soft, damp cloth.
- **Mattress Pad:** Surface wash only. Do not machine wash or tumble dry.

5.2 Storage

When not in use, store the nursery center in a cool, dry place, away from direct sunlight. Ensure it is completely dry before folding and storing in the carry bag to prevent mold or mildew.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Side rails do not lock.	Center of the playard floor is not fully raised.	Lift the center of the playard floor slightly, then firmly push down on the rail until it clicks into place. Repeat for all rails.
Playard does not fold.	Side rails are still locked.	Ensure all side rails are unlocked before attempting to pull up the center of the floor.
Electronic music center not working.	Dead batteries or incorrect battery installation.	Replace batteries with new ones, ensuring correct polarity. Check battery compartment for corrosion.
Bassinet or changing table feels unstable.	Not properly secured to the playard.	Re-attach and ensure all clips/straps are firmly fastened to the playard rails.

7. PRODUCT SPECIFICATIONS

Brand: Baby Trend

Model Number: PY75C54C

Item Type Name: Retreat Nursery Center

Color: Robin

Material Type: Metal, Plastic, Polyester

Item Weight: 33.4 Pounds (15.15 kg)

Item Dimensions (L x W x H): 41 x 29.25 x 29 inches (104.14 x 74.3 x 73.66 cm)

Maximum Weight Recommendation (Playard): 30 lbs (13.6 kg)

Maximum Weight Recommendation (Bassinet/Changing Table): 15 lbs (6.8 kg)

Age Range Description: Baby (from birth up to 24 months for playard)

UPC: 090014025861, 090014025649

8. WARRANTY INFORMATION

Baby Trend products are covered by a limited warranty against manufacturing defects. For specific warranty details, including duration and coverage, please refer to the warranty card included with your product or visit the official Baby Trend website. Please retain your proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to order replacement parts, please contact Baby Trend Customer Service. Contact information can typically be found on the product packaging, the official Baby Trend website, or the warranty card.

Website: www.babytrend.com

Phone: Refer to product packaging or website for current contact numbers.

