

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Decathlon](#) /

› [Oxelo Scooter SC MID 9 RED User Manual](#)

Decathlon 2765005

Oxelo Scooter SC MID 9 RED User Manual

Model: 2765005 | Brand: Decathlon

INTRODUCTION

This manual provides essential information for the safe and effective use of your Oxelo Scooter SC MID 9 RED. Please read it thoroughly before assembly and operation. The scooter is designed for easy control and balance through physical inclination.

Key Features:

- Adjustable handlebar for comfortable riding.
- Designed for easy and intuitive riding.
- Intelligent turning mechanism for enhanced maneuverability.

SETUP AND ASSEMBLY

Your Oxelo Scooter SC MID 9 RED comes partially assembled. Follow these steps to complete the setup:

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts are present: main scooter frame, handlebar, and any included tools.
2. **Handlebar Installation:** Insert the handlebar stem into the main steering tube. Align the holes and secure it using the quick-release clamp or bolts provided. Ensure it is firmly seated and does not wobble.
3. **Adjusting Handlebar Height:** Loosen the quick-release lever on the handlebar stem. Adjust the handlebar to a comfortable height, typically around hip level when standing on the scooter. Securely tighten the quick-release lever.
4. **Brake Check:** Verify that the rear brake lever on the handlebar operates smoothly and effectively engages the rear wheel brake. Adjust cable tension if necessary.
5. **Folding Mechanism:** Familiarize yourself with the folding mechanism. Ensure it locks securely in both the open (riding) and folded (storage) positions.



Figure 1: Fully assembled Oxelo Scooter SC MID 9 RED, showcasing its red frame and white wheels.

OPERATING INSTRUCTIONS

To ensure a safe and enjoyable experience, follow these operating guidelines:

- Starting:** Place one foot firmly on the scooter deck. Use the other foot to push off the ground to gain momentum.
- Riding:** Once moving, place both feet on the deck, one behind the other. Maintain balance by slightly bending your knees and leaning your body. The scooter's intelligent turning allows for easy steering by leaning.
- Braking:** To slow down or stop, gently squeeze the brake lever on the handlebar. Apply pressure gradually to avoid sudden stops. The scooter features rear braking.
- Adjusting Handlebar:** The handlebar height can be adjusted for different riders. Ensure the quick-release clamp is securely fastened after adjustment.



Figure 2: Detail of the adjustable handlebar and ergonomic grip with the brake lever.



Figure 3: View of the scooter's deck and integrated kickstand for convenient parking.

MAINTENANCE

Regular maintenance will prolong the life of your scooter and ensure safe operation:

- **Cleaning:** Wipe down the scooter with a damp cloth after use. Avoid using harsh chemicals.
- **Wheel Inspection:** Regularly check the wheels for wear and tear. Ensure they spin freely and are not obstructed.

- **Brake System:** Inspect the brake cable and lever for proper function. Ensure the brake pads are not excessively worn.
- **Fasteners:** Periodically check all bolts and screws to ensure they are tight. Re-tighten if necessary.
- **Storage:** Store the scooter in a dry place, away from direct sunlight and extreme temperatures. The scooter can be folded for compact storage.

TROUBLESHOOTING

Here are some common issues and their solutions:

Problem	Possible Cause	Solution
Handlebar wobbles	Quick-release clamp is loose.	Tighten the quick-release clamp securely.
Brake not effective	Brake cable too loose or pads worn.	Adjust brake cable tension or replace brake pads.
Wheels not spinning freely	Debris in bearings or tight axle nuts.	Clean bearings or slightly loosen axle nuts (do not overtighten).

SPECIFICATIONS

Attribute	Value
Brand	Decathlon
Model Number	2765005
Colour	Red
Age Range (Description)	Adult
Special Feature	Adjustable
Number of Wheels	2
Wheel Material	Polyurethane
Frame Material	Aluminium
Item Weight	3.35 Kilograms (3 kg 350 g)
Handlebar Type	Adjustable
Wheel Size	175 Millimetres
Wheel Type	Solid
Suspension Type	Front Suspension
Grip Type	Ergonomic
Brake Style	Rear Braking
Recommended Uses	Recreational riding, Urban commuting

Attribute	Value
Item Dimensions (LxWxH)	73 x 18 x 30 Centimeters



Figure 4: Dimensional diagram illustrating the scooter's height, length, and weight specifications.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Decathlon website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact Decathlon customer service through their official channels.