

[manuals.plus](#) /› [Oxelo](#) /› [Oxelo 8549430 Kids' Scooter Mid 7- with Stand Instruction Manual](#)**Oxelo 8549430**

Oxelo 8549430 Kids' Scooter Mid 7- with Stand Instruction Manual

1. INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, maintenance, and troubleshooting of your Oxelo 8549430 Kids' Scooter Mid 7- with Stand. Please read this manual thoroughly before first use and retain it for future reference. This scooter is designed for urban travel over short distances (up to 2km) and for young individuals between 1.25m and 1.75m tall, typically aged 9 to 14 years.

2. PRODUCT OVERVIEW

The Oxelo Mid 7- with Stand is a lightweight and compact kick scooter featuring large wheels for enhanced glide performance. It is equipped with ABEC 5 bearings and a rear wheel brake for control and safety.



Figure 1: Oxelo 8549430 Kids' Scooter Mid 7- with Stand, main view.

Key Features:

- **Glide Performance:** Two large 175mm PU rubber wheels with ABEC 5 bearings.
- **Braking System:** Rear wheel brake for effective stopping.
- **Frame Material:** Durable Aluminium frame.
- **Handlebar:** Adjustable handlebar for customized height.
- **Convenience:** Integrated stand for easy parking.



Figure 2: Side view of the scooter, highlighting its profile and wheels.



Figure 3: Front view of the scooter, showing the handlebar and front wheel.

3. SETUP AND ASSEMBLY

Your Oxelo Mid 7- scooter comes largely pre-assembled. Follow these steps to prepare it for use:

1. Unfolding the Scooter:

Locate the folding mechanism near the base of the handlebar stem. Release the latch or lever according to the markings. Carefully unfold the scooter until the handlebar stem locks securely into the upright position. Ensure all locking mechanisms are fully engaged before proceeding.

2. Adjusting Handlebar Height:

Press the quick-release button or open the clamp on the handlebar stem. Adjust the handlebar to a comfortable height, typically between the user's waist and hips. Ensure the handlebar is securely locked in place after adjustment. The adjustable handlebar allows for heights between approximately 51 cm (20.1 inches) and 94 cm (37 inches) from the ground.

3. Handlebar Grips:

Ensure the handlebar grips are firmly attached and not rotating freely.



Figure 4: Detail of the adjustable handlebar mechanism.

4. OPERATING YOUR SCOOTER

4.1 Riding

To ride the scooter, place one foot on the deck and use the other foot to push off the ground. Once momentum is gained, place both feet on the deck, one behind the other, or side-by-side if preferred, maintaining balance. Steer by gently leaning and turning the handlebar.

4.2 Braking

The Oxelo Mid 7-scooter is equipped with a rear wheel brake. To slow down or stop, gently press down on the rear fender with your heel. Apply gradual pressure to avoid sudden stops, which can lead to loss of balance.



Figure 5: Detail of the rear wheel and fender brake.

4.3 Folding for Storage/Transport

To fold the scooter, reverse the unfolding process. Release the handlebar stem lock and fold the stem down towards the deck. Ensure the folding mechanism is securely latched to prevent accidental unfolding during transport.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Regular Checks:** Before each ride, inspect the wheels, bearings, brake, and handlebar for any signs of wear, damage, or looseness. Ensure all bolts and fasteners are tight.
- **Cleaning:** Clean the scooter with a damp cloth. Avoid using harsh chemicals or abrasive cleaners. Do not use high-pressure water jets directly on bearings.
- **Bearings:** If the wheels do not spin freely, the bearings may need cleaning or replacement. Consult a specialist if unsure.
- **Storage:** Store the scooter in a dry place, away from direct sunlight and extreme temperatures, to prevent material degradation.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your scooter.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Wheels not spinning freely	Dirty or worn bearings	Clean or replace bearings.
Handlebar feels loose	Quick-release clamp not tightened	Ensure the quick-release clamp is fully engaged and tightened.
Brake not effective	Worn brake pad or improper technique	Check brake pad for wear. Ensure proper braking technique is used.
Squeaking noises	Loose parts or lack of lubrication	Inspect all connections and tighten. Apply light lubricant to moving parts if necessary, avoiding wheels and brake surface.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Oxelo
Model Name	8549430
Wheel Size	175 mm
Wheel Material	PU Rubber
Bearings	ABEC 5
Frame Material	Aluminium
Item Weight	Approximately 4.1 kg (9.1 lbs)
Handlebar Type	Adjustable
Handle Height Range	51 cm - 94 cm (20.1 in - 37 in)
Brake Style	Rear Wheel Brake
Recommended Age	9 to 14 years
Recommended User Height	1.25 m to 1.75 m



Figure 6: Scooter dimensions and weight information.

8. SAFETY GUIDELINES

Your safety is paramount. Adhere to the following guidelines to minimize risks:

- **Protective Gear:** Always wear a helmet, knee pads, elbow pads, and wrist guards when riding the scooter.
- **Pre-Ride Check:** Before each use, ensure all parts are securely fastened, the brake is functional, and wheels are in good condition.
- **Riding Environment:** Ride in safe, open areas away from traffic, pedestrians, and obstacles. Avoid riding on wet, uneven, or slippery surfaces.
- **One Rider Only:** This scooter is designed for a single rider. Do not carry passengers.
- **Weight Limit:** Do not exceed the maximum recommended weight for the scooter (refer to product specifications or packaging if available).
- **Supervision:** Young riders should always be supervised by an adult.
- **Local Regulations:** Be aware of and comply with all local laws and regulations regarding scooter use.

9. WARRANTY AND CUSTOMER SUPPORT

For information regarding warranty coverage, please refer to the documentation provided at the time of purchase or visit the official Oxelo website. If you encounter any issues not covered in this manual or require further assistance, please contact Oxelo customer support through their official channels.