

One For All WM7471

One For All WM7471 Universal TV Tripod Stand Instruction Manual

Model: WM7471

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your One For All WM7471 Universal TV Tripod Stand. Please read this manual thoroughly before installation and retain it for future reference. This stand is designed to securely hold televisions ranging from 32 to 65 inches with VESA mounting patterns between 200x100mm and 400x400mm.

2. SAFETY INFORMATION

WARNING: Failure to read and follow these instructions can result in serious personal injury, property damage, or voiding of your warranty. If you have any questions, please contact customer support.

- Ensure all components are present and undamaged before assembly. Do not use damaged parts.
- Do not exceed the maximum weight capacity or screen size specified in the specifications section.
- Always assemble the stand on a flat, stable surface.
- Ensure the TV is securely attached to the mounting brackets and the stand is stable before releasing the TV.
- Keep children and pets away during assembly. Small parts can be a choking hazard.
- Do not attempt to modify the stand.
- Periodically check all screws and connections to ensure they remain tight and secure.

3. PACKAGE CONTENTS

Verify that all parts listed below are included in your package. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Tripod Base Assembly (Wooden legs, central column)
- TV Mounting Brackets (Horizontal bars)
- Vertical Support Bar
- Cable Management Strap (Leather)
- Universal Soundbar Attachment
- Hardware Kit (Screws, washers, spacers for TV mounting)
- Instruction Manual (This document)



Figure 1: Overview of the One For All WM7471 Universal TV Tripod Stand components. This image shows the main parts including the tripod base, central column, and TV mounting brackets.

4. SETUP AND ASSEMBLY

Follow these steps carefully to assemble your TV tripod stand. It is recommended to have a second person assist with mounting the television.

1. Assemble the Tripod Base:

Carefully attach the three wooden legs to the central column. Ensure they are securely fastened according to the provided diagrams in the separate assembly guide (if applicable). The design allows for tool-free or minimal tool assembly.

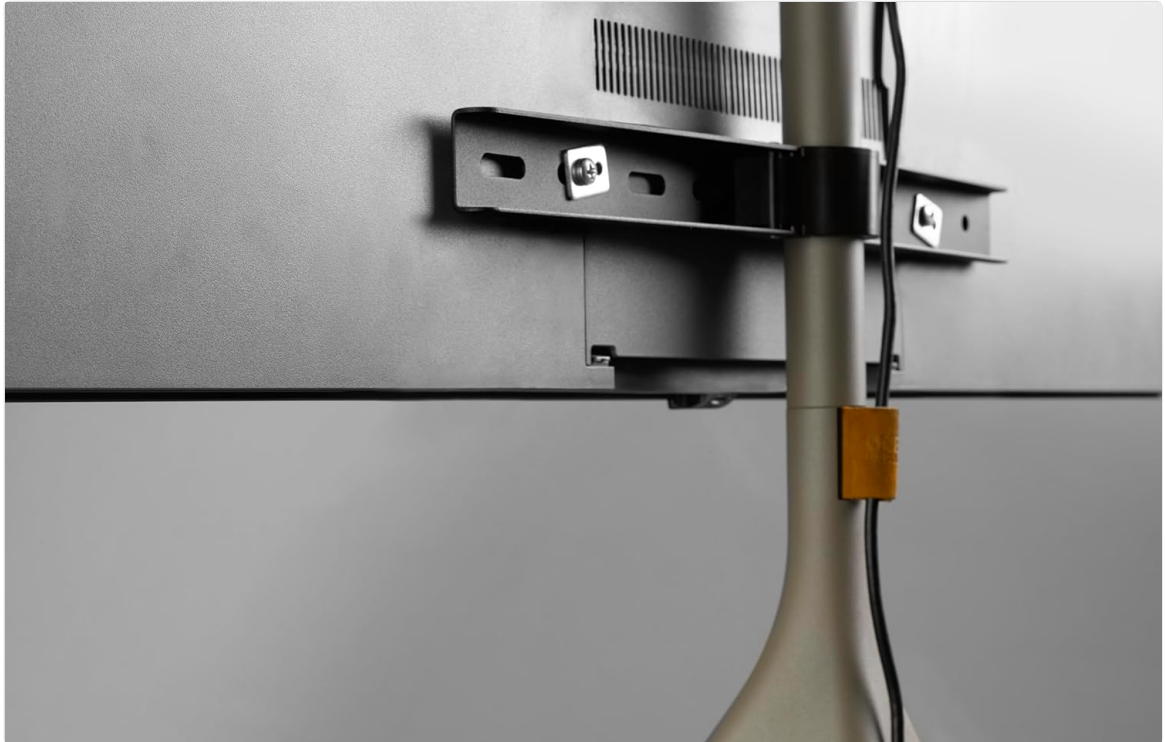


Figure 2: Detail of the central connection point of the tripod stand, showing the secure attachment of the wooden legs to the main column.

2. Attach TV Mounting Brackets to TV:

Identify the VESA mounting holes on the back of your television. Select the appropriate screws, washers, and spacers from the hardware kit that match your TV's specifications. Attach the horizontal TV mounting brackets to the back of your TV. Ensure they are level and securely tightened.



Figure 3: The VESA mounting bar, illustrating the multiple hole patterns for compatibility with various TV models.

3. **Mount TV to Stand:**

With assistance, carefully lift the television and hook the attached mounting brackets onto the vertical support bar of the tripod stand. Ensure the TV is centered and level. Secure the TV to the stand using the provided safety mechanisms, such as locking screws or clips, to prevent accidental dislodgement.



Figure 4: A detailed view of the TV mounting bracket securely fastened to the stand's central column, also showing the integrated cable management clip.

4. **Cable Management:**

Utilize the integrated cable management strap and clips to route and conceal TV and accessory cables along the central column and down one of the legs. This helps maintain a tidy appearance and prevents tripping hazards.



Figure 5: An example of cable management, showing a cable neatly routed along one of the wooden tripod legs.

5. Soundbar Attachment (Optional):

If using a soundbar, attach the universal soundbar attachment to the TV mounting brackets as per its specific instructions. This allows the soundbar to move with the TV when adjusted.

5. OPERATING INSTRUCTIONS (ADJUSTMENTS)

The One For All WM7471 stand offers flexibility in TV positioning.

- **Height Adjustment:**

The TV can be adjusted vertically along the central column. Loosen the height adjustment mechanism (refer to the assembly guide for specific details), slide the TV to the desired height, and then securely tighten the mechanism. Always ensure the TV is level after adjustment.

- **360° Swivel:**

The entire TV and mounting assembly can be rotated 360 degrees around the central column. Gently rotate the TV to achieve the optimal viewing angle. Ensure no cables are snagged or strained during rotation.



Figure 6: Side profile of the stand with a TV, demonstrating the potential for swivel and height adjustments.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your TV stand.

- **Cleaning:** Use a soft, dry cloth to wipe down the stand. For stubborn marks, a slightly damp cloth with mild soap can be used, followed by immediate drying. Avoid abrasive cleaners or solvents.
- **Inspections:** Periodically check all screws, bolts, and connections for tightness. Re-tighten if necessary.
- **Cable Management:** Ensure cables remain neatly organized and are not pinched or strained.

7. TROUBLESHOOTING

If you encounter issues with your TV stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stand feels unstable.	Loose connections; uneven floor; TV too heavy/large.	Ensure all screws are tightened. Move stand to a level surface. Verify TV weight and size are within specifications.
TV is not level.	Mounting brackets unevenly attached; stand not level.	Re-adjust TV mounting brackets. Ensure stand is on a level surface.
Difficulty adjusting height or swivel.	Adjustment mechanism is too tight or obstructed.	Loosen adjustment mechanism slightly. Check for cable obstructions. Do not force movement.

If the problem persists, please contact One For All customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	WM7471
Brand	One For All
Compatible Screen Sizes	32 - 65 inches
VESA Compatibility	200x100mm to 400x400mm
Movement Type	360° Swivel, Height Adjustable
Material	Wood (Walnut), Metal (Gunmetal/Chrome)
Color	Walnut & Gunmetal
Included Components	Tripod stand, TV mounting hardware, cable management strap, universal soundbar attachment

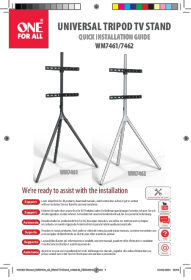

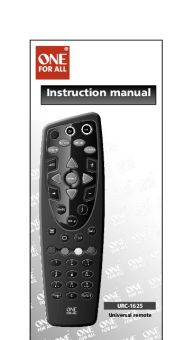



9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official One For All website. Specific warranty terms may vary by region and retailer.

Manufacturer: One For All

Country of Origin: China

Related Documents - WM7471

	<p>One For All Universal Tripod TV Stand WM7461/7462 Quick Installation Guide</p> <p>This document provides a quick installation guide for the One For All Universal Tripod TV Stand, models WM7461 and WM7462. It details product specifications, a list of included parts, step-by-step assembly instructions, safety disclaimers, and warranty information.</p>
	<p>One For All Falcon TV Stand Manual (WM7481/WM7482)</p> <p>Comprehensive manual for the One For All Falcon TV Stand, supporting 32-inch to 70-inch TVs. Available in Walnut/Gunmetal and Oak/Silver finishes, it features an integrated TV mount and includes an essential anti-tip kit for safety.</p>
	<p>ONE FOR ALL URC-1625 Universal Remote Instruction Manual</p> <p>Comprehensive instruction manual for the ONE FOR ALL URC-1625 Universal Remote Control. Learn how to set up your remote for TV, Satellite Receivers, Cable Converters, and other AV devices, troubleshoot common issues, and access advanced features.</p>
	<p>One For All DM2110/DM2120 Smart Monitor Arm: Quick Installation Guide</p> <p>Detailed quick installation guide for the One For All DM2110 and DM2120 smart monitor arms. Learn how to safely and easily mount your monitor, understand warranty terms, and find product specifications.</p>
	<p>One For All URC-9910 Universal Remote Control User Guide</p> <p>This user guide provides comprehensive instructions for the One For All IR/RF LCD 8-Device With Learning Universal Remote Control (URC-9910). Learn how to program, set up, and utilize its features to control multiple home entertainment devices, consolidate remotes, and enhance your home theater experience.</p>
	<p>One For All URC-8910 Universal Remote Control User's Guide</p> <p>This user's guide provides comprehensive instructions for the One For All URC-8910 A/V LCD 8-Device Universal Remote Control, covering setup, programming, features, and troubleshooting for your home entertainment system.</p>

