



[Manuals.plus](#) /

› [Air Filter Factory](#) /

› Air Filter Factory Nordyne 917763 A-Coil 16x19 HVAC Furnace Metal Mesh Filter Instruction Manual

Air Filter Factory 917763

Air Filter Factory Nordyne 917763 A-Coil 16x19 HVAC Furnace Metal Mesh Filter Instruction Manual

Model: 917763

INTRODUCTION

This manual provides instructions for the installation, maintenance, and general use of your Air Filter Factory replacement for Nordyne, Nortek 917763 A-Coil 16x19 HVAC Furnace Metal Mesh Filter. This 2-pack of 12-layer aluminum mesh filters is designed for maximum filtration and durability in your HVAC system.

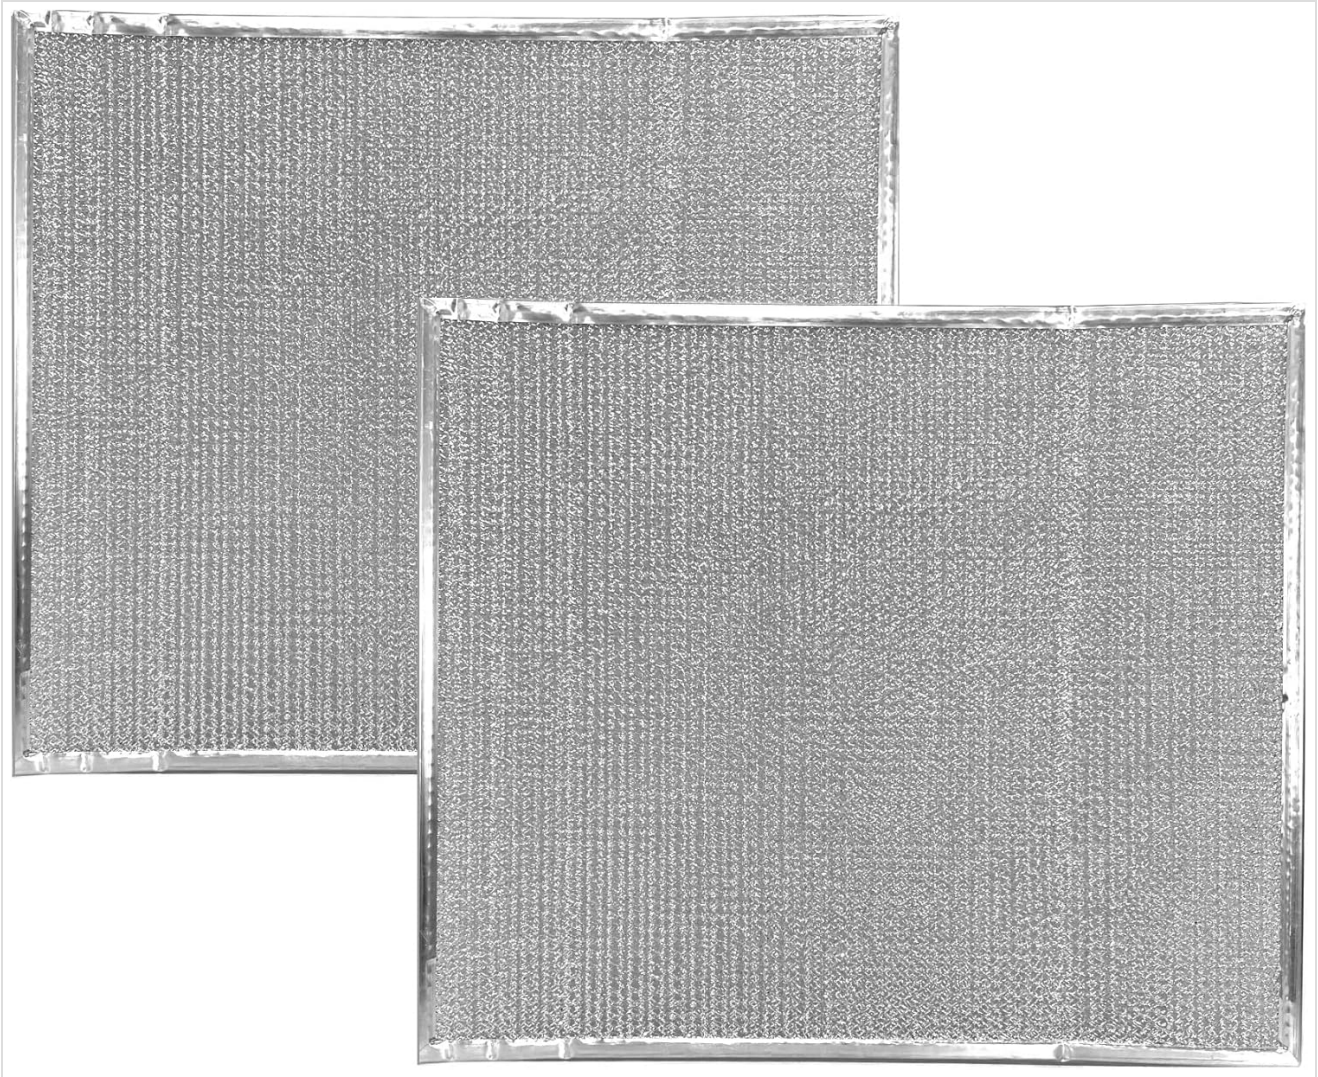
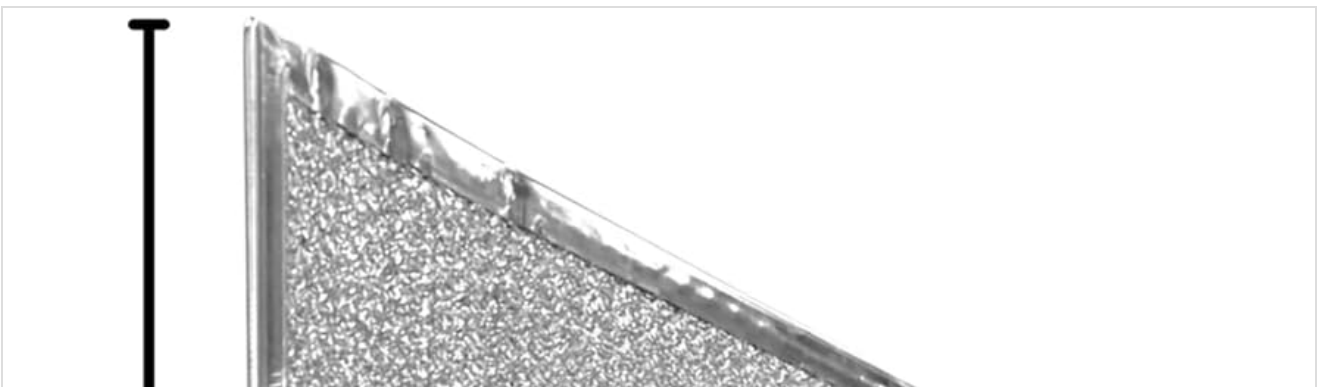


Image: Two Air Filter Factory 16x19 metal mesh HVAC filters, showing their metallic mesh construction.

1. SETUP AND INSTALLATION

The Air Filter Factory A-Coil filter is designed for easy installation. It comes pre-crimped to fit multiple size coils. Follow these steps for proper installation:

1. **Measure Your Existing Filter:** Before ordering, it is always best to measure your existing filter using a measuring tape or ruler to ensure compatibility. The dimensions of this filter are 16" x 19" x 3/32".
2. **Prepare for Installation:** Ensure your HVAC system is turned off before attempting to replace the filter.
3. **Remove Old Filter:** Carefully remove the old filter from your HVAC system.
4. **Insert New Filter:** Measure out the correct size, bend the filter at the crimp (if necessary for your specific coil size), and install it into the designated slot in your HVAC system. Ensure it sits flat and securely.



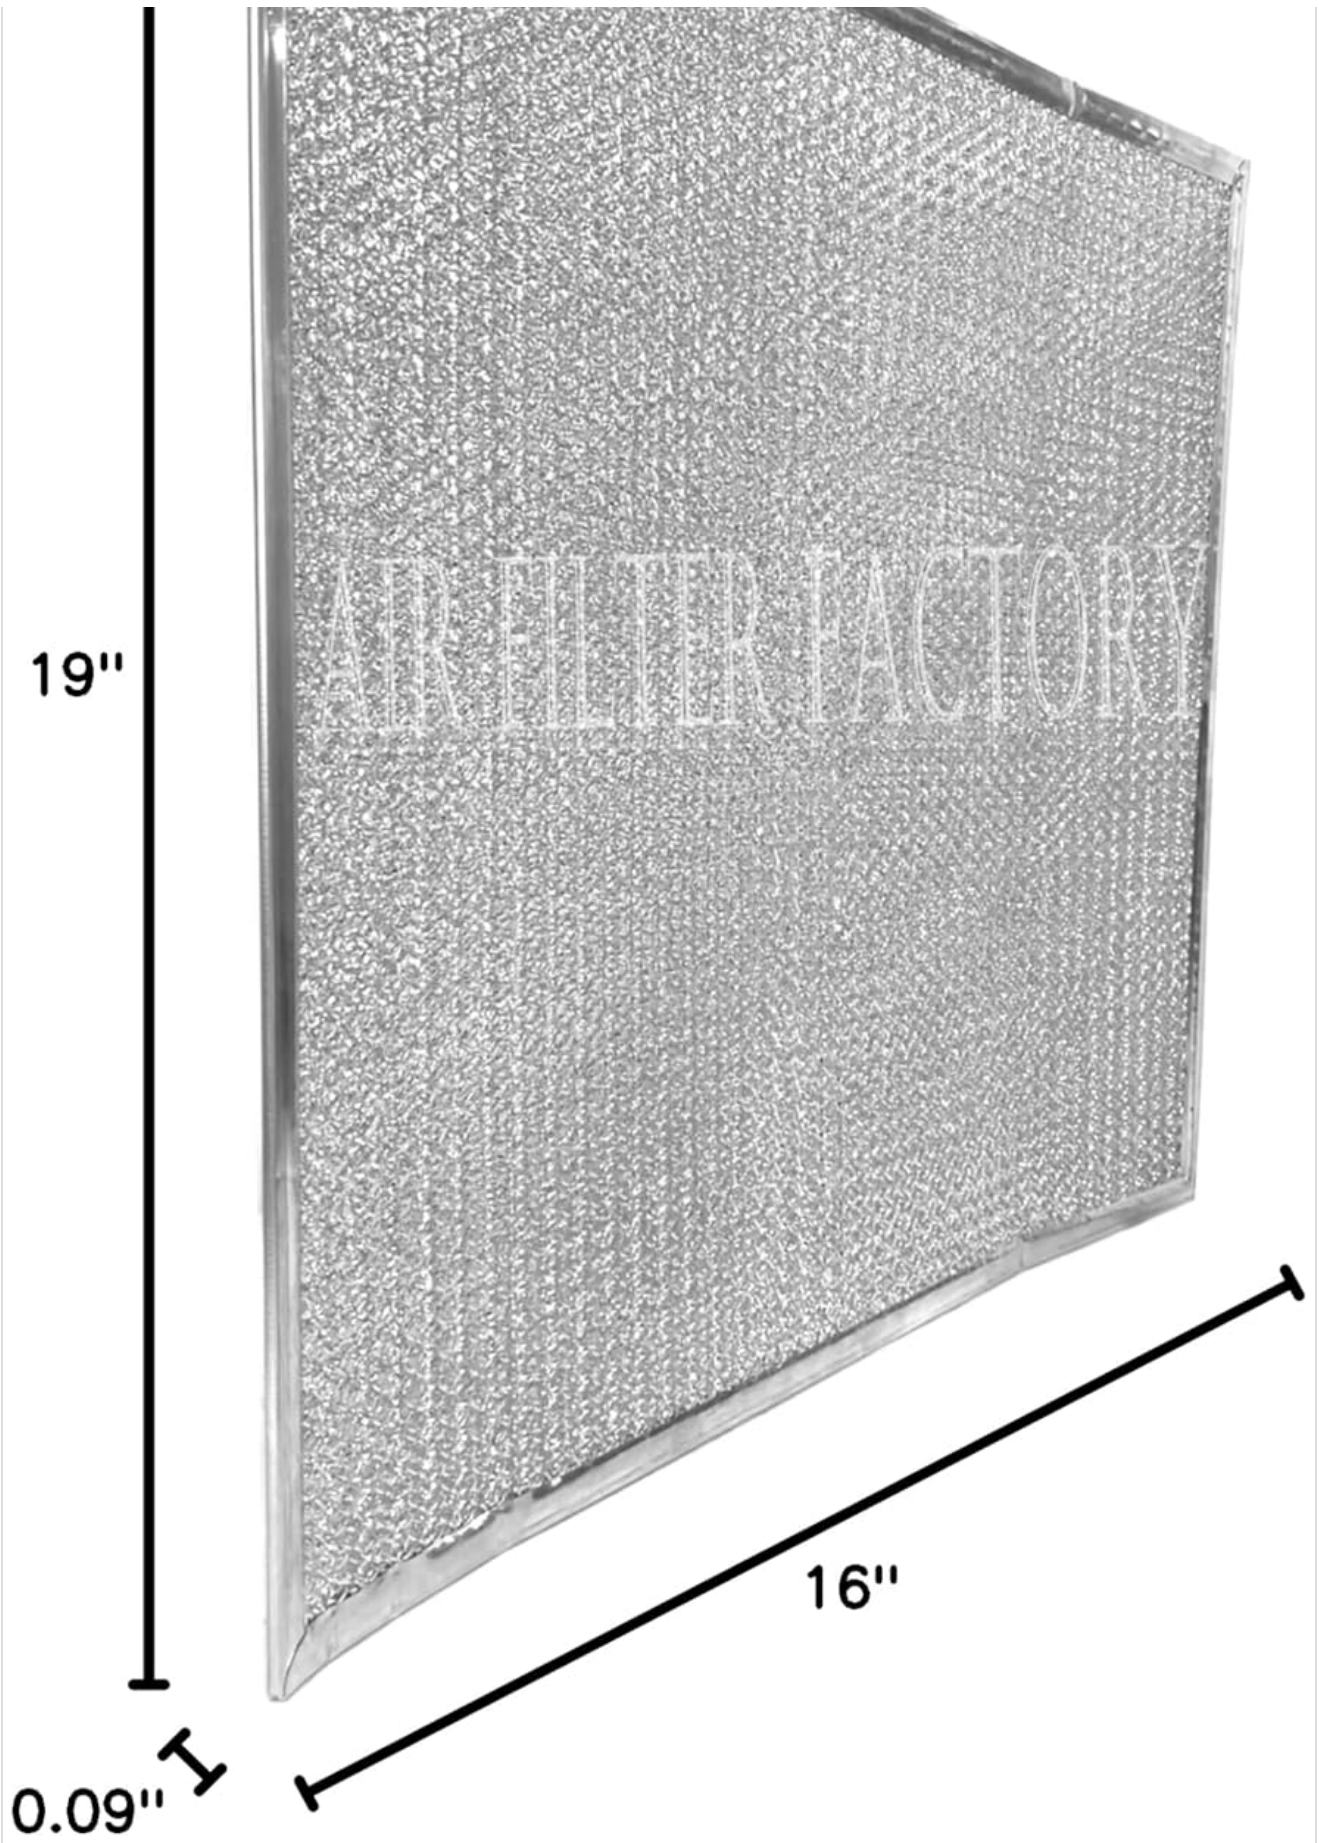


Image: A metal mesh filter showing its dimensions: 19 inches in length, 16 inches in width, and 0.09 inches (approximately 3/32 inch) in thickness.

Installation Video

Your browser does not support the video tag.

Video: A demonstration of replacing a Nordyne HVAC furnace filter with an aluminum screen pre-filter. This video shows the process of removing an old

filter and inserting a new one into the furnace unit.

2. OPERATING YOUR FILTER

Once installed, the metal mesh filter operates as part of your HVAC system, capturing larger debris and particulates to protect your unit from clogging and maintain optimal airflow. These washable pre/post filters are designed for long-lasting performance.



DO YOU *need* A NEW MESH FILTER?

MESH FILTERS CAN LAST A LONG TIME WHEN ROUTINELY CLEANED AND MAINTAINED.

TO CLEAN A METAL MESH FILTER:

- 1. FILL SINK OR BUCKET WITH HOT WATER.**
- 2. ADD LIQUID DISH DETERGENT.**
- 3. ALLOW FILTER TO SOAK FOR 20-30 MIN.**

Image: An illustration explaining the benefits of aluminum HVAC filters, highlighting their washable nature, ability to trap debris, protect units from clogging, and allow for longer unit life.


3. MAINTENANCE AND CLEANING

Mesh filters can last a long time when routinely cleaned and maintained. Regular cleaning ensures optimal performance and extends the life of your filter. It is recommended to clean your filter periodically, depending on usage and environmental conditions.

Cleaning Instructions:

- 1. Preparation:** Fill a sink or bucket with hot water.
- 2. Add Detergent:** Add a mild dish detergent to the hot water.
- 3. Soak:** Allow the filter to soak in the hot water and dish detergent for approximately 1 hour.
- 4. Scrub:** Using a light-bristled brush, gently scrub the filter's surface to remove accumulated debris.
- 5. Rinse:** Rinse the filter thoroughly with clean water until all soap and debris are removed.
- 6. Dry:** Allow the filter to air dry completely before re-installing it into your HVAC system.

why USE AN ALUMINUM HVAC FILTER?

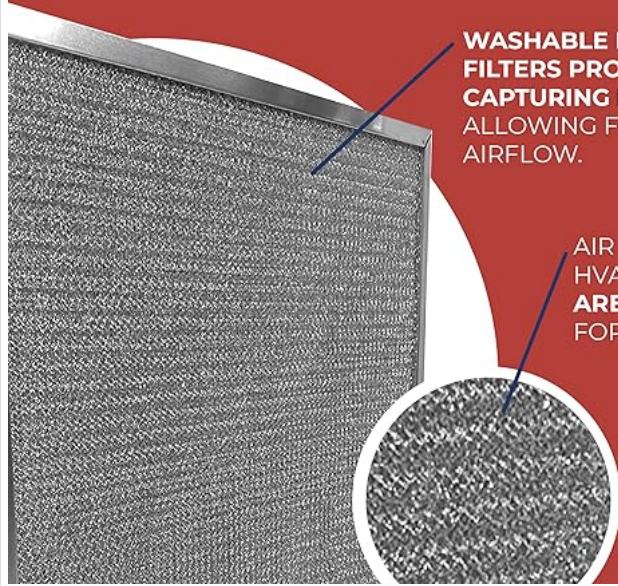

WASHABLE HVAC PRE/POST FILTERS PROTECT UNITS BY CAPTURING LARGER DEBRIS, ALLOWING FOR MAXIMUM AIRFLOW.

AIR FILTER FACTORY HVAC FILTERS ARE **ARE WASHABLE** FOR LONGER LIFE.



PRE/POST FILTERS...



LONG LASTING
+WASHABLE



TRAP DEBRIS
+PARTICULATES



PROTECTS
UNITS FROM
CLOGGING



ALLOWS FOR
LONGER UNIT LIFE

FOR CLEANER LIVING

Image: A visual guide demonstrating the cleaning process for a mesh filter, including soaking in hot water with dish detergent.

Cleaning Demonstration Video

Your browser does not support the video tag.

Video: A demonstration of replacing and cleaning A-Coil filters. This video shows the process of removing a dirty filter, cleaning it with water, and reinstalling it.

4. TROUBLESHOOTING

- **Reduced Airflow:** If you notice a decrease in airflow, the filter may be clogged. Refer to the "Maintenance and Cleaning" section to clean the filter.
- **Unusual Noises:** Ensure the filter is properly seated and not vibrating within the HVAC unit. Re-install if necessary.
- **Filter Damage:** Inspect the filter for any physical damage. A damaged filter should be replaced to ensure proper filtration and prevent debris from entering the system.

5. PRODUCT SPECIFICATIONS

Feature	Detail
Part Number	917763
Dimensions	16" x 19" x 3/32" (Actual: 19 x 16 x 0.09 inches)
Material	Aluminum (12-Layer Mesh)
Compatibility	Nordyne, Nortek A-Coil HVAC Furnace Systems

Quantity	2-Pack
Manufacturer	Air Filter Factory
Item Weight	8.8 ounces
UPC	842477118099

Measuring Your Filter Video

Your browser does not support the video tag.

Video: A guide on how to accurately measure your existing filter to ensure you purchase the correct replacement size. This video covers measuring length, width, and thickness.

6. WARRANTY AND SUPPORT

Air Filter Factory products are proudly made in the USA and designed for durability and long-term use through their washable and reusable nature. For specific warranty details or further support, please refer to the manufacturer's official website or contact their customer service directly. You can also visit the [Air Filter Factory Store on Amazon](#) for additional product information and assistance.

Why Choose Air Filter Factory? Video

Your browser does not support the video tag.

Video: An overview highlighting the benefits and quality of Air Filter Factory HVAC filters, emphasizing their design and manufacturing standards.