

## Moulinex FP247127

# Moulinex Easy Force Food Processor FP247127

## Instruction Manual

### 1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Moulinex Easy Force Food Processor, model FP247127. This appliance is designed to simplify various food preparation tasks with its powerful 800W motor, 2.4-liter food processor bowl, and 1.8-liter blender. It includes 6 attachments for over 25 different functions, such as slicing, shredding, grating, chopping, kneading, and blending.

### 2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- Always ensure the appliance is unplugged from the power outlet before assembly, disassembly, or cleaning.
- Keep hands and utensils away from moving blades or discs while processing food to prevent injury. Use the pusher provided.
- Blades are sharp. Handle with extreme care when assembling, disassembling, or cleaning.
- Do not immerse the motor base in water or any other liquid. Clean with a damp cloth only.
- Ensure the lid is securely locked in place before operating the appliance. The safety lock mechanism prevents operation if not correctly assembled.
- Do not operate the appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner. Contact customer service for assistance.
- This appliance is for household use only. Do not use outdoors.
- Supervise children closely when the appliance is in use.
- Do not fill the food processor bowl or blender jug beyond the maximum fill line to avoid overflow.

### 3. PRODUCT COMPONENTS

Your Moulinex Easy Force Food Processor comes with several parts designed for various functions. Familiarize yourself with each component before use.



Image 3.1: The Moulinex Easy Force Food Processor showing the motor base, food processor bowl, blender jug, and all 6 attachments.



Image 3.2: An exploded view illustrating the individual components of both the food processor and the blender, including the motor base, bowls, lids, and various blades/discs.

#### Main Units:

- **Motor Base:** The main unit containing the 800W motor, speed selector (2 speeds + Pulse), and power cord.
- **Food Processor Bowl (2.4 L capacity):** Transparent bowl for processing solid ingredients.
- **Food Processor Lid with Feeder Tube:** Secures the bowl and allows ingredients to be added during operation.
- **Pusher:** Used to guide ingredients into the feeder tube.
- **Blender Jug (1.8 L capacity):** Transparent jug for blending liquids and soft ingredients.

- **Blender Lid with Measuring Cap:** Secures the blender jug and allows small additions during blending.

### Attachments (6 total):

- **Chopping Blade:** For chopping herbs, nuts, meat, and vegetables.
- **Kneading Tool:** For mixing and kneading dough.
- **Emulsifying Disc:** For whipping cream, egg whites, and making mayonnaise.
- **Slicing Disc:** For uniform slicing of fruits and vegetables.
- **Shredding Disc:** For coarse shredding of vegetables and cheese.
- **Grating Disc:** For fine grating of vegetables and hard cheese.

## 4. ASSEMBLY AND SETUP

---

Follow these steps to correctly assemble your food processor or blender.

### 4.1 Assembling the Food Processor

1. Place the motor base on a stable, flat surface.
2. Fit the food processor bowl onto the motor base, aligning the bowl handle with the locking mechanism on the base. Turn clockwise until it locks into place.
3. Insert the desired attachment (e.g., chopping blade, kneading tool, or disc holder with a disc) onto the central shaft inside the bowl. Ensure it sits firmly.
4. Place the food processor lid onto the bowl, aligning the lid's tab with the bowl's handle. Turn clockwise until it locks securely. The appliance will not operate if the lid is not correctly locked.
5. Insert the pusher into the feeder tube of the lid.



Image 4.1: The food processor unit fully assembled and ready for use.

## 4.2 Assembling the Blender

1. Place the motor base on a stable, flat surface.
2. Ensure the blender blade unit is securely attached to the bottom of the blender jug.
3. Place the blender jug onto the motor base, aligning the jug's base with the locking mechanism on the motor base. Turn clockwise until it locks into place.
4. Place the blender lid onto the jug and turn clockwise to secure it. Insert the measuring cap into the lid opening.



Image 4.2: The blender unit fully assembled on the motor base.

## 5. OPERATING INSTRUCTIONS

Your Moulinex Easy Force Food Processor features two speed settings and a pulse function for precise control over various tasks.

### 5.1 General Operation

1. Ensure the appliance is correctly assembled and locked.
2. Plug the power cord into a suitable electrical outlet.
3. Turn the speed selector dial to the desired speed (1 or 2). For short bursts of power, turn the dial to the 'Pulse'

(P) setting and hold, releasing to stop.

4. After use, turn the dial to '0' (off) and unplug the appliance.

## 5.2 Using the Food Processor

The food processor is ideal for preparing a wide range of ingredients.

- **Chopping:** Use the chopping blade. Add ingredients to the bowl. Use speed 1 or Pulse for controlled chopping.
- **Kneading:** Use the kneading tool. Add flour and liquids. Use speed 1 for mixing and kneading dough.
- **Emulsifying:** Use the emulsifying disc. Add liquids like cream or egg whites. Use speed 2 for whipping.
- **Slicing/Shredding/Grating:** Insert the appropriate disc. Add ingredients through the feeder tube using the pusher. Use speed 2 for consistent results.

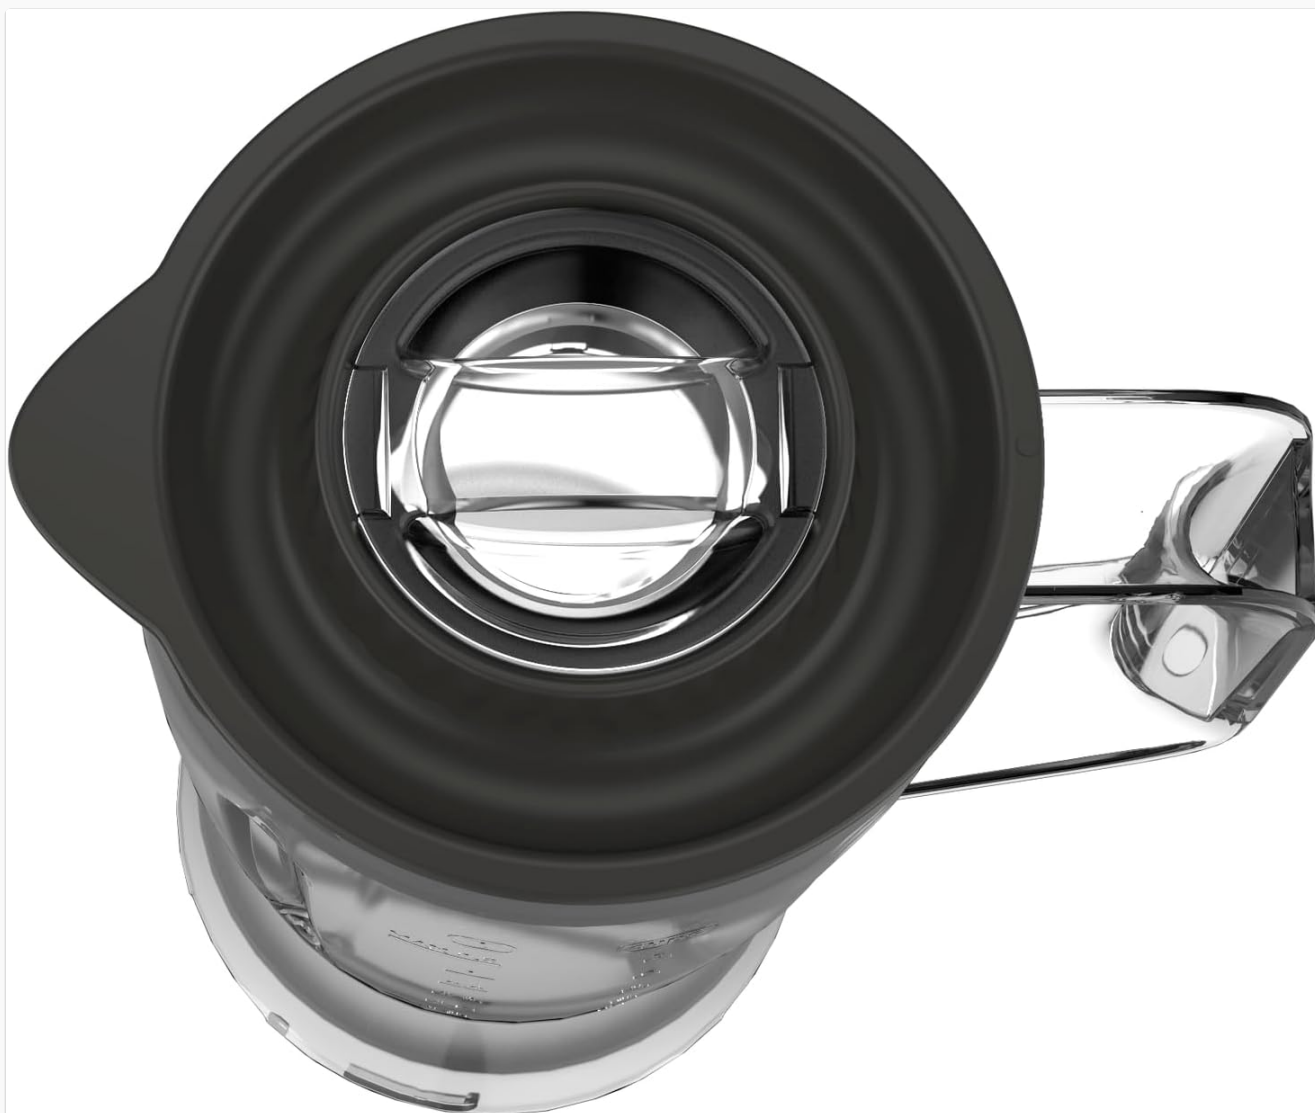


Image 5.1: The food processor actively slicing cucumbers, demonstrating its functionality.

## 5.3 Using the Blender

The blender is perfect for smoothies, soups, and sauces.

- Add liquids and soft ingredients to the blender jug. Do not exceed the MAX fill line.
- Select speed 1 or 2 depending on the desired consistency. Use Pulse for short bursts to achieve optimal blending.



Image 5.2: The blender in use, processing red berries into a smooth mixture.

## 6. CARE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your appliance.

- Always unplug the appliance before cleaning.
- **Motor Base:** Wipe the motor base with a damp cloth. Do not immerse in water.

- **Bowls, Lids, and Attachments:** All removable parts (food processor bowl, blender jug, lids, chopping blade, kneading tool, emulsifying disc, slicing/shredding/grating discs) are dishwasher-safe. Alternatively, wash them in warm, soapy water, rinse thoroughly, and dry.
- Handle blades and sharp discs with extreme caution during cleaning.
- For stubborn food residue, soak parts in warm, soapy water before cleaning.
- Store all attachments within the food processor bowl for compact storage (excluding the blender jug).

## 7. TROUBLESHOOTING

If you encounter any issues with your appliance, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; Bowl/lid not correctly locked; Overload protection activated.	Check power connection; Ensure bowl and lid are securely locked; Unplug, wait 15 minutes, then restart.
Poor processing results (e.g., uneven chopping).	Too much food; Ingredients too large; Incorrect speed.	Process smaller batches; Cut ingredients into smaller pieces; Use Pulse function for better control.
Leakage from bowl/jug.	Lid not properly sealed; Overfilled; Blade unit not correctly assembled (blender).	Ensure lid is securely locked; Do not exceed MAX fill line; Reassemble blender blade unit correctly.
Unusual noise or odor.	Overload; Foreign object; Motor issue.	Turn off immediately, unplug, and check for obstructions. If problem persists, contact customer service.

If the problem persists after attempting these solutions, please contact customer support.

## 8. SPECIFICATIONS

- **Brand:** Moulinex
- **Model Number:** FP247127
- **Power:** 800 Watts
- **Food Processor Bowl Capacity:** 2.4 Liters
- **Blender Jug Capacity:** 1.8 Liters
- **Number of Speeds:** 2 + Pulse function
- **Attachments:** 6 (Chopping Blade, Kneading Tool, Emulsifying Disc, Slicing Disc, Shredding Disc, Grating Disc)
- **Special Features:** Safety Lock
- **Product Dimensions:** 20.5 x 20.5 x 36.5 cm
- **Item Weight:** 4.1 Kilograms
- **Material:** Plastic

## 9. WARRANTY AND SUPPORT

---

### 9.1 Warranty Information

Your Moulinex Easy Force Food Processor FP247127 comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage resulting from misuse, neglect, accidental damage, or unauthorized repairs.

### 9.2 Customer Support

For technical assistance, spare parts, or warranty claims, please contact your retailer or the official Moulinex customer service in your region. Contact details can usually be found on the Moulinex website or on your product packaging.