

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Omega](#) /

› [Omega Seamaster Aqua Terra Automatic Ladies Watch 220.10.34.20.02.002 User Manual](#)

Omega 220.10.34.20.02.002

Omega Seamaster Aqua Terra Automatic Ladies Watch 220.10.34.20.02.002 User Manual

Detailed instructions for the setup, operation, and maintenance of your Omega timepiece.

1. PRODUCT OVERVIEW

The Omega Seamaster Aqua Terra Automatic Ladies Watch, model 220.10.34.20.02.002, is a precision automatic timepiece featuring a waved opaline silvery dial. It is housed in a silver-tone stainless steel case with a matching stainless steel band, secured by a fold-over clasp with push-button release. This watch is designed for reliability and elegance, offering 150 meters (500 feet) of water resistance.



Image 1: Front view of the Omega Seamaster Aqua Terra Automatic Ladies Watch. This image displays the watch's dial, case, and bracelet.

2. SETUP

2.1 Initial Inspection

- Carefully remove the watch from its packaging.
- Inspect the watch for any visible damage or imperfections.
- Ensure all protective films are removed from the crystal, case back, and bracelet.

2.2 Setting the Time

Your Omega Seamaster Aqua Terra is an automatic watch, meaning it is powered by the movement of your wrist. If the watch has stopped, it will need to be wound and the time set.

1. **Unscrew the Crown:** Gently unscrew the crown counter-clockwise until it springs out to position 1.
2. **Manual Winding:** In position 1, turn the crown clockwise approximately 30-40 times to manually wind the movement and provide an initial power reserve.

- 3. Set the Time:** Pull the crown out further to position 2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
- 4. Synchronize:** Once the time is set, push the crown back into position 1 and screw it down clockwise firmly against the case to ensure water resistance.

3. OPERATING YOUR WATCH

3.1 Automatic Movement

This watch is equipped with an automatic mechanical movement. It is powered by the natural motion of your wrist. When worn regularly, the watch will remain wound. If the watch is not worn for an extended period (typically 40-60 hours depending on the specific movement's power reserve), it will stop and require manual winding as described in the "Setting the Time" section.

3.2 Water Resistance

The Omega Seamaster Aqua Terra 220.10.34.20.02.002 is water resistant to 150 meters (500 feet). This makes it suitable for swimming, showering, and snorkeling. However, it is crucial to ensure the crown is fully screwed down before any contact with water to maintain its water resistance. Avoid operating the crown or pushers (if present) while the watch is submerged in water.

4. MAINTENANCE

4.1 Cleaning Your Watch

To maintain the appearance of your watch, clean it regularly with a soft, damp cloth. For the stainless steel case and bracelet, a mild soap solution can be used, followed by rinsing with fresh water and drying thoroughly with a soft, lint-free cloth. Ensure the crown is screwed down before cleaning with water.

4.2 Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. The original watch box is ideal for storage.

4.3 Regular Servicing

Like any precision instrument, your Omega watch requires periodic servicing to ensure optimal performance and longevity. It is recommended to have your watch serviced by an authorized Omega service center every 5-8 years. This service typically includes cleaning, lubrication, and adjustment of the movement, as well as replacement of seals to maintain water resistance.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your automatic watch.

Problem	Possible Cause	Solution
Watch has stopped.	Insufficient power reserve (not worn enough or not manually wound).	Manually wind the watch by turning the crown clockwise 30-40 times in position 1. Wear the watch regularly.

Problem	Possible Cause	Solution
Watch is running fast or slow.	Exposure to strong magnetic fields; needs regulation; due for service.	Keep watch away from magnets. If problem persists, contact an authorized Omega service center for demagnetization or regulation.
Moisture under the crystal.	Crown not fully screwed down; seals compromised.	Immediately take the watch to an authorized Omega service center to prevent further damage. Do not attempt to dry it yourself.

6. SPECIFICATIONS

Model Number	220.10.34.20.02.002
Movement	Automatic
Case Material	Stainless Steel
Case Size	34 mm
Dial Color	Waved Opaline Silvery
Band Material	Stainless Steel
Water Resistance	150 meters / 500 feet
Clasp Type	Fold Over with Push Button Release
Weight	2.96 Pounds

7. WARRANTY INFORMATION

Omega watches are covered by a limited international warranty against manufacturing defects. The duration and terms of the warranty may vary by region and purchase date. Please refer to the official Omega warranty card provided with your watch at the time of purchase for specific details. Keep your warranty card and proof of purchase in a safe place.

Note: The warranty does not cover normal wear and tear, damage caused by improper handling, accidents, or unauthorized repairs.

8. CUSTOMER SUPPORT

For further assistance, service, or inquiries regarding your Omega Seamaster Aqua Terra watch, please contact an authorized Omega boutique or service center. You can find a list of official service locations and contact information on the official Omega website:

www.omegawatches.com/customer-service

