### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Homtime /
- > Homtime C1 Mini Snooze Alarm Clock Digital Charger User Manual

# **Homtime C1 Mini**

# Homtime C1 Mini Snooze Alarm Clock Digital Charger User Manual

Model: C1 Mini

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Homtime C1 Mini Snooze Alarm Clock. Please read this manual thoroughly before using the product to ensure proper function and longevity.



Image: The Homtime C1 Mini Alarm Clock, light blue in color, is shown on a decorative tray next to a small potted plant.

The digital display shows the time 20:08.

# **PRODUCT OVERVIEW**

The Homtime C1 Mini is a compact digital alarm clock designed for convenience and functionality. It features a clear LCD display, dual USB charging ports for mobile devices, and a snooze function. Its design is suitable for various environments including bedrooms, offices, and for travel.

#### **Key Features:**

- · Digital Time Display
- Snooze Function
- · Dual USB Charging Ports
- Dimmable LCD Screen
- · Compact and Portable Design

# **Package Contents:**

- · Homtime C1 Mini Alarm Clock
- · Power Adapter
- · User Manual (this document)

## SETUP

- 1. **Power Connection:** Connect the provided power adapter to the DC input port on the back of the alarm clock. Plug the adapter into a standard wall outlet. The display will illuminate.
- 2. **Battery Installation (Optional for backup):** For time and alarm settings backup during power outages, install 3 AAA batteries (not included) into the battery compartment located on the bottom of the unit. Ensure correct polarity.



Image: A split image showing the bottom of the Homtime C1 Mini. The left side displays the rear with two USB charging ports and a power input. The right side shows the open battery compartment, designed for AAA batteries.

#### **OPERATING INSTRUCTIONS**

## 1. Setting the Time

- 1. Press and hold the "Time Set" button (usually located on the top or back) until the hour digits begin to flash.
- 2. Use the "+" or "-" buttons to adjust the hour. Pay attention to AM/PM indicators if present.
- 3. Press the "Time Set" button again to confirm the hour and move to minute adjustment.
- 4. Use the "+" or "-" buttons to adjust the minutes.
- 5. Press the "Time Set" button one last time to save the time setting.

# 2. Setting the Alarm

- 1. Press and hold the "Alarm Set" button until the alarm hour digits begin to flash.
- 2. Use the "+" or "-" buttons to adjust the alarm hour.
- 3. Press the "Alarm Set" button again to confirm the alarm hour and move to alarm minute adjustment.
- 4. Use the "+" or "-" buttons to adjust the alarm minutes.
- 5. Press the "Alarm Set" button one last time to save the alarm setting.
- 6. To activate/deactivate the alarm, press the "Alarm On/Off" button (or a dedicated alarm icon button). An alarm icon will appear on the display when active.

#### 3. Snooze Function

When the alarm sounds, press the large button on the top of the clock (often labeled'**Snooze'** or simply the main control button). The alarm will pause for approximately 9 minutes and then sound again. To turn off the alarm completely, press any other button or let it sound for its full duration.

## 4. Display Brightness

The LCD screen has multiple brightness levels. Press the "Dimmer" button (or a dedicated light icon button) repeatedly to cycle through the available brightness settings (e.g., High, Medium, Low, Off).

# **5. USB Charging Ports**

The Homtime C1 Mini features dual USB charging ports on the back of the unit. These ports are designed to charge compatible mobile devices such as smartphones and tablets. Simply connect your device's USB charging cable to one of the ports. Charging will begin automatically.



Image: The rear view of the Homtime C1 Mini alarm clock, showing two white USB charging cables plugged into its dual USB ports. This illustrates the charging functionality.

# **M**AINTENANCE

- Cleaning: Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the surface.
- Power: Ensure the power adapter is securely connected. Disconnect from power during extended periods of non-use.
- **Environment:** Avoid placing the clock in direct sunlight, near heat sources, or in excessively humid environments.

#### **TROUBLESHOOTING**

| Problem                    | Possible Cause                          | Solution  |
|----------------------------|---|---|
| Clock display is blank.    | No power or power outage.               | Check power adapter connection. If using battery backup, ensure batteries are installed correctly and are not depleted. |
| Alarm does not sound.      | Alarm not activated or set incorrectly. | Ensure the alarm is turned ON (alarm icon visible). Verify the alarm time is set correctly.                             |
| USB charging not working.  | Cable issue or device incompatibility.  | Try a different USB cable. Ensure the device is compatible with USB charging. Check if the clock is powered on.         |
| Display is too bright/dim. | Brightness setting needs adjustment.    | Press the "Dimmer" button to cycle through brightness levels.   |

# **S**PECIFICATIONS

Brand: HomtimeModel: C1 Mini

• Display Type: Digital LCD

• Power Source: Electrical (AC Adapter)

• Battery Backup: 3 x AAA batteries (not included)

• Special Features: Alarm, Dual USB Charging Ports, Dimmable Screen

• Frame Material: Acrylonitrile Butadiene Styrene, Plastic

Mounting Type: TabletopCountry of Origin: China

# WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Homtime website. Keep your purchase receipt for warranty claims. For further assistance, you may contact Homtime customer service through their official channels. Please have your model number (C1 Mini) and purchase details ready.

© 2023 Homtime. All rights reserved.



#### Homtime C1 Digital Alarm Clock with Dual USB Charger - User Manual

User manual and specifications for the Homtime C1 Digital Alarm Clock, featuring a dimmable LCD display, dual USB charger, thermometer, and melody alarm. Learn how to set time, alarms, and use its functions.



### Homtime C1 Pro Bluetooth Alarm Clock Speaker with Dual USB Charger User Manual

User manual for the Homtime C1 Pro, a Bluetooth alarm clock speaker with dual USB charger, detailing features, functions, setup, and operation. Includes instructions for time setting, alarm configuration, Bluetooth connectivity, and charging.



#### HC1pro Bluetooth Alarm Clock Speaker with Dual USB Charger - User Manual

Detailed user manual for the HC1pro Bluetooth Alarm Clock Speaker by Homtime, featuring dual USB charging, thermometer, and customizable alarm functions. Includes setup, operation, and FCC compliance information.



#### Homtime S1-AC Clock Radio with Bluetooth Speaker and Power Outlets User Manual

Comprehensive user manual for the Homtime S1-AC Clock Radio, featuring Bluetooth speaker, power outlets, FM radio, alarm clock, and USB charging. Learn how to set up and use all features.



Homtime D8-PD Bluetooth Speaker with Alarm Clock and Wireless Charging Function User Manual

Comprehensive user guide for the Homtime D8-PD, a Bluetooth speaker featuring an alarm clock and wireless charging. This manual provides detailed instructions on setup, operation, safety precautions, specifications, and troubleshooting.



Homtime MX Wooden Bluetooth Wireless Charging Speaker with Clock Function User Manual

Comprehensive user manual for the Homtime MX, a wooden Bluetooth wireless charging speaker with clock functionality. Learn about safety, features, specifications, operation, and troubleshooting.