

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BLACK+DECKER](#) /

› [BLACK+DECKER Crisp 'N Bake Air Fry Toaster Oven TO3215SSD Instruction Manual](#)

## BLACK+DECKER TO3215SSD

# BLACK+DECKER Crisp 'N Bake Air Fry Toaster Oven Instruction Manual

Model: TO3215SSD

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to OFF, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- An oversized food or metal utensils must not be inserted in a toaster-oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster-oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and other non-food items.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when

not in use.

- Do not place cooking utensils or baking dishes on the glass door.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Do not attempt to dislodge food when toaster-oven is plugged in.
- Do not operate without the crumb tray in place.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## PRODUCT OVERVIEW

The BLACK+DECKER Crisp 'N Bake Air Fry Toaster Oven (Model TO3215SSD) is a versatile kitchen appliance designed for various cooking functions, including air frying, baking, broiling, toasting, and keeping food warm. It features a spacious interior capable of accommodating up to six slices of bread or a 12-inch pizza.



**Figure 1:** Front view of the BLACK+DECKER Crisp 'N Bake Air Fry Toaster Oven, showcasing its stainless steel finish and control knobs on the right side.



Figure 2: Angled view of the toaster oven, highlighting its compact design suitable for countertops.



Figure 3: The toaster oven with its door open, revealing the included air fry basket, wire rack, and bake pan, demonstrating the accessory setup.

### Key Features:

- **Air Fry Technology:** Utilizes high-intensity hot air for crispy results with minimal oil.
- **Dedicated Toast Timer:** Ensures consistent toast shade selection.
- **Five Cooking Functions:** Bake, Broil, Toast, Keep Warm, and Air Fry.

- **Large Capacity:** Fits 6 slices of bread or a 12-inch pizza.
- **Convection Technology:** Circulates air for fast and even cooking.
- **Included Accessories:** Air fry basket, bake/broil pan, and rack.
- **External Crumb Tray:** For easy cleaning.

## SETUP AND FIRST USE

---

### Unpacking:

1. Remove all packaging materials, stickers, and plastic bands from the appliance.
2. Remove all included accessories from the oven cavity.
3. Wash all removable parts as instructed in the "Care and Cleaning" section.
4. Wipe the exterior of the appliance with a damp cloth.
5. Ensure the crumb tray is properly inserted at the bottom of the oven.

### Placement:

Place the toaster oven on a stable, level, heat-resistant surface, ensuring at least 4 inches of space on all sides for proper ventilation. Do not place it directly against a wall or under cabinets.

### Before First Use:

It is recommended to run the oven empty for approximately 10-15 minutes on the "Bake" function at 400°F (205°C) to burn off any manufacturing residues. This may produce a slight odor or smoke, which is normal. Ensure the area is well-ventilated during this process.

## OPERATING INSTRUCTIONS

---

The toaster oven features three control knobs for temperature, function, and timer settings.



## 5 Cooking Functions

**Figure 4:** Close-up of the control panel, illustrating the temperature, function, and timer dials. The function dial clearly shows options for Toast, Broil, Air Fry, Bake, and Keep Warm.

### Control Knobs:

- **Top Knob (Temperature/Function):** Selects cooking function (Toast, Broil, Air Fry, Bake, Keep Warm) and sets temperature for Bake/Broil/Air Fry.
- **Middle Knob (Timer):** Sets cooking time up to 60 minutes or "Stay On" for continuous operation.
- **Bottom Knob (Toast Shade):** Specifically for toast function, adjusts desired toast darkness.

### Cooking Functions:

#### 1. Air Fry:

This function uses high-intensity hot air to crisp foods. Ideal for French fries, chicken wings, and other fried snacks.

1. Place food in the air fry basket, then place the basket on the wire rack.
2. Insert the rack into the middle or upper rack position.
3. Turn the top knob to "Air Fry" and set the desired temperature.
4. Turn the middle knob to the desired cooking time.
5. The oven will preheat and then begin cooking.



## Air Fry Technology

**Figure 5:** The air fry basket inside the oven, filled with French fries, demonstrating the Air Fry Technology in action.

### 2. Bake:

Use for baking cakes, cookies, casseroles, and other items requiring even heat distribution.

1. Place food on the bake pan or in an oven-safe dish on the wire rack.
2. Insert the rack into the lower or middle rack position.
3. Turn the top knob to "Bake" and set the desired temperature.
4. Turn the middle knob to the desired cooking time.



## Convection Technology

**Figure 6:** A cake baking inside the toaster oven, illustrating the convection technology for even heat distribution.

### 3. Broil:

Ideal for browning the top of dishes, melting cheese, or cooking thin cuts of meat.

1. Place food on the broil rack or bake pan.
2. Insert the rack into the upper rack position for best results.
3. Turn the top knob to "Broil". Temperature is fixed for broiling.
4. Turn the middle knob to the desired cooking time.

### 4. Toast:

For toasting bread, bagels, and frozen waffles.

1. Place bread slices directly on the wire rack.
2. Insert the rack into the middle rack position.
3. Turn the top knob to "Toast".
4. Turn the bottom knob to the desired toast shade (light to dark).
5. The oven will automatically shut off when toasting is complete.

### 5. Keep Warm:

Maintains food at a serving temperature without further cooking.

1. Place cooked food in an oven-safe dish on the wire rack.
2. Insert the rack into any rack position.
3. Turn the top knob to "Keep Warm".
4. Turn the middle knob to "Stay On" or the desired time.



## Large Capacity

Figure 7: A 12-inch pizza being placed into the toaster oven, demonstrating its large capacity.

## CARE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your toaster oven.

1. **Always unplug the appliance** and allow it to cool completely before cleaning.
2. **Crumb Tray:** Slide out the external crumb tray and discard crumbs. Wash the tray in warm, soapy water, rinse, and dry thoroughly. Reinsert the tray before next use.
3. **Wire Rack, Bake Pan, Air Fry Basket:** These accessories can be washed in warm, soapy water. For stubborn food residue, soak them before cleaning. Rinse and dry completely.
4. **Interior:** Wipe the interior surfaces with a damp cloth and mild liquid soap. Do not use abrasive cleaners or metal scouring pads, as they can damage the non-stick coating and heating elements.

5. **Exterior:** Wipe the exterior with a damp cloth or sponge. Dry thoroughly.
6. **Glass Door:** Clean the glass door with a soft cloth and a glass cleaner or mild soapy water. Avoid harsh abrasives.
7. **Do not immerse the appliance in water or any other liquid.**

## TROUBLESHOOTING

If you encounter issues with your BLACK+DECKER Crisp 'N Bake Air Fry Toaster Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the appliance is securely plugged into a working outlet. Turn the timer knob past 20 minutes and then back to the desired time to activate.
Food is not cooking evenly.	Incorrect rack position; overcrowding; uneven food placement.	Refer to the operating instructions for recommended rack positions for each function. Avoid overcrowding the oven; cook in smaller batches if necessary. Arrange food in a single layer for air frying.
Excessive smoke during cooking.	Food residue or grease buildup; fatty foods.	Clean the interior and crumb tray regularly to remove grease and food particles. For fatty foods, use the bake pan under the air fry basket to catch drips.
Toast is too light or too dark.	Toast shade setting incorrect.	Adjust the bottom toast shade knob to a lighter or darker setting as desired for future use.
Oven temperature seems inaccurate.	Preheating not completed; external factors.	Allow the oven to fully preheat before placing food inside. Ensure proper ventilation around the appliance. If issues persist, contact customer support.

## SPECIFICATIONS

Attribute	Detail
Brand	BLACK+DECKER
Model Number	TO3215SSD
Colour	Stainless Steel
Product Dimensions	45.72 x 15.51 x 28.45 cm (18 x 6.1 x 11.2 inches)
Item Weight	6.8 kg (15 Pounds)
Material	Stainless Steel, Glass

Attribute	Detail
Special Features	Air Fry Technology
Control Type	Knob And Push Button
Door Style	Dropdown Door
Capacity	6 Slices of Bread / 12-inch Pizza
Cooking Functions	Bake, Broil, Toast, Keep Warm, Air Fry
Timer	60-minute timer with Stay On function



**Figure 8:** Product dimensions in inches (18 in. width, 11.2 in. height).



Figure 9: Product dimensions in centimeters (45.72 cm width, 15.51 cm depth, 28.45 cm height).

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official BLACK+DECKER website or the warranty card included with your product. Keep your purchase receipt for warranty claims.

**Online Support:** Visit the official BLACK+DECKER website for FAQs, product registration, and contact information.

**Customer Service:** Contact BLACK+DECKER customer service for assistance with product operation, troubleshooting, or warranty service.